

HOW TO CHANGE THE LSQ-40L FROM LBS. TO KG

- 1). Remove the dip switch cover on the side of the scale.**
- 2). Flip the 2 dip switches to the on position.**
- 3). Turn on the scale. Enter the code 70614 and press PRINT.**
- 4). P1 will appear. Press TARE until it says P3.**
- 5). Press 1 then press PRINT.**
- 6). Enter 20 then press PRINT (P4).**
- 7). Press TARE until it says P8.**
- 8). With no weight on the platter, press PRINT.**
- 9). After the countdown, place 20kg on the platter. Press PRINT.**
- 10). Remove the weight. Press ESC. Turn off scale.**
- 11). Flip the dip switches back to the off position.**
- 12). Turn on the scale. Test using weights.**