



Round Digital Portion Control Scales

Model: 177GPCR10

10/2020

Please read the manual thoroughly prior to equipment set-up, operation and maintenance.

Specifications

	177GPCR10
Capacity	5000gx1g / 176.4 x 0.1oz
Units	g, oz, ozt, dwt, ct, gn
Tare Range	100%FS
Auto Off (default)	3 minutes
Power Source	(2) AAA batteries

Operations

Weighing Items

1. Place the scales on a flat surface.
2. Press the ON/OFF key, the screen on the scale should display 0.0 after a few seconds.
3. Place item that will be weighed on the plate. The weight will appear on the screen.

Tare Function

1. Leave the container on the plate.
2. Press Tare button to reset weight back to 0.
3. Put the object on the plate for weighing.

Power Off

When the scale is on, press the ON/OFF key to power off the scale.

Change Unit

Press the UNIT key to choose between “g, oz, ozt, dwt, ct, gn”

Counting

1. Put the scale on a levelled surface and power it on.
2. Sampling: prepare a sample quantity of 25, 50, 75 or 100pcs of the item you want to count. Put the items on the scale platform, press and hold the PCS key until the scale shows “25”, “50”, “75” or “100”, press the UNIT key to switch the figures to match the quantity of the items on the platform.
3. Press the PCS key again and the display will show “pcs” in the lower left corner. Sampling is completed.
4. Put more same items you want to count on the scale and the display will show the total quantity of these items.

Overload Indicator

When the scale is overloaded , the following will appear on the screen. “O_Ld”

Low Battery Indicator

When the battery voltage is less than 2.5V, the scale will display “Lo” and power off.

Calibration

1. When the scale is on and in normal weighing mode, press and hold the UNIT key until the display shows “CAL”.
2. Press the UNIT key again and the scale will display the required calibration weight.
3. Place the weight on the center of the platform, after a few seconds when the inner code gets stable, the scale will display “PASS” and return to the normal weighing mode.
4. Remove the weights from the scale, now calibration has been finished. To exit the calibration mode, press ON/OFF key to power off the scale.

Care Instructions

- Place your scale on a hard, flat surface, to ensure the greatest accuracy and repeatability.
- Clean your scale with a damp cloth but do not allow water to get inside the scales.
- Do not use chemical abrasive cleaners to clean the scales.
- Do not allow your scale to become saturated with water as this can damage the electronics.
- Do not store the scale in an upright position when not in use.
- Remove batteries if the scale is not going to be used for an extended period of time.
- Handle and store your scale with care as it is a precision instrument.

Warranty Information

1 Year Limited Replacement Warranty - Valid Only in the Continental United States

Unless otherwise stated, Galaxy Equipment warrants to the original purchaser of new, qualified Galaxy Equipment units (and all parts thereof), that such equipment will be free from defects in material and workmanship for a period of 1 year from the date of delivery.

If a qualified product is found to be defective during this period, Galaxy Equipment will repair the defective unit, replace any defective parts, or replace the defective unit.

What This Warranty Does Not Cover:

Galaxy Equipment will not warrant coverage for component failure or other damages that arise under the following conditions:

- Failure to install and/or use the unit within proper operating conditions specified by Galaxy Equipment
- Failure to properly maintain the unit. This includes, but is not limited to, basic preventative maintenance like cleaning the condenser coil.
- Products sold or used outside of the Continental United States.
- Any damage that occurs as a result of negligence or improper handling.
- Overloading or improper loading of the unit in a manner that prevents proper airflow.
- Void in mobile settings.

Additionally, no claims can be made against this warranty for spoilage of products, loss of sales or profits, or any other consequential damages.

Normal wear type parts, such as light bulbs and gaskets, are not included in warranty coverage.

For Warranty Inquiries or Service:

To obtain warranty service, contact the location where you purchased the product:

www.WebstaurantStore.com:

Call 717-392-7472. You must have your order number ready when contacting.

The Restaurant Store:

If you purchased this unit from your local store location, please contact your store directly.

www.TheRestaurantStore.com:

If you purchased this unit online, call 717-392-7261. You must have your order number ready when contacting.

Failure to contact the designated location prior to obtaining equipment service may void your warranty.