



Intertek



Intertek

3117735

Conforms to NSF STD. 4

Conforms to UL STD. 197

Certified to CAN/CSA
STD. C22.2 No. 109

Soup Kettle Warmer, 11 Quart

Models: 177GSW11

09/2022

Please read and keep these instructions. Indoor use only.

Specifications

Model: GSW 11

Capacity: 11qt

Electrical: 110V ; 400W



 ***Read and understand all instructions before using this appliance. CAUTION! HOT SURFACE!***

Warnings

- This appliance is designed for commercial use only.
- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- Never immerse the appliance in water.
- Do not operate the kettle while it is empty.
- Do not overfill the appliance with water.
- Never move or carry the kettle when it is “ON” or if it is full of hot liquids.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a qualified service agent.
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

Operation

Carefully unpack the soup kettle warmer and inspect it for damage.

- Place the warmer on a solid, level surface.
- Use with wet heat only. Add 20 oz. (.6 liters) of water to the kettle before placing the bain marie insert into the warmer. Never over-fill with water. Under no circumstances should the bain marie float, even when empty. Remove any excess water immediately.
- Turn the warmer on. The indicator light will glow, showing that the unit is on. Adjust the temperature control dial to the correct setting:
 - a: Settings 8-12 are designed for initial warm-up
 - b: Normal control settings range from 1-8
 - c: Once the kettle has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food-safe serving temperatures be used.

Note: This soup kettle warmer is not designed to cook soups or sauces, nor is it designed to rethermalize cold or frozen products.

- Always keep the hinged lid attached and closed when not serving.

Cleaning and Maintenance

Regular cleaning will help prolong the soup kettle's life and preserve its appearance.

- Always unplug the kettle when not in use, when filling, or when cleaning.
- Spilled food should be removed immediately from painted exterior surfaces and the top collar, with a damp soapy cloth. Do not use harsh or abrasive chemicals or scouring agents.
- The bain marie and lid are dishwasher-safe.
- Never immerse the appliance in water.