


Installation Instructions #2200/2202 Pump

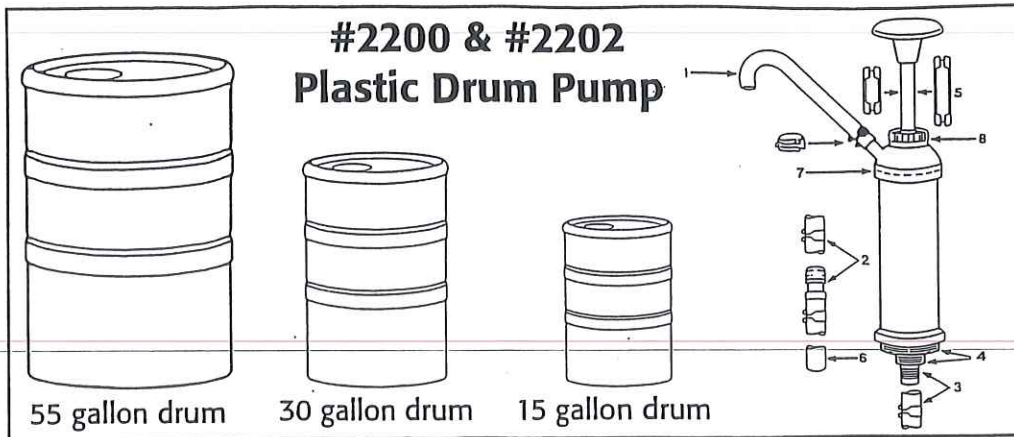

#2200/2202 Pump Instructions

1. Spigot is permanently attached for use. Do not pull or twist. Do not hang containers on end of spigot, they may pull spigot off pump head. Make sure spigot is positioned as in drawing.
2. Join two lengths of extension tubing with tube connector and two clamps. Tube connector is reinforced for better connection.
3. Attach extension tubing to


outlet on bottom of pump and secure with clamp. Outlet on bottom of pump is reinforced for better connection.

4. Insert pump in either 3/4" or 2" drum opening and hand tighten.
5. Adjust pump delivery by use of snap-on clips to pump piston rod. For full 8 oz. delivery - do not use clip; for 6 oz. delivery - use small clip only; for 4 oz. delivery - use large clip only; for 2 oz. delivery - use both large and small clips.
6. For 5, 15, 20, and 30 gallon drums, extension tubing may be cut off to proper length.
7. Entire pump head may be rotated to any desire position; person operating pump should stand to the side or in back of spigot. When pump is removed from drum, rinse thoroughlt in warm water before re-use.
8. Packing nut at shaft may be tightened when required to prevent leakage.

WARNING: Remember some solutions can be harmful. Wear safety glasses and protective clothing such as gloves, etc. Always use extreme caution when using any kind of pump.

(#2205A Instructions on Other Side)

Installation Instructions #2205A Gallon Adapter

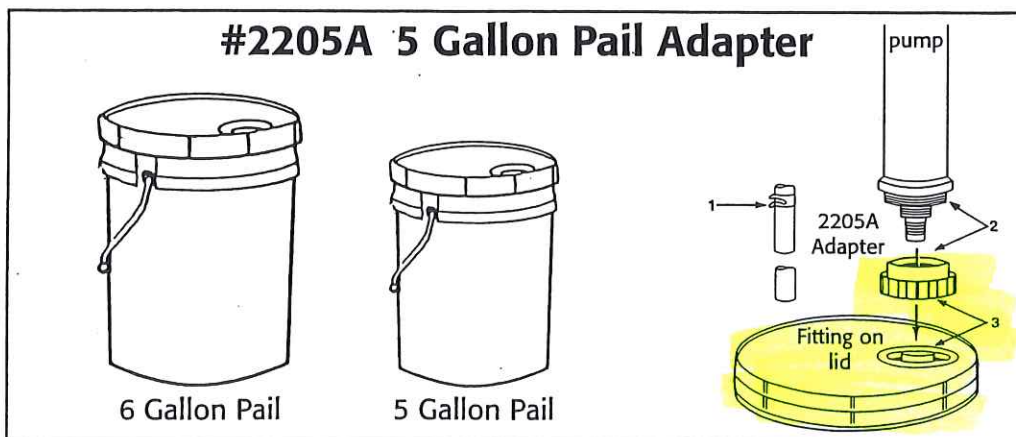

#2205A Adapter Instructions

Note: This adapter is designed to fit only on containers equipped with Senior Rieke FLEXSPOUT closure (Metal Ring)

1. Attach tube extension to outlet on bottom of pump and secure with clamp. Tube extension may be cut off for proper length.
2. Screw adapter on male threads at bottom of pump. Tightly secure adapter.

3. Remove black cap on

FLEXSPOUT closure and remove diaphragm. Insert extension into FLEXSPOUT and snap pump with adapter over metal retainer ring of FLEXSPOUT. Start by rolling rim over edge at one side; then snap over other side.

4. Adjust pump delivery by use of snap-on clips to pump piston rod. For full 8 oz. delivery - do not use clip; for 6 oz. delivery - use small clip only; for 4 oz. delivery - use large clip only; for 2 oz. delivery - use both large and small clips.
5. Entire pump head may be rotated to any desired position; person operating pump should stand to the side or in back of the spigot. When pump is removed from drum, rinse thoroughly in warm water before re-use.
6. Packing nut at shaft may be tightened when required to prevent leakage.
7. To remove pump with adapter from pail, pull towards side of pail and snap off. When pump is removed, rinse thoroughly in warm water before re-use.

WARNING: Remember some solutions can be harmful. Wear safety glasses and protective clothing such as gloves, etc. Always use extreme caution when using any kind of pump.

(#2200 & #2202 Instructions on Other Side)