

#30BLPPTSNDAUTOR | #30BLPPTSTNAUTOR | #30BLPPTTNMAUTOR

Automatic Paper Towel Roll Dispenser

Mounting Instructions:

- 1. Find a suitable installation location that complies with applicable guidelines.
- 2. Locate the hardware kit that comes with the unit. It will include four screws, washers, and drywall anchors, as well as one blue key.
- 3. Use the blue key to open the unit by putting it into the keyhole located at the top of the unit and twisting until the front cover opens.
- 4. With the unit open, hold the unit against the desired mounting location and use a marking tool to mark each screw hole on the wall through the dispenser. A spirit level is included on the back plate of this unit to aid in leveling. When done, set aside the dispenser.
- 5. Drill holes into the marked locations and insert the drywall anchors into each hole.
- 6. Thread a screw through a washer and screw it into one of the drilled holes. Be sure to leave enough length for mounting the unit onto the screw. Repeat this step for each screw.
- 7. Mount the dispenser onto the wall by aligning the dispenser's screw holes with the screws. Slide the dispenser downward and ensure it is firmly in place.

Loading Batteries:

- 1. Before loading paper, it is recommended that batteries are loaded into the unit. Four D cell batteries (not included) are required for operation of this unit.
- 2. Open the unit's front cover and locate the battery housing cover—this is next to the settings control panel. Remove the battery housing cover.
- 3. Use the interior of the battery housing as a guide to install the batteries in the correct orientation.
- 4. Reseal the battery cover.




#30BLPPTSNDAUTOR | #30BLPPTSTNAUTOR | #30BLPPTTNMAUTOR

Automatic Paper Towel Roll Dispenser

Operational Features:

This unit comes with three customizable features. It is recommended that you select your desired settings before loading paper.

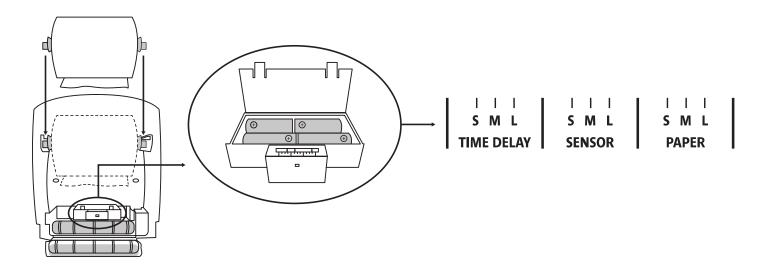

Time Delay:

- S No time delay between activation.
- **M** A two-second delay between activations.
- L A four-second delay between activations.

Sensor (refers to the sensitivity required for an activation):

- **S** A short range will activate the dispenser.
- M A medium range will activate the dispenser.
- L A long range will activate the dispenser.

Paper (refers to the length of paper dispensed):

- S A 7 15/16" sheet will be dispensed.
- M A 10 5/8" sheet will be dispensed.
- L A 13 3/8" sheet will be dispensed.



#30BLPPTSNDAUTOR | #30BLPPTSTNAUTOR | #30BLPPTTNMAUTOR

Automatic Paper Towel Roll Dispenser

Loading Paper:

- 1. Use the picture inside the unit as a guide for which way the paper should unwind.
- 2. Remove the paper roll bar from the unit and insert the paper onto the roll bar. Make sure that the core of the roll is a uniform circle to ensure a good fit and an optimal dispensing experience.
- 3. Put the loaded roll bar onto the holding rack inside the unit.
- 4. Unwind enough paper to ensure it is fed through the gap below the roll bar; the paper should hang between both rows of cogs.
- 5. Close the cover. The dispenser will automatically feed the paper through once it is closed.

Cleaning:

A damp cloth is recommended to remove dust or other dirt when needed.