


Installation and Maintenance Guide

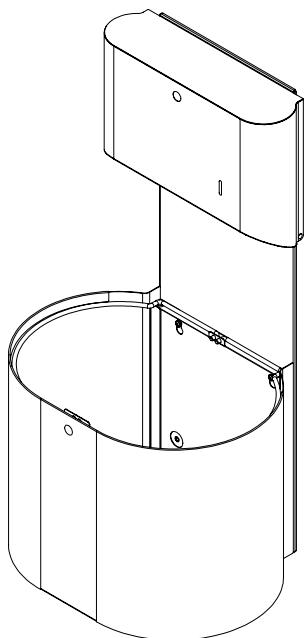

Elvari™ Combination Units, Surface-Mounted

2B5 Series

Table of Contents

Safety Information	2
Dimensions.....	2-3
Installing the Combination Unit.....	4
Maintenance and Cleaning.....	4



[Scan or click code to view
Installation Guide \(English\)](#)



[Scan or click code to view
Installation Guide \(French\)](#)



[Scan or click code to view
Installation Guide \(Spanish\)](#)



**Read the instructions in this manual before beginning installation.
Save these instructions and refer to them for operation and maintenance information.**

For questions regarding the operation, installation, or maintenance of this product, visit [bradleycorp.com](#) or call 800.BRADLEY (800.272.3539).
Product warranties and parts information may also be found under “Resources” on our website at [bradleycorp.com](#).

Safety Information

WARNING

The combination units are no stronger than the anchors and walls to which they are attached, and therefore, must be firmly secured in order to support the intended load requirements. To avoid potential injury, the building owner or maintenance personnel should remove the combination unit from service if the mounting is not adequately secured to the wall or if there are any observed product defects.

IMPORTANT

Read this entire installation manual to ensure proper installation. When installation is complete, file this manual with the owner or maintenance department. Compliance and conformity to local codes and ordinances is the responsibility of the installer.

Separate parts from packaging and make sure all parts are accounted for before discarding any packaging material. If any parts are missing, do not begin installation until you obtain the missing parts.


Dimensions

(mm)



Mounting hole dimensions shown below should be used for general locations of wall backing/support. Specific mounting hole locations should be located by using the unit itself as a template per the installation instructions below.

Small Capacity

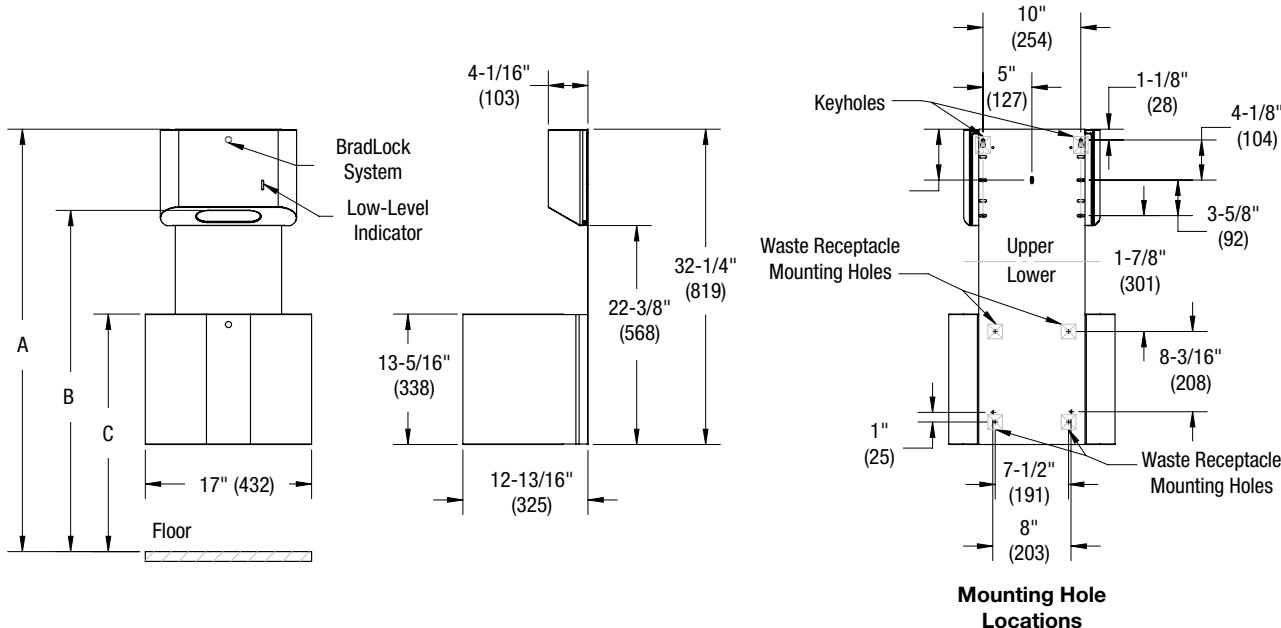

Mounting Hole Locations

Combination Unit Capacity	Dim "A" (mm)	Dim "B" (mm)	Dim "C" (mm)
Small	54-5/16" (1380)	46" ¹ (1168)	35-7/16" (900)
Medium	61-5/16" (1557)	46" ¹ (1168)	33" (838)
Large	68-9/16" (1741)	46" ¹ (1168)	33" (838)

¹ ADA compliant 




Dimensions

(mm)






Refer to the table on page 2 for dimensions A, B & C.

Medium Capacity

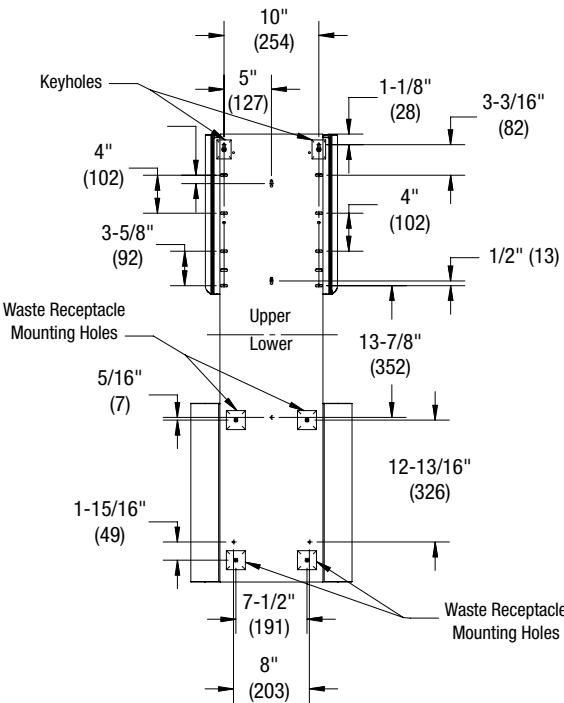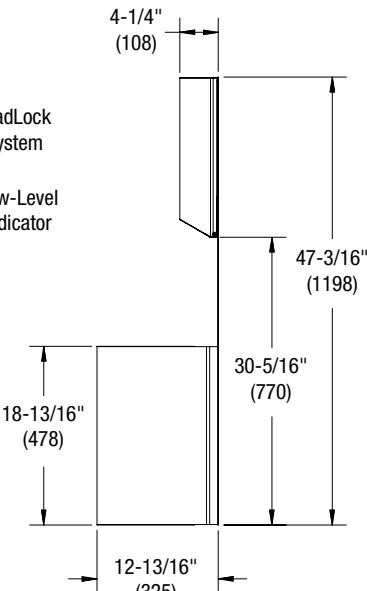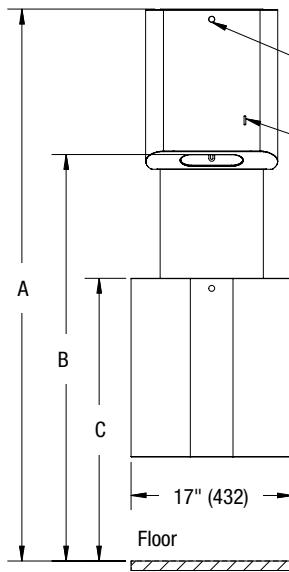

Mounting Hole Locations

Large Capacity

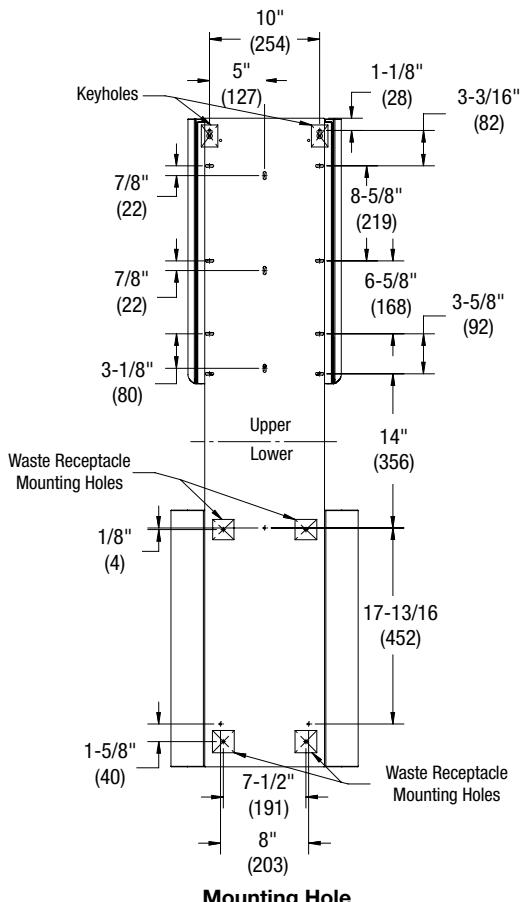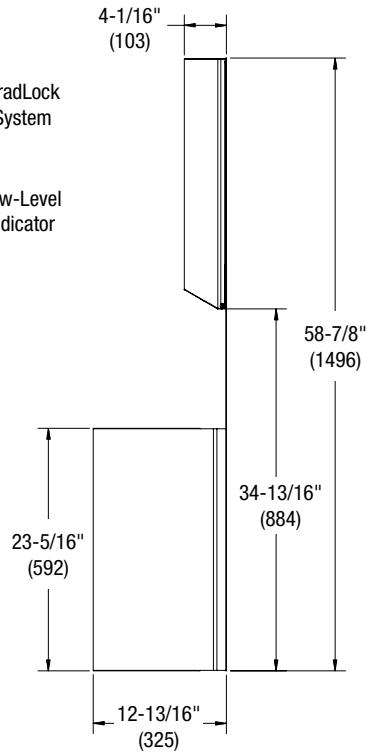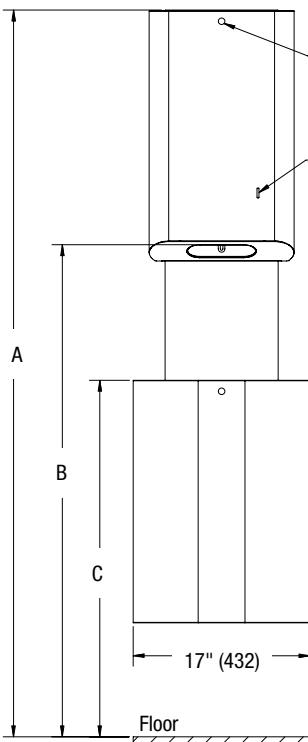

Mounting Hole Locations

Installing the Combination Unit



Coordinate installation with architect and contractor to avoid protrusion from opposite wall or pipes, vents, conduits, electrical wiring, etc., in wall.

Follow all applicable local building codes. If installing where unit projects above top of wainscot, provide aluminum channel or other filler to prevent gap from finished wall and flange of unit. For block walls, use metal expansion shields (not included).

A Drill the mounting holes for the keyholes (top two holes). Insert screws about halfway into the two top mounting holes.

B Hang the mounting plate (using the keyholes) onto the top two screws.

Open the towel dispenser cover.

1. Place the magnetic key on the Bradley logo and slightly push to disengage the lock.
2. With the magnetic key still on the logo, pull the cover slightly to open the dispenser. Be certain to always support the cover by hand while opening and closing the dispenser. For model 2B1-113600, the cover will stop shortly after disengaging the lock and pulling back. To open fully, push the cover slightly forward and disengage the retaining hooks inside of the cover (left and right sides). After disengaging the retaining hooks, the cover can be fully opened.
3. Leave the magnetic key on the Bradley logo.

D Hang the towel dispenser (using the keyholes) onto the top two screws.

E Fully tighten the top two (keyhole) screws. Using the towel dispenser back as a template, drill holes into the wall at all slotted hole locations in the towel dispenser back. Insert and fully tighten screws through the mounting plate and towel dispenser back to secure the upper portion of the unit to the mounting surface.


F Using the lower portion of the mounting plate as a template, drill holes into the wall at all remaining locations. Insert screws through the mounting plate to secure the lower portion of the unit to the mounting surface. Screws inserted through holes marked 'WASTE RECEPATEL MOUNTING HOLES' in the illustrations on the previous pages, should be inserted such that a small gap remains between the screw heads and the mounting plate so that the waste receptacle can be installed.

G Slide the receptacle down onto the waste receptacle mounting screws. For a removable waste receptacle, leave the waste receptacle mounting screws slightly loose so the receptacle can be removed. For permanent installation of waste receptacle, fully tighten all screws.

Maintenance and Cleaning


Refilling the Dispenser

Open the door using the magnetic key. Place key on Bradley logo and push slightly to disengage the lock. For model 2B1-113600, the cover will stop shortly after disengaging the lock and pulling back. To open fully, push the cover slightly forward and disengage the retaining hooks inside of the cover (left and right sides). After disengaging the retaining hooks, the cover can be fully opened. Be certain to always support the cover by hand while opening and closing the dispenser. Move the towel guide to the top of the slot and load towels below the towel guide into the cover. If the towels are not loaded below the towel guide, the dispenser will not dispense towels properly. Lower the towel guide until it rests on top of the stack of towels. Lift the door to the closed position, ensuring the maglock is latched, then remove magnetic key from cover. Pull the first towel through the dispenser.

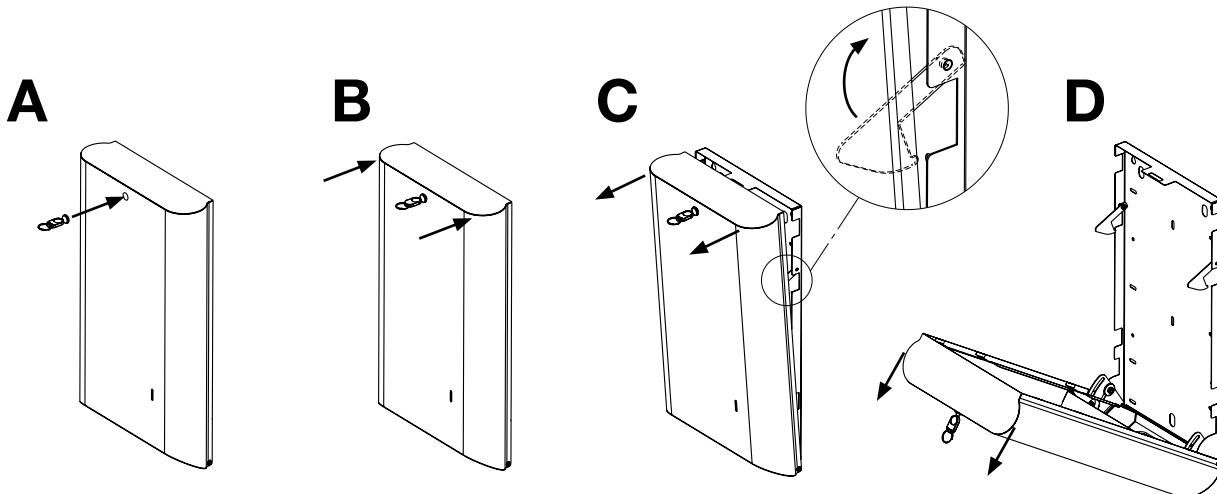

Replacing Friction Mechanisms

The dispenser contains internal friction mechanisms (each side) to control the descent of the door while refilling the product. If the mechanisms fail to control the descent of the door at any point, remove and replace the friction washers and nuts on each side of the dispenser. These replacement parts can be found in the service parts manual. When attaching the friction nuts, tighten them to a point where the descent of the door is controlled.

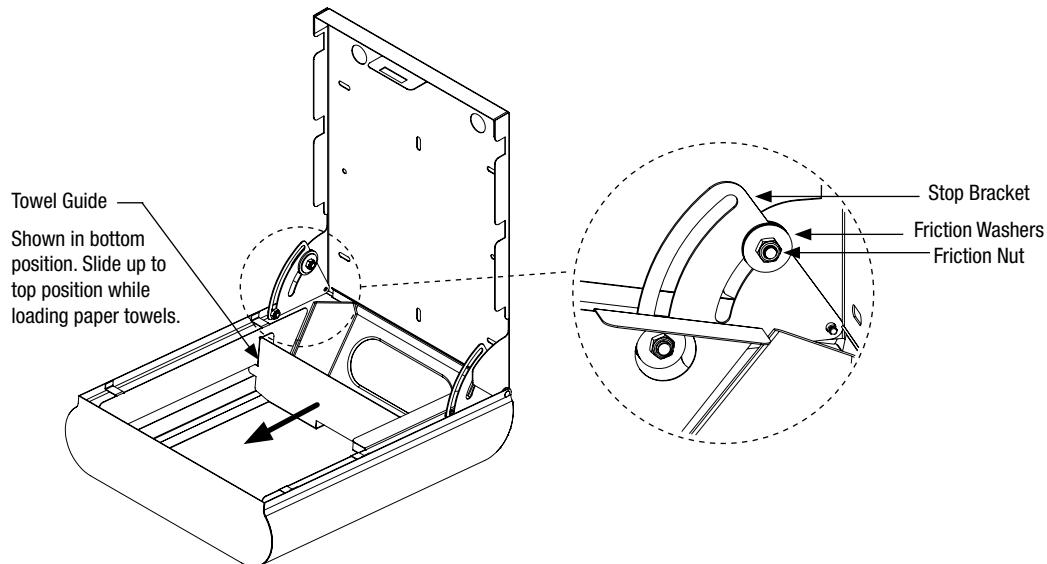

Cleaning Stainless Steel

Scan or click the QR code below to view the Stainless Steel Washroom Accessories document.

