



100 Qt Warmer/Merchandiser

Item No: **51000**

120V~60 Hz, 100W, 0.83A



WARNING ELECTRICAL SHOCK HAZARD.

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

WARNING: Handling the cord on this product may expose you to lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.

Electrical ground is required on this appliance.

1. Do not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
2. Do not use an extension cord with this appliance.
3. Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

SAFETY INSTRUCTIONS

1. Plug electrical cord into a certified electrical outlet with a corresponding voltage rating as listed on the machine model labels.
2. Always unplug the electric cord when appliance is not in use and before cleaning, adjusting or maintaining this steamer. Do not operate with a damaged cord or plug or after the machine malfunctions, has been dropped or damaged. Use authorized service for examination, electrical or mechanical adjustment or repair.
3. This equipment will be HOT during use and for a short time after it is turned off. BE CAREFUL. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this appliance. Keep combustible materials away from appliance.
4. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left operating and unattended.
5. This appliance is not intended for use in wet locations. Never locate appliance where it may fall into a water container.
Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock, fire or damage to the appliance.


ASSEMBLY INSTRUCTIONS

1. Attach Knob to the fill door using enclosed screw.
2. Attach Deflection board by sliding the tabs into the slots on the front corner-posts. Slide the board up and insert the tabs into the slots on the crossbar.
3. Insert the drop door by placing the tabs into the slots on the bottom tray.
4. Attach any of the enclosed signs to either the front or back (depending on merchandising position) using the two screws already in the corner posts.
5. Plug the machine into a properly grounded 120 volt outlet.
7. Fill the machine with product through the top fill door.
8. Turn on the warming element with the front lighted switch (the machine will be on when the switch is illuminated).
9. Turn the machine off when not in use.

CLEANING

1. Turn off the machine and unplug it from the power source.
2. Remove any remaining food product from the machine.
3. Remove the Drop Door, Separate Plate and Bottom Tray from the Machine and clean in a sink or dishwasher with mild detergent.
4. Clean out any food product from the base of unit with a damp cloth and mild detergent.
5. Clean the glass panels and cover with any standards glass cleaner.
6. Re-assemble the machine.
7. Plug the machine back into the 120 volt power source.

DIAGRAM

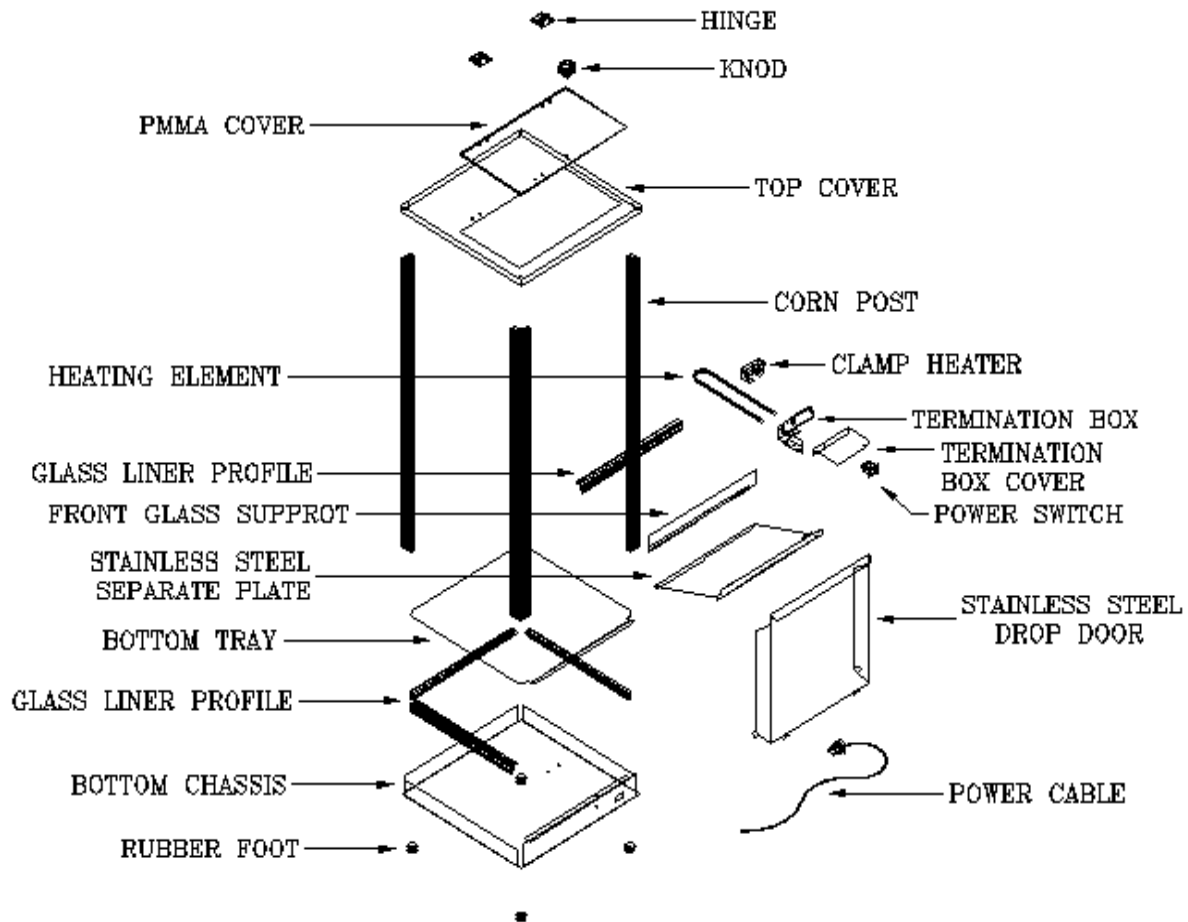

PARTS LIST

Part #	Description
5220	Hinge set
5231	PMMA Cover
5212	Clamp-Heater
1011	Heating element
5201	Knob

Part #	Description
5202	Bottom Tray
5203	Drop Door
5204	Separate Plate
5213	Master Switch
5205	Glass Panel

WIRING DIAGRAM

