

# Lettuce Cutter

04/2025



## Introduction

Please read and comply with the instructions listed on this document. To get the best service life and performance from your machine, clean it thoroughly before and after each use by following the instructions listed below. Minimize the use of alkaline cleaners, as they may dull the finish and cause pitting.

## Safety Instructions

- Be careful when handling and operating the machine, as the blades are very sharp.
- Always keep your hands away from the blades.
- When not in use, use the ring pin to secure the machine in the lockdown position.



#### **MODELS**

**407LETCUT12** 1/2" x 1/2" **407LETCUT1** 1" x 1"

## Operation

- 1. Remove ring pin from lockdown position hole.
- 2. Insert ring pin into hole on handle.
- 3. Lift and hold the handle in the upright position and place a head of lettuce on the blade surface.
- 4. Remove hands and fingers from the cutting area.
- 5. Firmly push the handle down so that the push plate forces the product completely through the blades.
- 6. Clean the machine after chopping is complete using the cleaning instructions below.
- 7. Do not attempt to cut produce larger than the surface of the blade assembly.



## Lettuce Cutter



## Cleaning and Maintenance

- 1. Remove ring pin and use handle to lift push plate off of the guide rods.
- 2. Remove hold-down clips and remove the blade assembly from the frame.
- 3. Use a damp cloth or sponge to wipe down the frame. Clean the push plate and blade assembly thoroughly.
- 4. Make sure frame, blade assembly, and all other components are dried thoroughly.
- 5. Replace blade assembly, and then re-attach hold-down clips.
- When necessary, lubricate guide rods with mineral oil, food-grade grease, or paraffin.
  NOTE: DO NOT use cooking or vegetable oil.
- 7. Replace push plate, then return handle to lockdown position.
- 8. Replace the ring pin for safe storage.

## Replacement Parts

## **Blade Assemblies**

407LETBLD12	1/2" x 1/2"
407LETBLD1	1" x 1"



## **Chain and Pin Assembly**

**181CHAINPIN** 



#### **Non-Skid Feet**

**407PFPFEET** 



#### Bushing

181BUSHING2



## **Bumper**

**181BUMPER2** 

