




User Manual

Plastic V-Shaped Mandoline with 5 Blades

Item #407MNDVSL5B

WARNING: Blades are extremely sharp. Use cutting gloves for safety.

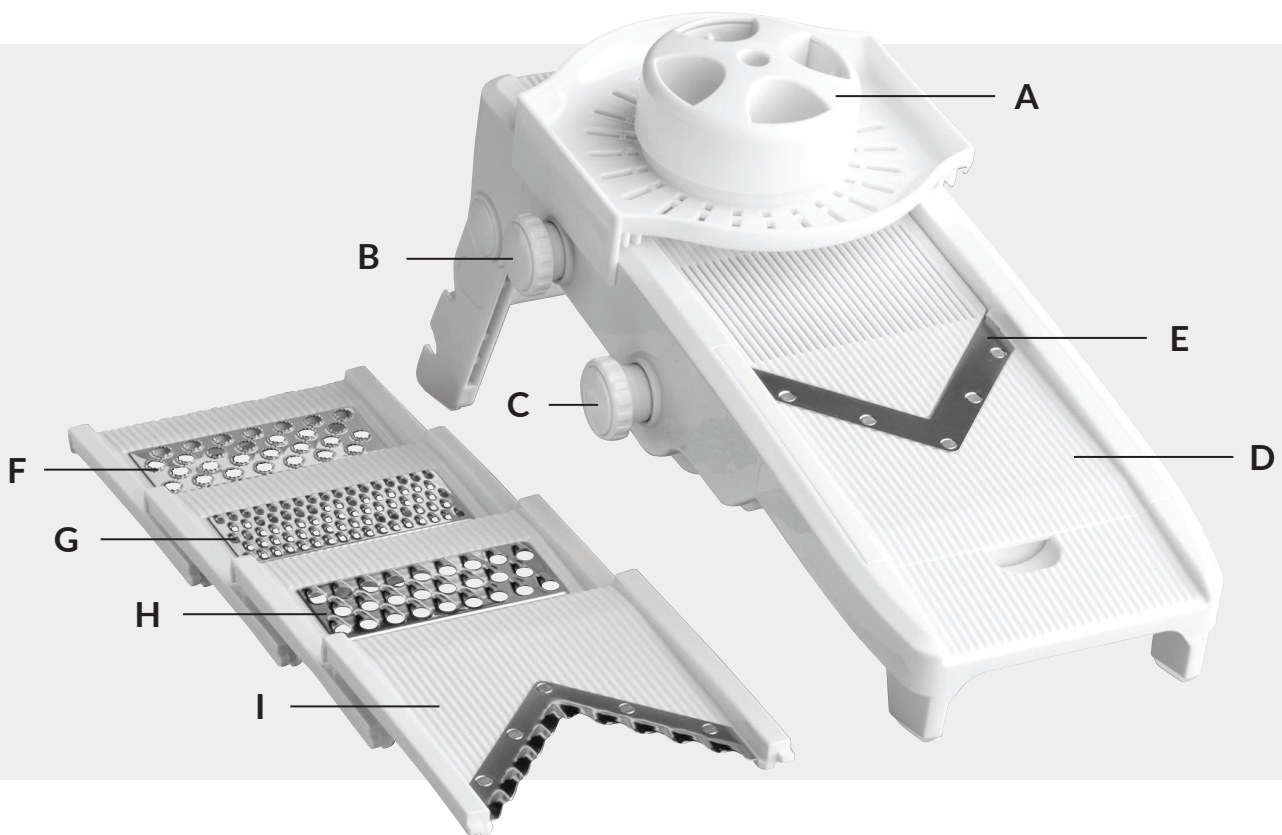

Parts

- A) Hand Guard/Pusher
- B) Thickness Adjustment Knob
- C) Julienne Blade Knob
- D) Interchangeable Blade
- E) Slicer Blade

- F) Grater Blade
- G) Fine Shredder Blade
- H) Coarse Shredder Blade
- I) Wavy Slicer Blade

User Manual

Instructions

1. Secure food into the pins of the food holder.
2. Place the mandoline on a flat surface.
3. Insert blade and press to lock.
4. Use the rear knob to adjust desired thickness.
5. Use the front knob to select 6mm or 9mm julienne blades.
Note: Adjust the thickness to 0mm when using coarse / fine shredders.
6. Lift blade or push out from below to remove.
7. Folding in the mandoline stand allows the slicer to be used on top of containers by aligning the notches underneath.



Cleaning

1. The mandoline and blades can be washed in the dishwasher.
Note: Do not wash blade box in dishwasher.
2. Open the julienne blade cover and clean with a brush. Press to the close the cover.