


STEAMER


QUICK CLEANING GUIDE FOR AUTO-FILL UNITS

IMPORTANT INFORMATION

STEP 1.
TURN THE STEAMER OFF AND
ALLOW SEVERAL MINUTES
FOR IT TO COOL DOWN.

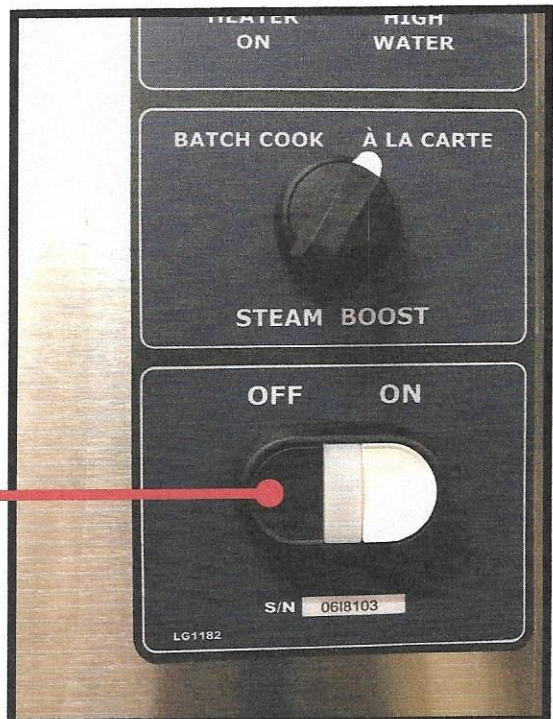

STEP 2.
DRAIN THE WATER USING
VALVE ON THE FRONT. ALWAYS
USE CAUTION WHEN
DRAINING A HOT OR WARM
STEAMER.

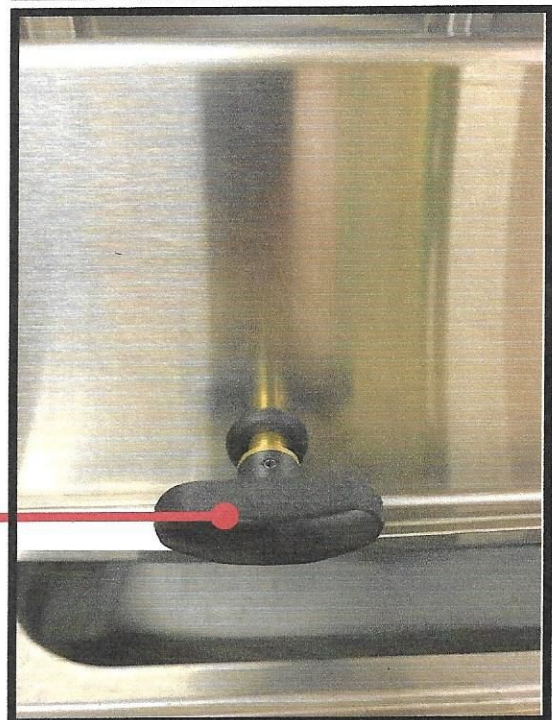


STEAMER

QUICK CLEANING GUIDE FOR AUTO-FILL UNITS

IMPORTANT INFORMATION



**STEP 3.
REMOVE THE COVER BY SLID-
ING OUT THE FRONT.**

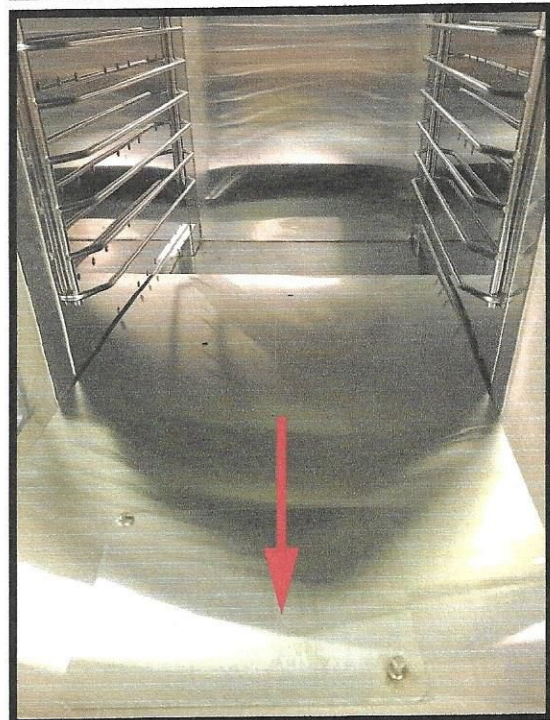

STEAMER


QUICK CLEANING GUIDE FOR AUTO-FILL UNITS

IMPORTANT INFORMATION

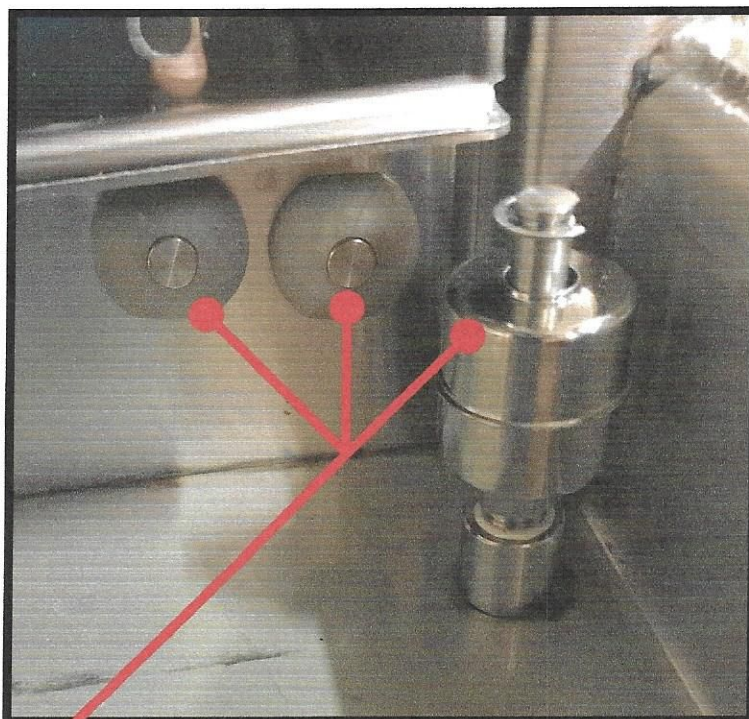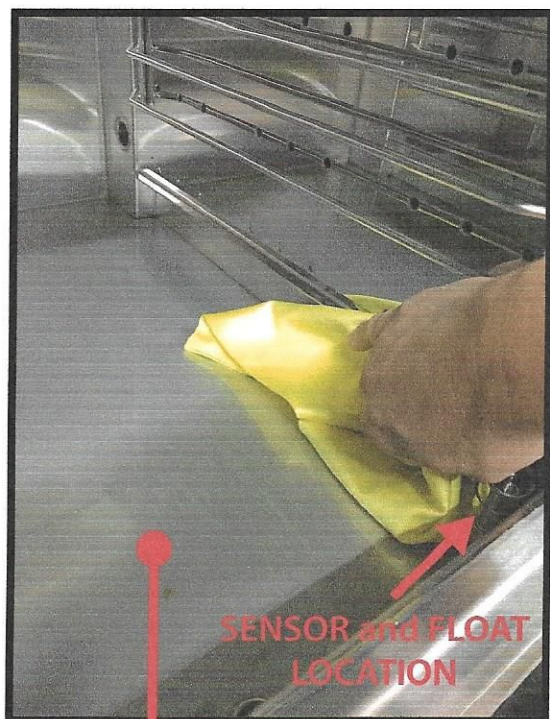

STEP 4.
CLEAN THE INSIDE OF WATER
RESERVOIR WITH MILD
NON-CHLORIDE DETERGENT
MAKING SURE TO CLEAN SEN-
SORS AND FLOAT SWITCH.

STEP 5.
RINSE, WIPE DRY AND LEAVE
DOOR OPEN UNTIL NEXT USE.

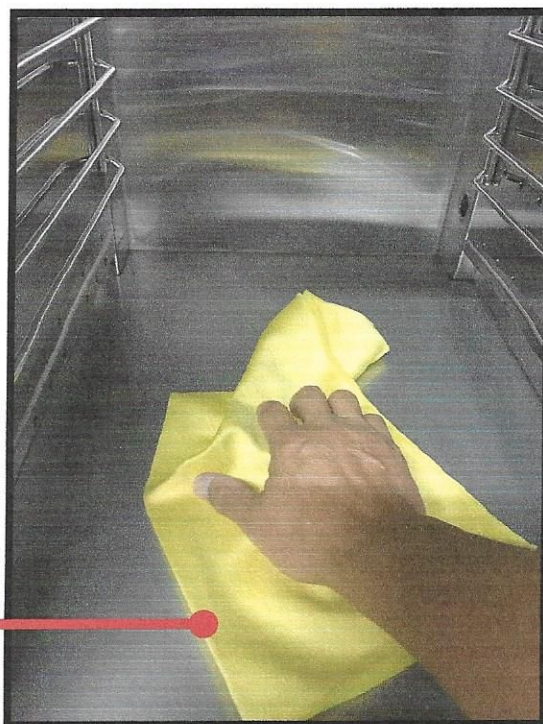

STEAMER

QUICK CLEANING GUIDE FOR AUTO-FILL UNITS

IMPORTANT INFORMATION

**TO MINIMIZE CONTAMINANTS
FROM GETTING INTO WATER
AND AFFECTING THE LEVEL
SENSOR PERFORMANCE, WE
SUGGEST YOU PLACE A SOLID
CATCH PAN AT BOTTOM WHEN
USING PERFORATED PANS.**

