




## Butane Range

2 Brass Burners  
15,000BTU per Burner


### PARTS DESCRIPTION

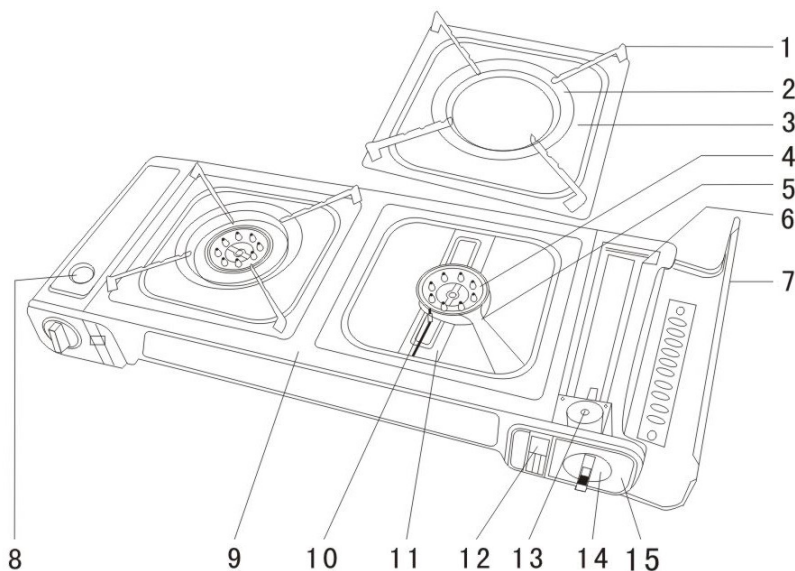

- |   |   |
|---|---|
| 1. <b>Trivet</b>  | 11. <b>Panel for Gas Ring</b>   |
| 2. <b>Wind Guard</b><br>Prevents flame from being extinguished by the wind. Saves gas by concentrating the flame. | 12. <b>Switch Cover</b><br>Fixes the gas can when it is pushed down & releases the can when pulled up.  |
| 3. <b>Bottom Pan</b>  | 13. <b>Valve</b>  |
| 4. <b>Flame Separator</b>   | 14. <b>Ignition Knob</b><br>For ignition of the burner. Turn this knob to the left until you hear the "click" sound. You can control the heat after ignition. |
| 5. <b>Gas Ring</b>  | 15. <b>Instruction Panel</b>  |
| 6. <b>Gas Can Removable Panel</b>   |   |
| 7. <b>Gas Can Cover</b>   |   |
| 8. <b>Cover Opening Hole</b><br>Putting a finger into the hole and pulling it up will open the can cover.         |   |
| 9. <b>Housing</b>   |   |
| 10. <b>Electronic Lighter</b><br>Ignites burner. Keep clean for smooth ignition.                                  |   |


### DIRECTIONS

- 1** Install the trivets in the correct position and open gas can covers.

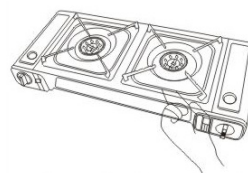


To open the trivets, pull it up smoothly from the gap.

- 2** Put the gas cans in the gas can cases.

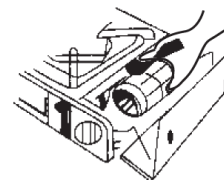


Make sure the size of the gas cans are suitable for the stove.

- 3** Push down the lock lever knobs.

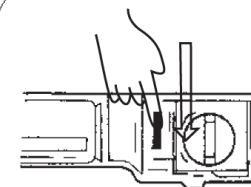


Make sure the gas cans have been fixed into the correct position.

- 4** Close the gas can covers.

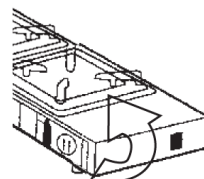


Refer to the image above.

- 5** Ignite the burner by turning the ignition knob to the left.

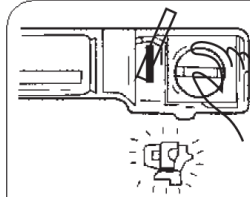


Turn until "click" sound. Be sure ignition knob is in "off" position when turning the lock lever knob.

- 6** Put on fry pan and adjust the flame by turning the ignition knob.

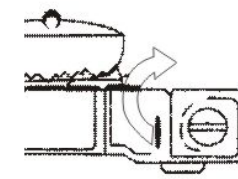


Turn the ignition knob from high to low to adjust the flame.

- 7** When finished cooking, turn off burners.

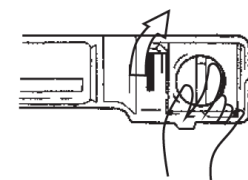

Turn the ignition knob to the "off" position.

- 8** Pull up the lock lever knob.

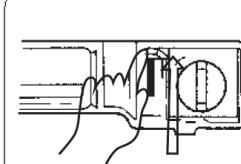

Make sure to pull up the lock lever knob to the "off" position when not in use.

## IMPORTANT SAFEGUARDS

- Avoid strong wind. Otherwise the flame may be scattered or extinguished.
- Avoid direct exposure to sunlight. Avoid operating near flammable items. Keep away from wall 6" or more.
- Place the trivet in the correct position. Otherwise, the ignition knob will not function.
- If you smell gas, turn off and take outside where the leak may be detected. You can check for leaks with soapy water.

### 1. After gas can is empty...

Do not throw the used gas cans into fire. A hole must be drilled into the can before thrown away.

### 2. Do not let food overheat...

Don't let liquids overflow into the burner. If this happens, turn off and wipe with a dry towel.

### 3. Only for cooking...

Do not use gas stove for any other reason.

### 4. In case of accident...


Switch off the ignition knob and unlock the gas can.

### 5. Do not let range overheat...

Do not put two ranges beside each other. Do not put too large of a pan on the range.

### 6. Do not let gas leak...

Be sure the gas can fits in the gas can case correctly. If you hear a hissing sound while installing the can, take can out and re-install. Do not ignite the appliance when the gas can is not in the correct position.

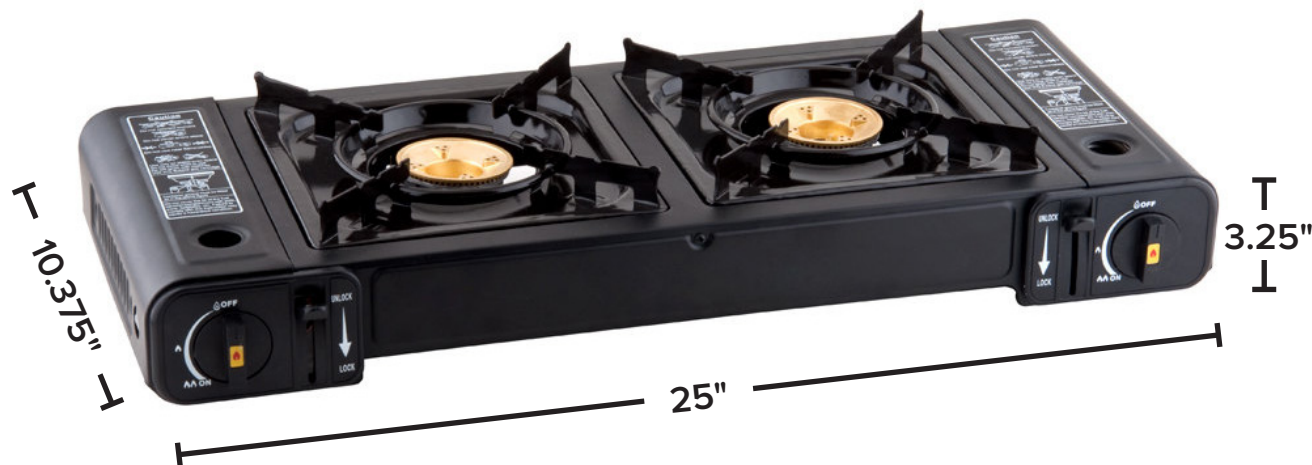

## TECHNICAL DATA

Product	Portable Gas Stove
Size	25" x 10.375" x 3.25"
Weight	7.25 lb.
Fuel	Butane Gas
Fuel Consumption	341 g/hr. per burner

The design and standard may be changed for the improvement of quality without notice.

