


4 Gallon

Step-On Trash Cans

PARTS LIST


A Trash Can (1)

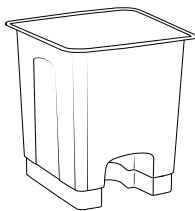


B Lid (1)



C Foot Pedal (1)

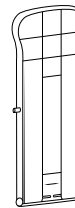


D Back Bar (1)

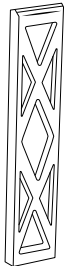


STEP 1

Place the trash can body (A) upside down on a flat surface. Insert the two pegs of the foot pedal (C) into the two corresponding holes in the bottom of the can body.

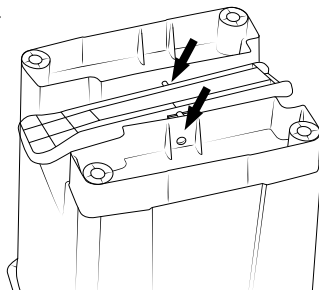


STEP 2

Connect the back bar (D) to the foot pedal.

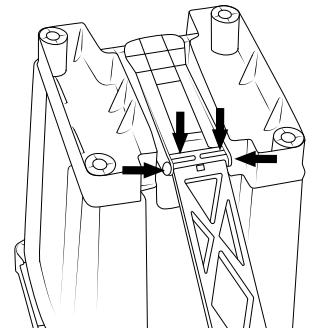


STEP 3

Pull the back bar through the slot in the back of the can body.

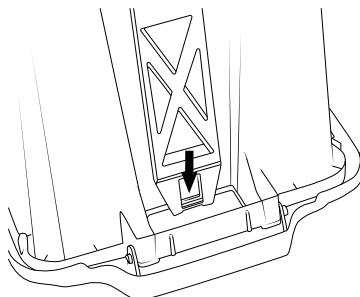

STEP 4

Place the can body right side up. Connect the lid (B) to the top of the back bar as shown. Then, line up the two holes in the middle of the lid with the corresponding pegs on the can body and snap into place.

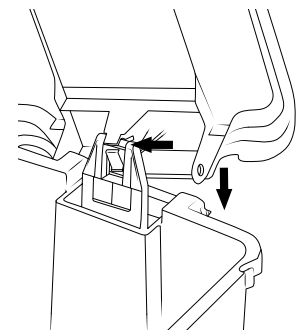

STEP 5

Test the step-on can by stepping on the pedal (the lid of the can should lift). Please contact WebstaurantStore customer solutions at help@webstaurantstore.com if you have any issues with assembly or missing parts.