




 
ASSEMBLY INSTRUCTIONS FOR ITEM # 71220 - 70222 (Sofa)

Page 1 of 3





STOP! PLEASE READ FIRST


Thank you for purchasing this item from Outdoor Interiors. Please verify all the hardware and components are included as you unpack the carton. Place the items in a safe area to avoid loss and damaging contents. Use a soft area or use the empty box to assemble the set. **ASSEMBLY TIPS:** Assemble upside down with the sofa facing down. Never over-tighten bolts. Please review the care card for how to care & maintain your new furniture. If you have any questions visit www.outdoorinteriors.com

PARTS LIST

	Back Frame x 1 piece
	Leg Right x 1 piece
	Leg Left x 1 piece
	Seat Frame x 1 piece

 HARDWARE LIST

1		F-Bolt 8.00x20.00 mm	02 pieces
2		F-Bolt 8.00x30.00 mm	16 pieces
3		Pat 1 50x25x3 mm	08 pieces
4		Allen key 4.00x98.00 mm	1 piece

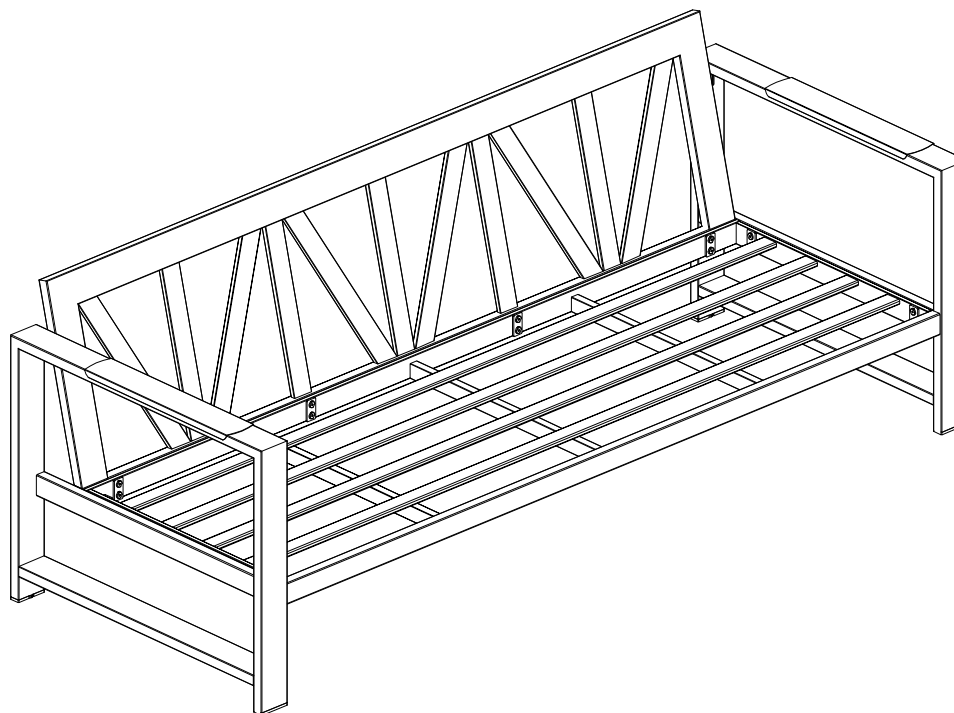


IMPORTANT NOTE:

Each armrest + leg unit requires assembly for the purpose of shipping ease and to prevent damage. Each armrest + leg unit is identified under the seat frame prior to assembly. With A, B, C... match leg or arm to chair or sofa for easy assembly.

ASSEMBLY INSTRUCTIONS FOR ITEM # 71220

(Sofa)

Page 2 of 3

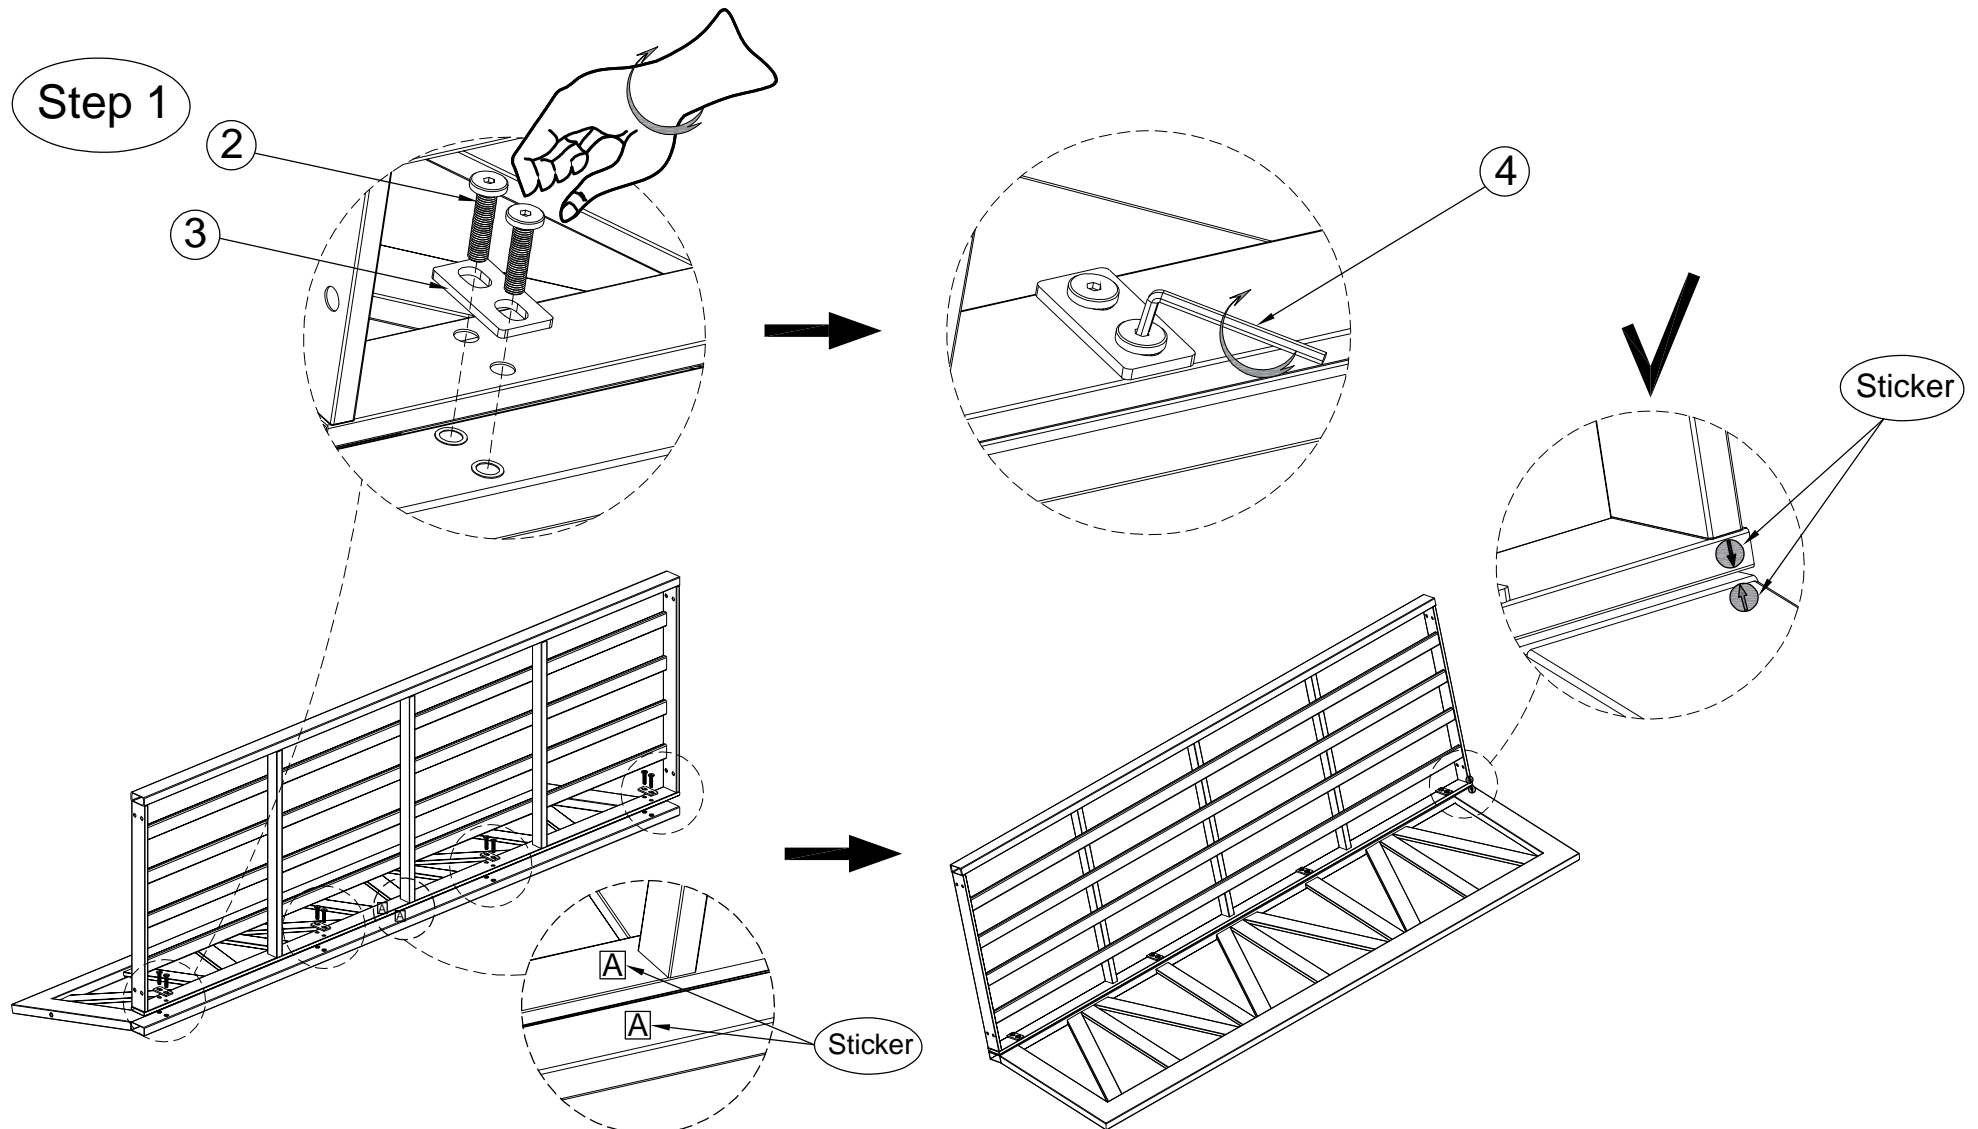

Please do not fully tighten the bolts until last step

ASSEMBLY INSTRUCTIONS FOR ITEM # 71220

Page 3 of 3

Step 2

(Sofa)

