


8 Gallon | 12 Gallon | 18 Gallon | 23 Gallon


Step-On Trash Cans

PARTS LIST

A Trash Can (1)

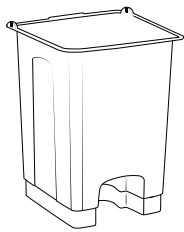

B Foot Pedal (1)

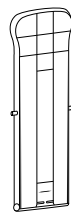


C Back Bar (1)



D Lid (1)




E Pins (2)

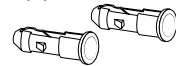


STEP 1

Place the trash can body (A) upside down on a flat surface. Insert the two pegs of the foot pedal (B) into the two corresponding holes in the bottom of the can.

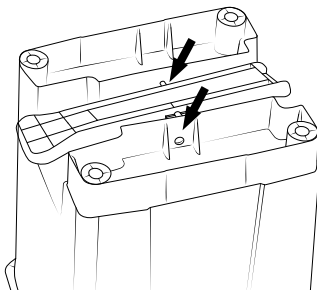


STEP 2

Connect the back bar (C) to the foot pedal.

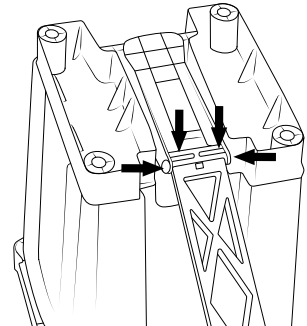


STEP 3

Attach the other end of the back bar to the can body.

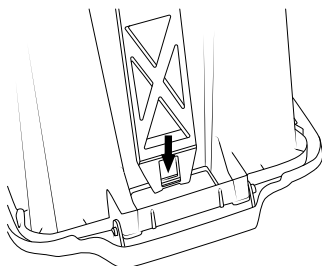


STEP 4

Place the can body right side up. Align the lid (D) with the holes at the top of the can body.

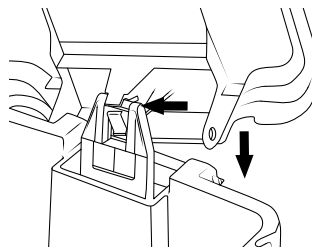

STEP 5

Insert a lid pin (E) through the holes on one side of the lid and can body as shown until it snaps into place. Repeat on the other side to secure the lid.

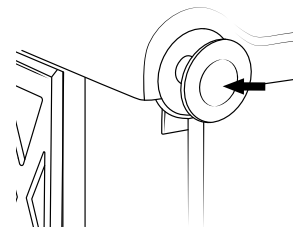

STEP 6

Test the step-on can by stepping on the pedal (the lid of the can should lift). Please contact WebstaurantStore customer solutions at help@webstaurantstore.com if you have any issues with assembly or missing parts.