

95 Gallon | 50 Gallon

# Roll-Out Trash Cans

### PARTS LIST

Trash Can (1)



 
Lid (1)




Pins (2)



Wheels (2)




Axle (1)

 

### STEP 1



Locate your trash can and lid. Place the lid on top of the trash can, aligning the two pre-drilled holes on the lid with the pre-drilled holes on the can. The lid is positioned correctly if the handles and the Lavex logo are facing you.

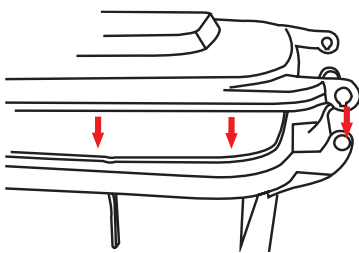

### STEP 2


With the wide end facing out, insert one (1) of the provided pins through the left set of holes and push until you hear a click and the pin is flush with the lid. Repeat this same process with the remaining pin on the right set of holes.

Note: The pins are tied to the handle of the trash can.

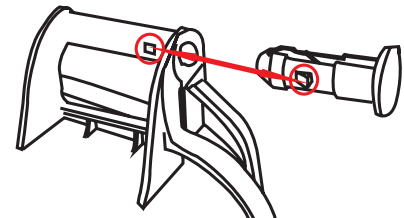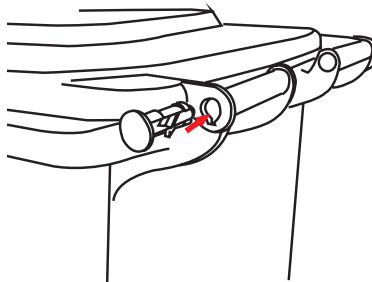


### STEP 3

Locate the two (2) wheels and axle. Insert the axle into one of the wheels until you hear a click.

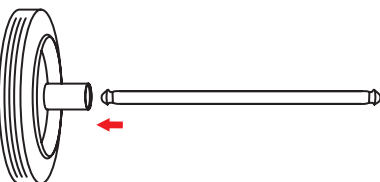

### STEP 4

Insert the axle through the holes at the bottom of the trash can. Once the axle is through both holes, insert the remaining wheel onto the exposed axle end until you hear another click.

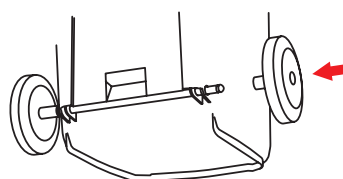

### STEP 5

Test the trash can and lid by rolling the wheels on a flat surface and opening and closing the lid. Please contact WebstaurantStore customer solutions at [help@webstaurantstore.com](mailto:help@webstaurantstore.com) if you have any issues with assembly or missing parts.