

Hot Food Drop-In Wells

Electric



500-HWI/D4



100-HW/D6



300-HWI/D6



400-HW/D4



Models:

100-HW/D4/D6/D443/D643
100-HWLF/D4/D6
200-HW/D4/D6/D443/D643
200-HWLF/D4/D6
200-HWI/D4/D6/D443/D643
200-HWILF/D4/D6
300-HW/D4/D6/D443/D643
300-HWLF/D4/D6
300-HWI/D4/D6/D443/D643
300-HWILF/D4/D6
400-HW/D4/D6
400-HWLF/D4/D6
400-HWI/D4/D6
400-HWILF/D4/D6
500-HW/D4/D6
500-HWLF/D4/D6
500-HWI/D4/D6
500-HWILF/D4/D6

- **INSTALLATION**
- **OPERATION**
- **MAINTENANCE**

W164 N9221 Water Street • P.O. Box 450
Menomonee Falls, Wisconsin 53052-0450 U.S.A.

PHONE: 262.251.3800 • 800.558.8744 U.S.A. / CANADA
FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY
www.alto-shaam.com



Consult instructions
for operation and use.





Delivery	1
Unpacking	1
Safety Procedures and Precautions	2

Installation

Installation Requirements	3
Leveling	3
Options & Accessories	3
Dimensions	4-12
Rough Cut Openings	13
Product/Pan Capacity	14
Remote Control Mounting Instructions	15
Electrical Connection	16
Electrical Specifications	17

Operating Instructions

Operating Instructions	18
General Holding Guidelines	19

Care and Cleaning

Cleaning and Preventative Maintenance	20
Protecting Stainless Steel Surfaces	20
Cleaning Agents	20
Cleaning Materials	20
Care and Cleaning	21
Sanitation	22

Service

Service Parts	23-40
-------------------------	-------

Wire Diagrams

Always refer to the wire diagram(s) included with the unit for most current version.

Warranty

Transportation Damage and Claims . .	Back Cover
Limited Warranty	Back Cover



DELIVERY

This Alto-Shaam appliance has been thoroughly tested and inspected to ensure only the highest quality unit is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. *See Transportation Damage and Claims section located in this manual.*

This appliance, complete with unattached items and accessories, may have been delivered in one or more packages. Check to ensure that all standard items and options have been received with each model as ordered.

Save all the information and instructions packed with the appliance. Complete and return the warranty card to the factory as soon as possible to ensure prompt service in the event of a warranty parts and labor claim.


This manual must be read and understood by all people using or installing the equipment model. Contact the Alto-Shaam Tech Team Service Department if you have any questions concerning installation, operation, or maintenance.

NOTE: All claims for warranty must include the full model number and serial number of the unit.

UNPACKING

- Carefully remove the appliance from the carton or crate.

NOTE: Do not discard the carton and other packaging material until you have inspected the unit for hidden damage and tested it for proper operation.

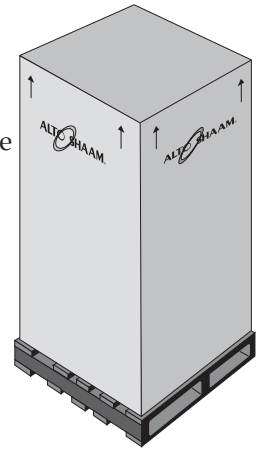

- Read all instructions in this manual carefully before initiating the installation of this appliance, using the appliance or performing routine maintenance. Following procedures other than those indicated in this guide to use and clean the appliance is considered inappropriate and may cause damage, injury or fatal accidents, in addition to invalidating the guarantee and relieving Alto-Shaam of all liability.
- **DO NOT DISCARD THIS MANUAL.** This manual is considered to be part of the appliance and is to be provided to the owner or manager of the business or to the person responsible for training operators. *Additional manuals are available from the Alto-Shaam Tech Team Service Department.*
- Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.

SAFETY PROCEDURES AND PRECAUTIONS

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. In accordance with generally accepted product safety labeling guidelines for potential hazards, the following signal words and symbols may be used throughout this manual.

DANGER



Used to indicate the presence of a hazard that **WILL** cause severe personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

WARNING



Used to indicate the presence of a hazard that **CAN** cause personal injury, possible death, or major property damage if the warning included with this symbol is ignored.

CAUTION



Used to indicate the presence of a hazard that can or will cause minor or moderate personal injury or property damage if the warning included with this symbol is ignored.

CAUTION

Used to indicate the presence of a hazard that can or will cause minor personal injury, property damage, or a potential unsafe practice if the warning included with this symbol is ignored.

NOTE: Used to notify personnel of installation, operation, or maintenance information that is important but not hazard related.



Used to indicate that referral to operating instructions is a mandatory action. If not followed the operator could suffer personal injury.




Used to indicate that referral to operating instructions is recommended to understand operation of equipment.

- This appliance is intended to cook, hold or process foods for the purpose of human consumption. No other use for this appliance is authorized and is therefore considered dangerous. The appliance must not be used to cook food containing flammable materials (such as food with alcohol). Substances with a low flash point can ignite spontaneously and become a fire risk.
- This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users. We recommend regular training of your staff to avoid the risk of accident or damage to the unit. Operators must also receive regular safety instructions.
- Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified and trained technicians.
- This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.

ENVIRONMENTAL CONDITIONS

- Operational Environmental Conditions
- Unit must acclimate to room temperature in the environment it is placed. 24 hours is recommended.
- Ambient temperature range of 50° to 110°F (10° to 43°C).
- Relative humidity of less than 95% non-condensation.
- Atmospheric pressure range of 50KPa to 106KPa.

NOTE

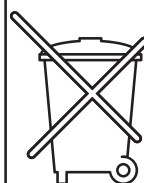

For equipment delivered for use in any location regulated by the following directive:

DO NOT DISPOSE OF ELECTRICAL OR ELECTRONIC EQUIPMENT WITH OTHER MUNICIPAL WASTE.

INSTALLATION

DANGER



Improper installation, alteration, adjustment, service, cleaning, or maintenance could result in property damage, severe injury, or death.

Read the installation, operating and maintenance instructions thoroughly before installing, servicing, or operating this equipment.

CAUTION



METAL PARTS OF THIS EQUIPMENT BECOME EXTREMELY HOT WHEN IN OPERATION. TO AVOID BURNS, ALWAYS USE HAND PROTECTION WHEN OPERATING THIS APPLIANCE.

CAUTION



Appliance and accessories may be heavy. To prevent personal injury, use caution when moving or leveling this appliance or handling accessories.

DANGER




DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance. Failure to observe this precaution may result in a fire, explosion or personal injury.

SITE INSTALLATION




The Alto-Shaam Hot Well must be installed in a location that will permit it to function

for its intended purpose and to allow adequate clearance for ventilation, proper cleaning, and maintenance access.

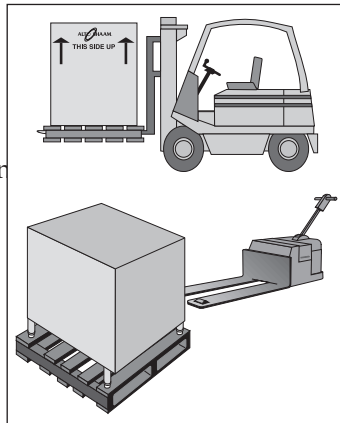

LEVELING

 The heated well should be leveled before the electrical supply is connected. Level the appliance from side-to-side and front-to-back with the use of a spirit level. For appliances installed on a mobile stand, it is important that the floor surface be level due to the probability of frequent repositioning.



NOTE

It is important to apply a food grade silicone underneath the decor flange to seal flange to the countertop.



1. The hot well must be installed on a stable and level surface free of vibration and suitably strong enough to support the combined weights of the unit plus the maximum product load weight.
2. **DO NOT** install this appliance in any area where it may be affected by any adverse conditions such as steam, grease, dripping water, high temperatures, or any other severely adverse conditions.
3. **DO NOT** store or use any flammable liquids or allow flammable vapors in the vicinity of this oven or any other appliance.
4. This appliance must be kept free and clear of any combustible materials.
5. The outer walls of the hot well can reach 200°F (93°C) to 260°F (127°C). Verify countertop material temperature rating with manufacturer before installing to ensure counter can withstand heat.

CLEARANCE REQUIREMENTS

1" (25mm) from combustible surfaces

OPTIONS AND ACCESSORIES

Pan Divider Bars

Full Size	16019
Half Size / Third-Size	11318
Extra Long (300-HW/D443 AND D643 ONLY)	1012405


200-HW/D4 & 200-HW/D6




INSTALLATION

DIMENSIONS

300-HWI/D4, D6, D443, D643

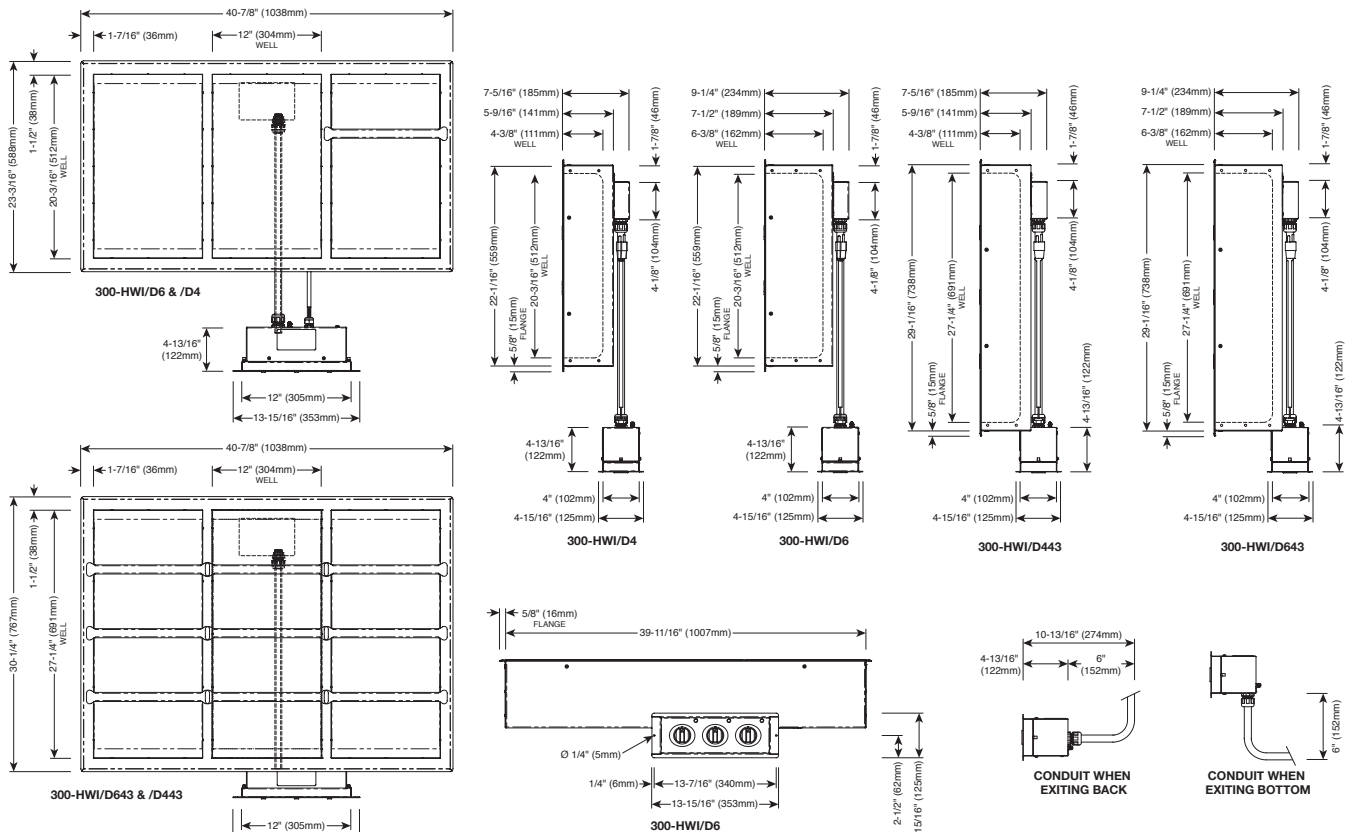


300-HWILF/D4 & 300-HWILF/D6

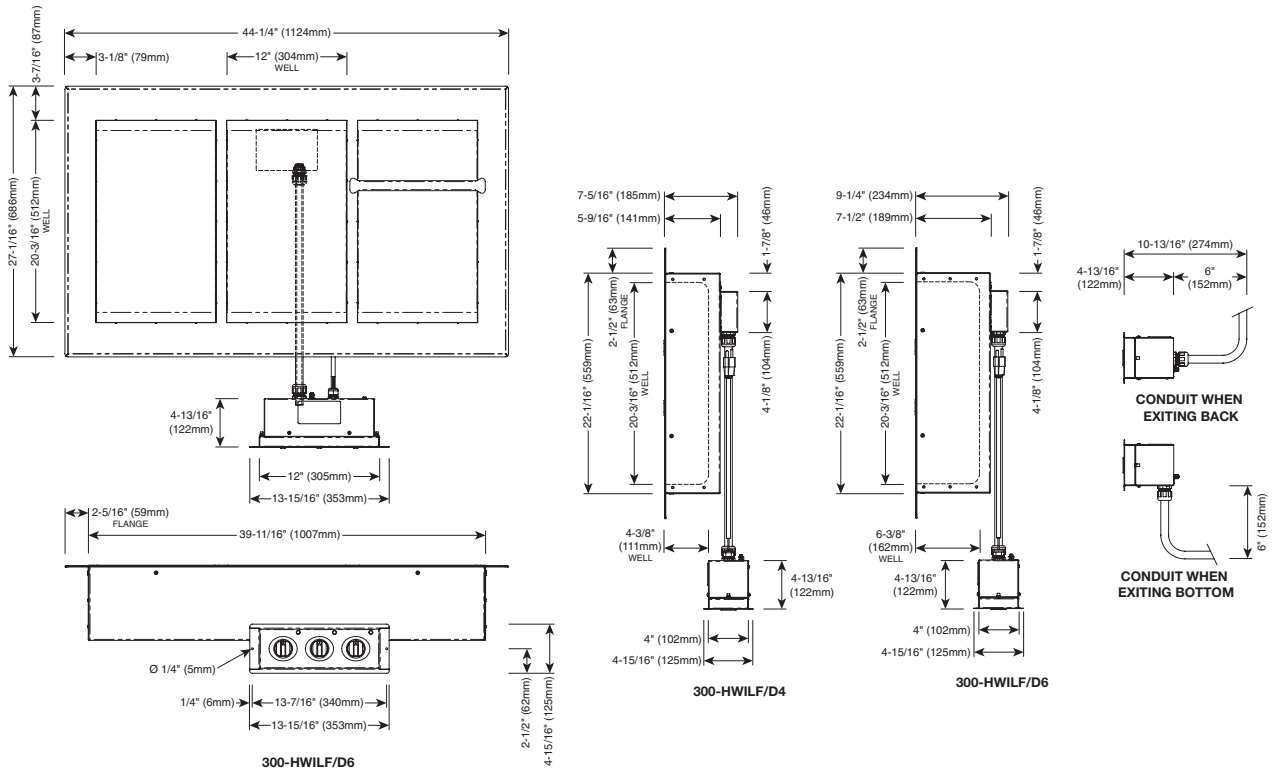


INSTALLATION

DIMENSIONS


400-HW/D4 & 400-HW/D6

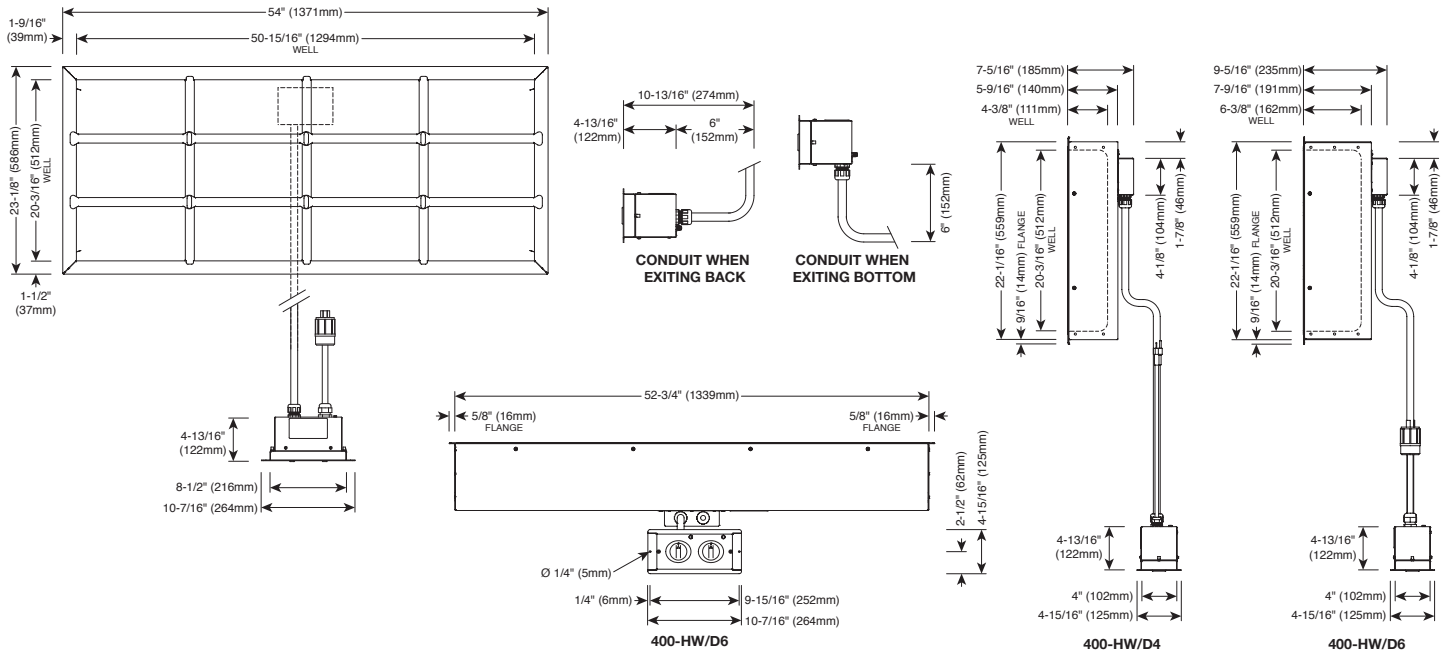

400-HWLF/D4 & 400-HWLF/D6

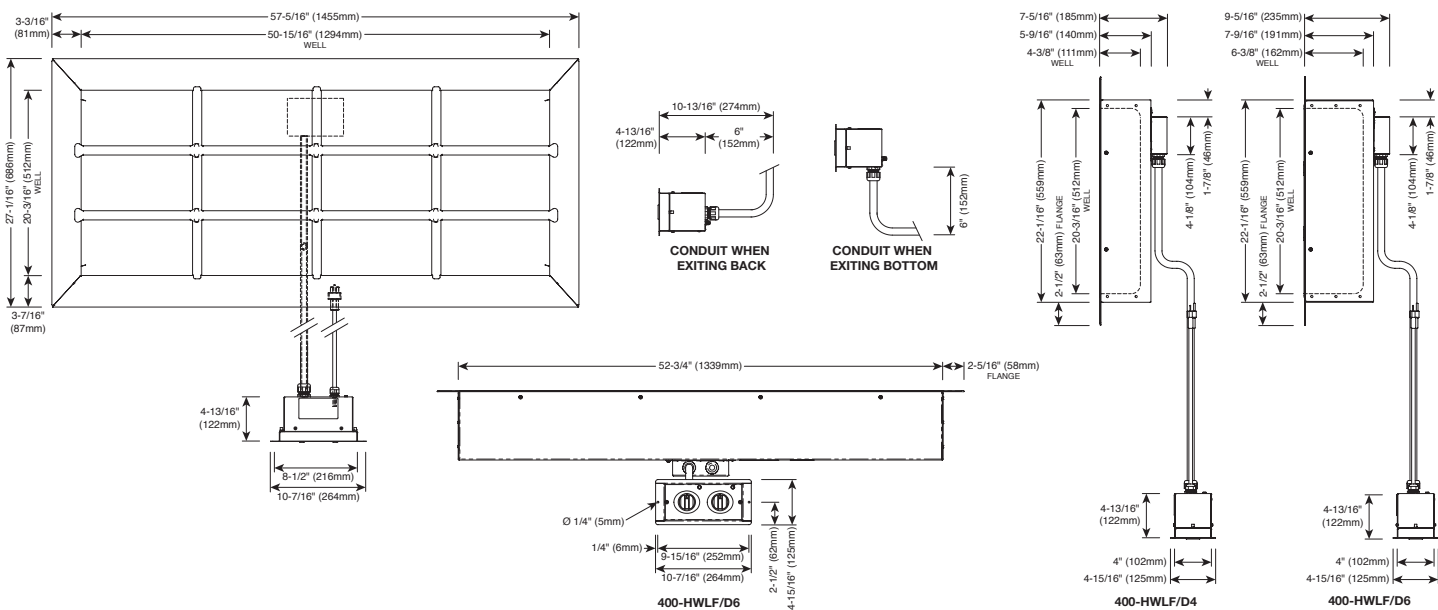


400-HWI/D4 & 400-HWI/D6

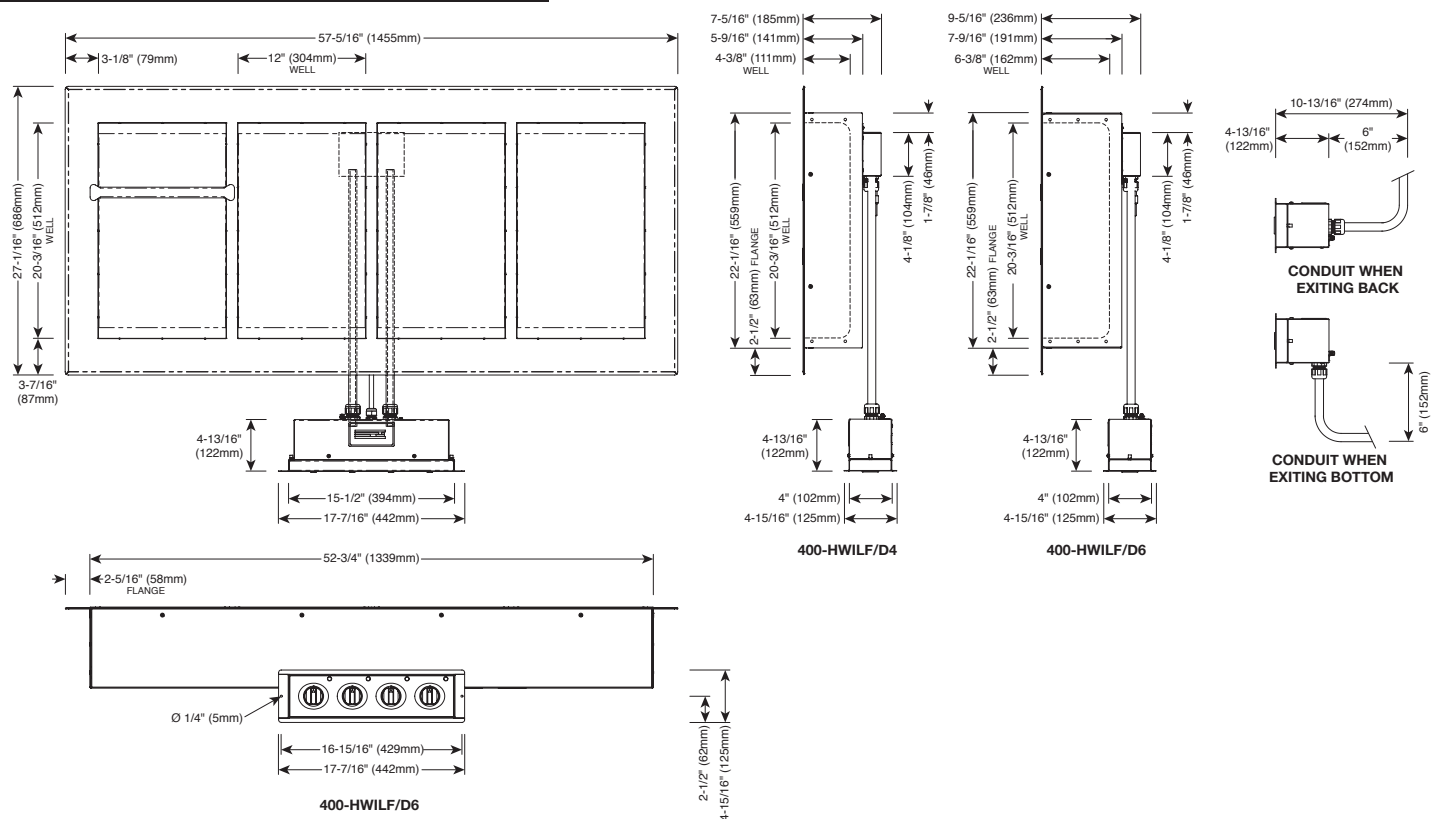


INSTALLATION

DIMENSIONS

500-HW/D4 & 500-HW/D6

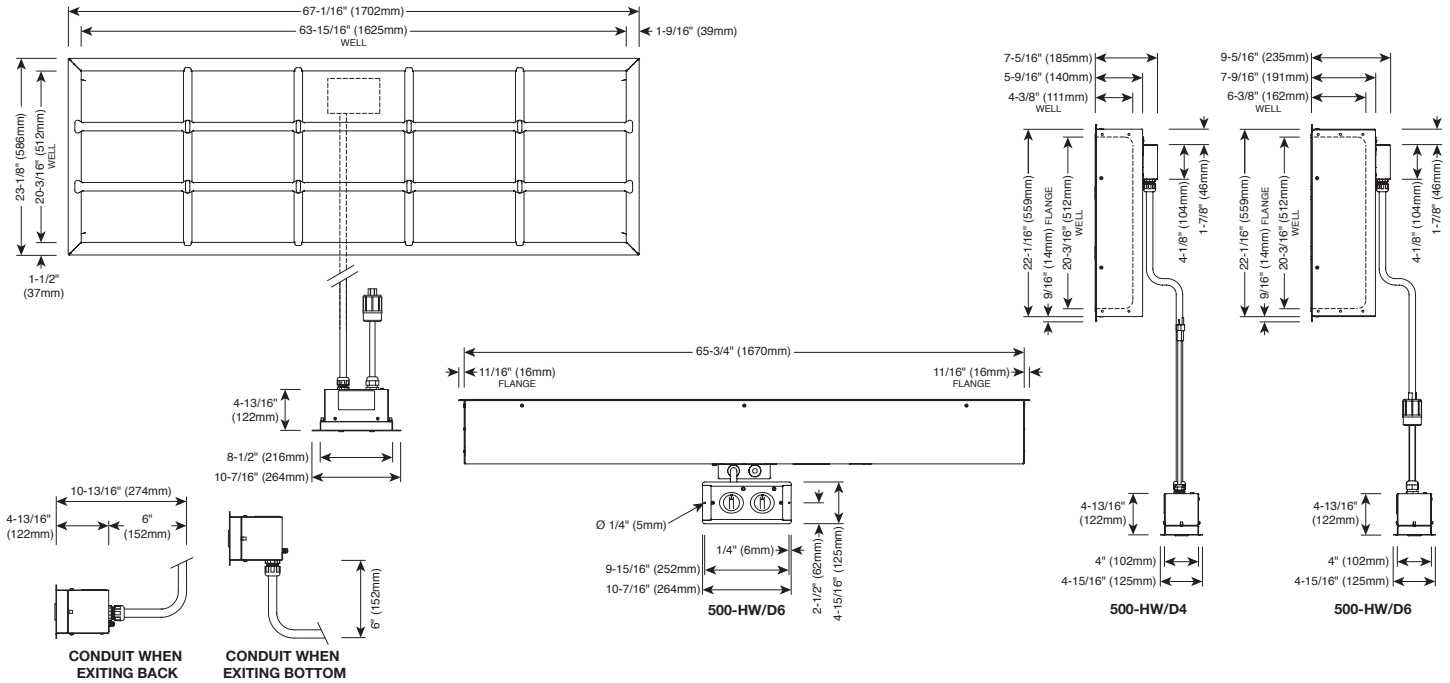


500-HWLF/D4 & 500-HWLF/D6

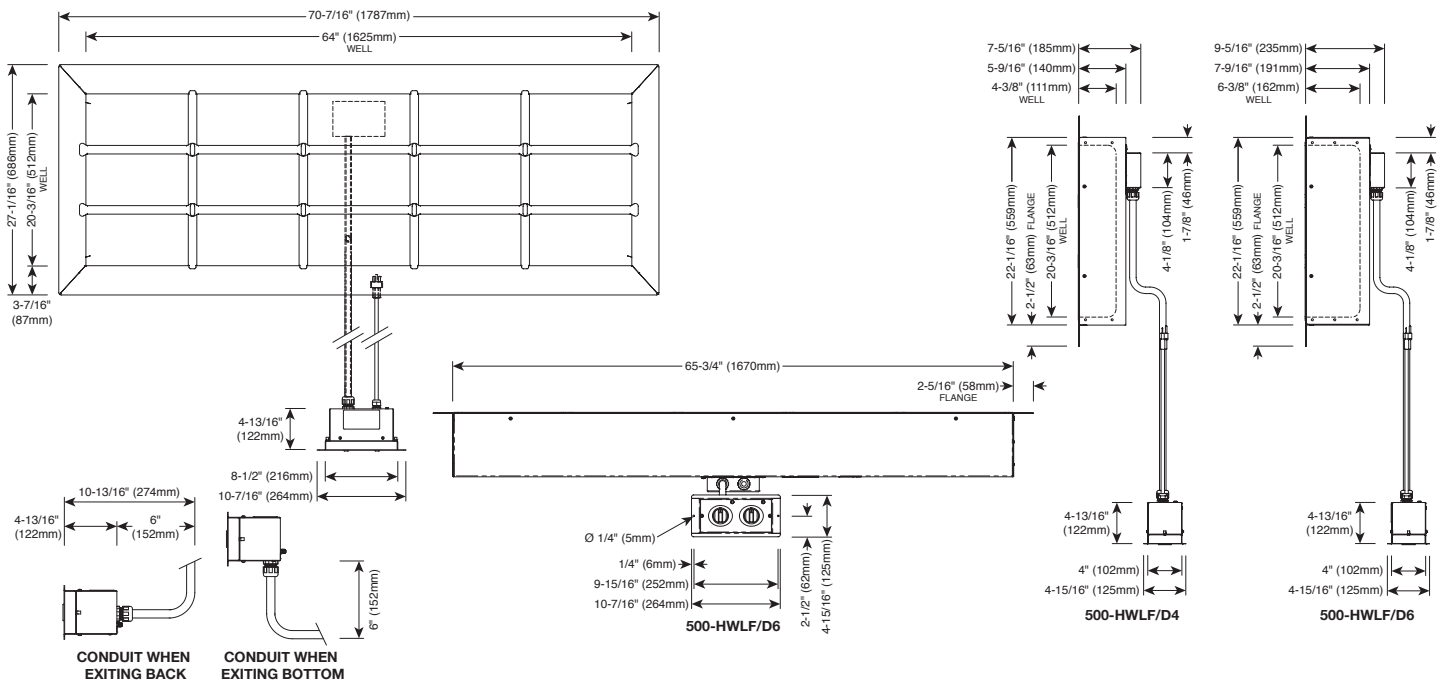


INSTALLATION

DIMENSIONS

500-HWI/D4 & 500-HWI/D6

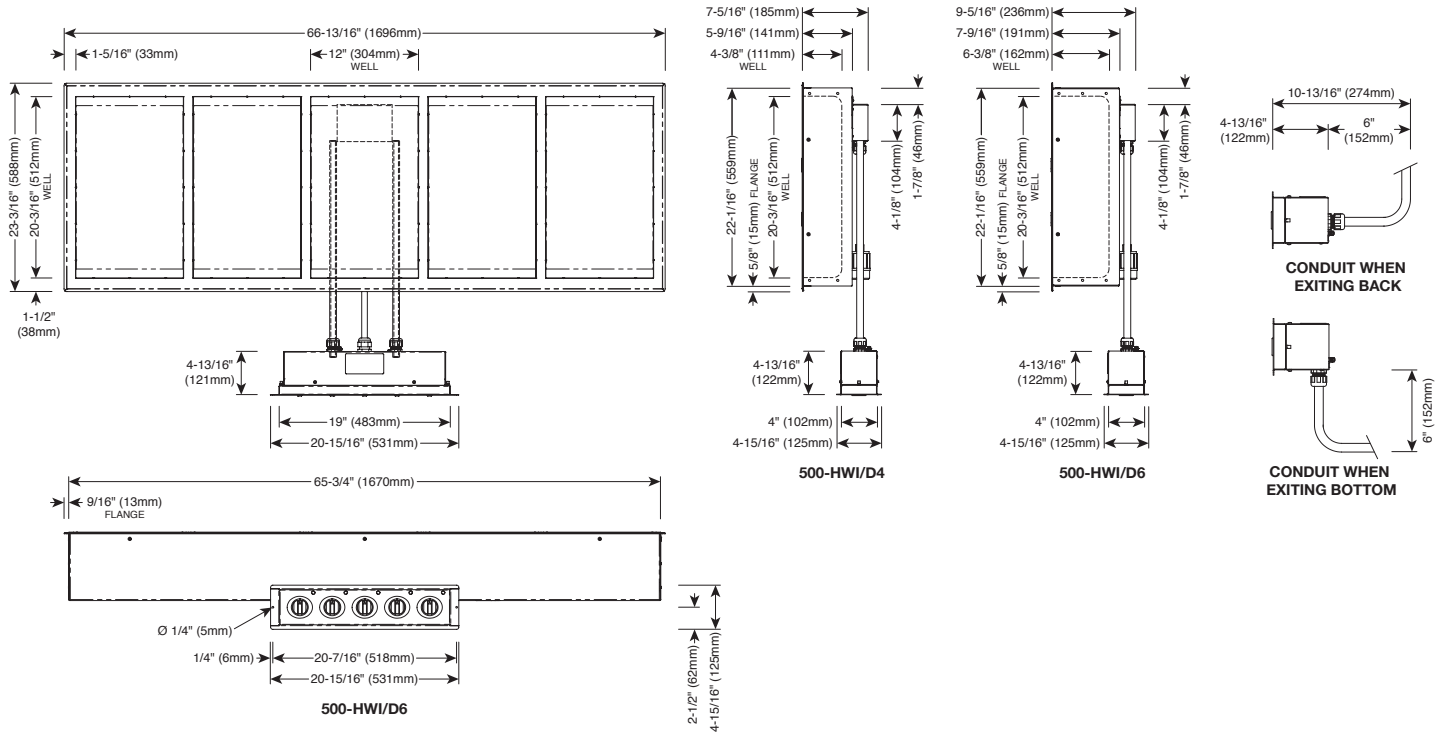

500-HWILF/D4 & 500-HWILF/D6

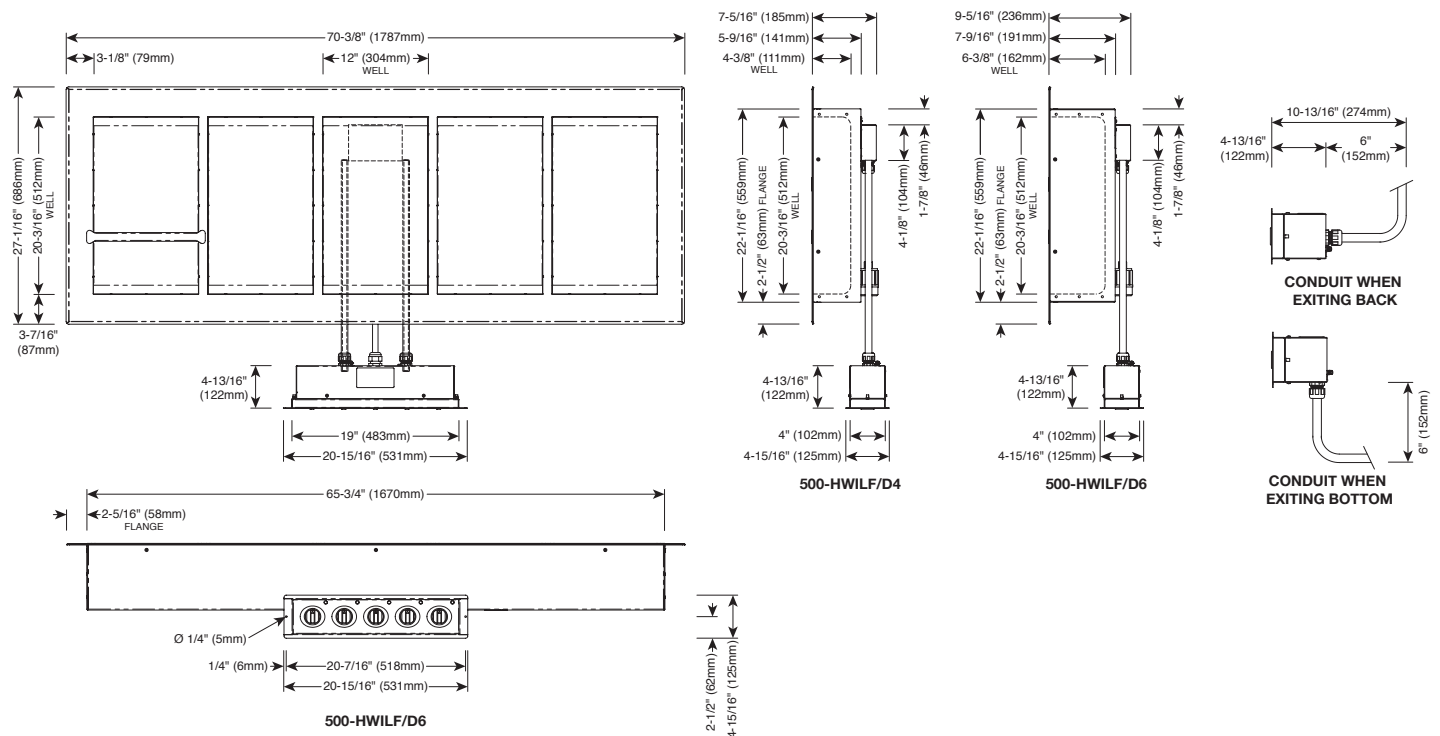


INSTALLATION

ROUGH CUT OPENINGS

MODEL	COUNTER CUTOUT (W x D)	CONTROL BOX CUTOUT* (H x W x D)
100-HW/D4 or D6 ONE FULL-SIZE 100-HWLF/D4 or D6 ONE FULL-SIZE	14-1/4" x 22-1/2" (363mm x 572mm)	4-1/4" x 5-1/4" x 10-13/16" (108mm x 133mm x 274mm)
100-HW/D443 or D643 ONE FULL & ONE THIRD-SIZE PAN	14-1/4" x 29-1/2" (363mm x 749mm)	4-1/4" x 5-1/4" x 10-13/16" (108mm x 133mm x 274mm)
200-HW/D4 or D6 TWO FULL-SIZE PANS 200-HWLF/D4 or D6 TWO FULL-SIZE PANS	27" x 22-1/2" (686mm x 572mm)	4-1/4" x 5-1/4" x 10-13/16" (108mm x 133mm x 274mm)
200-HW/D443 or D643 TWO FULL & TWO THIRD-SIZE PANS	27" x 29-1/2" (686mm x 749mm)	4-1/4" x 5-1/4" x 10-13/16" (108mm x 133mm x 274mm)
200-HWI/D4 or D6 TWO FULL-SIZE PANS 200-HWILF/D4 or D6 TWO FULL-SIZE PANS	27" x 22-1/2" (686mm x 572mm)	4-1/4" x 8-3/4" x 10-13/16" (108mm x 222mm x 274mm)
200-HWI/D443 or D643 TWO FULL & TWO THIRD-SIZE PANS	27" x 29-1/2" (686mm x 749mm)	4-1/4" x 8-3/4" x 10-13/16" (108mm x 222mm x 274mm)
300-HW/D4 or D6 THREE FULL-SIZE PANS 300-HWLF/D4 or D6 THREE FULL-SIZE PANS	40" x 22-1/2" (1016mm x 572mm)	4-1/4" x 5-1/4" x 10-13/16" (108mm x 133mm x 274mm)
300-HW/D443 or D643 THREE FULL & THREE THIRD-SIZE PANS	40" x 29-1/2" (1016mm x 749mm)	4-1/4" x 5-1/4" x 10-13/16" (108mm x 133mm x 274mm)
300-HWI/D4 or D6 THREE FULL-SIZE PANS 300-HWILF/D4 or D6 THREE FULL-SIZE PANS	40" x 22-1/2" (1016mm x 572mm)	4-1/4" x 12-1/4" x 10-13/16" (108mm x 311mm x 274mm)
300-HWI/D443 or D643 THREE FULL & THREE THIRD-SIZE PANS	40" x 29-1/2" (1016mm x 749mm)	4-1/4" x 12-1/4" x 10-13/16" (108mm x 311mm x 274mm)
400-HW/D4 or D6 FOUR FULL-SIZE PANS 400-HWLF/D4 or D6 FOUR FULL-SIZE PANS	53-1/8" x 22-1/2" (1350mm x 572mm)	4-1/4" x 8-3/4" x 10-13/16" (108mm x 222mm x 274mm)
400-HWI/D4 or D6 FOUR FULL-SIZE PANS 400-HWILF/D4 or D6 FOUR FULL-SIZE PANS	53-1/8" x 22-1/2" (1350mm x 572mm)	4-1/4" x 15-3/4" x 10-13/16" (108mm x 400mm x 274mm)
500-HW/D4 or D6 FIVE FULL-SIZE PANS 500-HWLF/D4 or D6 FIVE FULL-SIZE PANS	66-1/4" x 22-1/2" (1683mm x 572mm)	4-1/4" x 8-3/4" x 10-13/16" (108mm x 222mm x 274mm)
500-HWI/D4 or D6 FIVE FULL-SIZE PANS 500-HWILF/D4 or D6 FIVE FULL-SIZE PANS	66-1/4" x 22-1/2" (1683mm x 572mm)	4-1/4" x 19-1/4" x 10-13/16" (108mm x 489mm x 274mm)

INSTALLATION

CONTROL CONDUIT

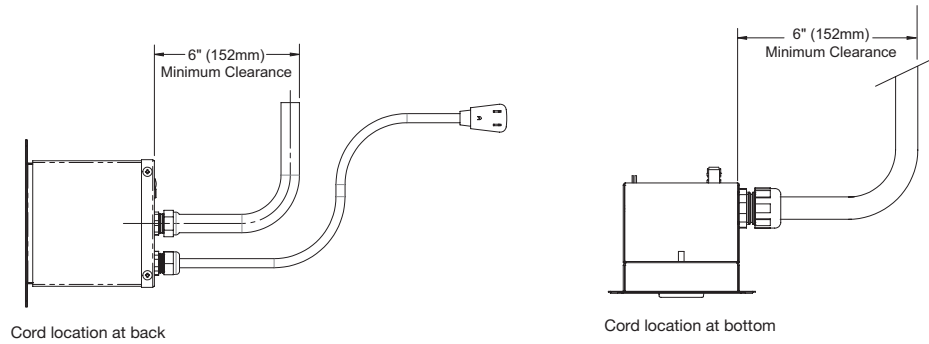

***Allow a minimum of 6" (152mm) clearance from back/bottom of control box to tether bend**


PRODUCT\PAN CAPACITY (BASED ON 4" DEEP PANS)

	Max. Capacity		Max. Volume		Full-Size Pans* 12" x 20" x 4" GN 1/1 (530 x 325 x 100mm)	Half-Size Pans* 12" x 10" x 4" GN 1/2 (265 x 325 x 100mm)	Third-Size Pans* 12" x 6" x 4" GN 1/3 (176 x 325 x 100mm)	
	D4	D443	D4	D443			D4	D443
100-HW/D4 & /D6, 100-HW/D443 & /D643, 100-HWLF/D4 & /D6	24 lb (11 kg)	32 lb (14.5 kg)	14.5 qt (14 L)	19.2 qt (17.8 L)	1	2	3	4
200-HW/D4 & /D6, 200-HW/D443 & /D643, 200-HWLF/D4 & /D6, 200-HWI/D4 & /D6, 200-HWI/D443 & D643, 200-HWILF/D4 & /D6	48 lb (22 kg)	64 lb (29 kg)	29 qt (28 L)	37.8 qt (35.5 L)	2	4	6	8
300-HW/D4 & /D6, 300-HW/D443 & /D643, 300-HWLF/D4 & /D6, 300-HWI/D4 & /D6, 300-HWI/D443 & /D643, 300-HWILF/D4 & /D6	72 lb (33 kg)	96 lb (43.5 kg)	43.5 qt (42 L)	56.6 qt (53.3 L)	3	6	9	12
400-HW/D4 & /D6, 400-HWLF/D4 & /D6, 400-HWI/D4 & /D6, 400-HWILF/D4 & /D6	96 lb (44 kg)	—	58 qt (56 L)	—	4	8	12	—
500-HW/D4 & /D6, 500-HWLF/D4 & /D6, 500-HWI/D4 & /D6, 500-HWILF/D4 & /D6	120 lb (54 kg)	—	72.5 qt (70 L)	—	5	10	15	—

*WILL ALSO ACCEPT 2-1/2" (65mm) DEEP PANS; D6 UNITS WILL ACCEPT 6" (150mm) DEEP PANS

INSTALLATION

REMOTE CONTROL HOUSING MOUNTING INSTRUCTIONS

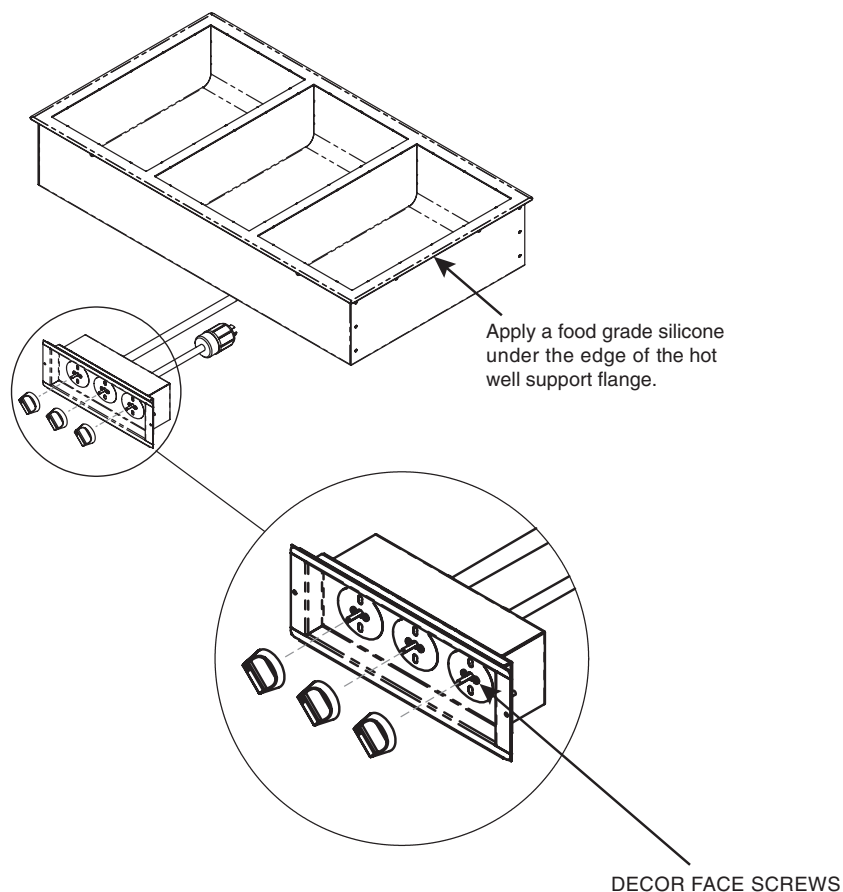

1. Cut an appropriate sized opening in the location where the control is to be positioned. **See chart on page 13 for cutout size.**
2. Thoroughly clean and dry the mounting surface around the control cut-out opening on which the décor face will be applied.
NOTE: The control face will not properly adhere to an unclean surface.
3. Remove the knob(s) from the thermostat(s) by pulling knob away from control. Remove the décor face from the unit by removing the two (2) screws located to the right and left of the thermostat.
4. Route control housing through opening cut in step 1. Secure the décor face housing to the control housing using the screws removed in step 3.
5. Remove the protective film from the mounting tape on the inside flanges of the décor face and apply the décor face to the mounting surface. Two holes are provided in décor face for additional mounting screws (not provided) if desired.
6. Reattach the knob(s) to the thermostat(s).

INSTALLATION

ELECTRICAL CONNECTION

1. An identification tag is permanently mounted on the appliance.
2. This appliance is equipped with a three-prong grounding plug. For your protection against shock hazard this appliance should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug. Plug the unit into a properly grounded receptacle **ONLY**, positioning the unit so that the plug is easily accessible in case of an emergency. Arcing will occur when connecting or disconnecting the unit unless all controls are in the "OFF" position.
3. Proper receptacle or outlet configuration or permanent wiring for this unit must be installed by a licensed electrician in accordance with applicable local electrical codes.



For CE approved units: To prevent an electrical shock hazard between the appliance and other appliances or metal parts in close vicinity, an equalization-bonding stud is provided. An equalization bonding lead must be connected to this stud and the other appliances/metal parts to provide sufficient protection against potential difference. The terminal is marked with the following symbol.



NOTE: Where local codes and CE regulatory requirements apply, appliances must be connected to an electrical circuit that is protected by an external GFCI outlet.

DANGER



Ensure power source matches voltage identified on appliance rating tag. The rating tag provides essential technical information required for any appliance installation, maintenance or repairs. Do not remove, damage or modify the rating tag.

DANGER



Electrical connections must be made by a qualified and trained service technician in accordance with applicable electrical codes. Failure to observe this precaution may result in electrical shock, fire, damage to the appliance or personal injury.

DANGER










This appliance MUST be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.

Failure to observe this precaution may damage the appliance, result in electrical shock, fire or personal injury.

INSTALLATION

ELECTRICAL

ELECTRICAL SPECIFICATIONS (Refer to the wire diagrams sent with the unit)

1 Phase, 50/60 Hz									
Voltage	Amps	kW	NEMA 5-15P 15A-125V PLUG	NEMA 5-20P 20A-125V PLUG	NEMA L5-30P 30A-125V PLUG	NEMA 6-15P 15A-250V PLUG	CEE 7/7 PLUG RATED 250V	CH2-16P PLUG RATED 250V	BS1363 PLUG RATED 250V
100-HW/D4, /D6									
120V	5.0	0.6	✓						
208V	2.2	0.5				✓			
240V	2.5	0.6							
230V	2.6	0.6					✓	✓	✓
100-HW/D443, /D663									
120V	6.8	0.8	✓						
208V	2.9	0.6				✓			
240V	3.4	0.8							
230V	3.5	0.8					✓	✓	✓
200-HW/D4, /D6 & 200-HWI/D4, /D6									
120V	10.0	1.2	✓						
208V	4.3	0.9				✓			
240V	5.0	1.2							
230V	5.2	1.2					✓	✓	✓
200-HW/D443, /D643 & 200-HWI/D443, /D643									
120V	13.5	1.6		✓					
208V	5.8	1.6				✓			
240V	6.8	1.6							
230V	6.5	1.6					✓	✓	✓
300-HW/D4, /D6, 300-HWLF/D4, /D6, 300-HWI/D4, /D6, & 300-HWILF/D4, /D6									
120V	15.0	1.8		✓					
208V	6.5	1.4				✓			
240V	7.5	1.8							
230V	7.8	1.8					✓	✓	✓
300-HW/D443, /D663 & 300-HWI/D443, /D643									
120V	20.3	2.4			✓				
208V	8.8	1.8				✓			
240V	10.1	2.4							
230V	10.6	2.4					✓	✓	✓
400-HW/D4, /D6, 400-HWLF/D4, /D6, 400-HWI/D4, /D6, & 400-HWILF/D4, /D6									
120V	20.0	2.4			✓				
208V	8.7	1.8				✓			
240V	10.0	2.4							
230V	10.4	2.4					✓	✓	✓
500-HW/D4, /D6, 500-HWLF/D4, /D6, 500-HWI/D4, /D6, & 500-HWILF/D4, /D6									
120V	25.0	3.0			✓				
208V	10.8	2.3				✓			
240V	12.5	3.0							
230V	13.0	3.0					✓	✓	✓

Power cord minimum length: 60" (1524mm)

OPERATING INSTRUCTIONS

1. DO NOT ADD WATER TO HOT WELL

Halo Heat® hot wells maintain a constant and gentle temperature. **Adding water is not recommended** since water will accelerate the deterioration of the product and may damage the unit voiding the warranty.


2. PLACE PAN DIVIDERS AND EMPTY PANS IN THE WELLS

NOTE: No matter what type of pan configuration chosen, pan separator bars or divider bars must be used to close all gaps between pans, and all gaps between the pans and the edges of the wells. If these gaps are not closed, heat will escape, heat distribution will be uneven, and uniform temperature will be difficult to maintain.

This is a VERY important requirement to follow whenever this appliance is in use.

3. PREHEAT

A preheat step is now built into the new control. If you want to hold at setting #4, set dial to #4. The unit will automatically preheat for a predetermined time and then begins to cycle on and off based on the setting selected. The pilot light (green) is "on" whenever the dial is turned to a number.

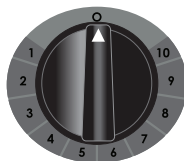

4. LOAD HOT FOODS INTO THE APPLIANCE

After preheating, place hot foods into the preheated pans located in the appliance or exchange the pans with pre-filled product pans. This appliance is designed for the purpose of hot food holding. Only hot foods should be placed into the unit. Potentially hazardous foods should be held in the unit at setting 10. If lower settings are used, ensure the food has maintained safe food temperatures. Lower settings should be tested by user to ensure food has maintained safe food temperatures between 140° and 160°F (60° and 71°C).




All pan divider bars required must be utilized at all times with the pan configuration chosen. Before loading food into the unit, use a pocket-type thermometer to make certain all products have reached an internal temperature of 140° to 180°F (60° to 82°C). If any food product is not at proper serving temperature, use a Halo Heat cooking and holding oven, set at 250° to 275°F (121° to 135°C), or a Combitherm oven to bring the product within the correct temperature range.

5. RESET THERMOSTAT(S) AS NEEDED

After all products are loaded into the unit, it is necessary to reset the thermostat(s). Since proper temperature range depends on the type of products and the quantities being held, it is necessary to periodically use a pocket thermometer to check each item to make certain the correct temperatures are being maintained. Proper temperature range is between a minimum of 140° and 180°F (60° and 82°C).

6. TO MAINTAIN PROPER FOOD TEMPERATURE, OVERHEAD HEATING IS REQUIRED.

CAUTION	
	METAL PARTS OF THIS EQUIPMENT BECOME EXTREMELY HOT WHEN IN OPERATION. TO AVOID BURNS, ALWAYS USE HAND PROTECTION WHEN OPERATING THIS APPLIANCE.

7. SERVE FRESH, HOT FOOD

Keep hot foods looking fresh. Occasionally stir or rotate food as needed. Wipe spills immediately to ensure maximum eye appeal and to ease end of day cleanup.

GENERAL HOLDING GUIDELINES

Chefs, cooks and other specialized food service personnel employ varied methods of cooking. Proper holding temperatures for a specific food product must be based on the moisture content of the product, product density, volume, and proper serving temperatures. Safe holding temperatures must also be correlated with palatability in determining the length of holding time for a specific product.

Halo Heat maintains the maximum amount of product moisture content without the addition of water, water vapor, or steam. Maintaining maximum natural product moisture preserves the natural flavor of the product and provides a more genuine taste. In addition to product moisture retention, the gentle properties of Halo Heat maintain a consistent temperature throughout the cabinet without the necessity of a heat distribution fan, thereby preventing further moisture loss due to evaporation or dehydration.

When product is removed from a high temperature cooking environment for immediate transfer into equipment with the lower temperature required for hot food holding, condensation can form on the outside of the product and on the inside of plastic containers used in self-service applications. Allowing the product to release the initial steam and heat produced by high temperature cooking can alleviate this condition. To preserve the safety and quality of freshly cooked foods however, a maximum of 1 to 2 minutes must be the only time period allowed for the initial heat to be released from the product.

Most Halo Heat holding equipment is provided with a thermostat control between 60° and 200°F (16° to 93°C). If the unit is equipped with vents, close the vents for moist holding and open the vents for crisp holding.

If the unit is equipped with a thermostat indicating a range of between 1 and 10, use a metal-stemmed indicating thermometer to measure the internal temperature of the product(s) being held. Adjust the thermostat setting to achieve the best overall setting based on internal product temperature.

HOLDING TEMPERATURE RANGE		
MEAT	FAHRENHEIT	CELSIUS
BEEF ROAST — Rare	130°F	54°C
BEEF ROAST — Med/Well Done	155°F	68°C
BEEF BRISKET	160° — 175°F	71° — 79°C
CORN BEEF	160° — 175°F	71° — 79°C
PASTRAMI	160° — 175°F	71° — 79°C
PRIME RIB — Rare	130°F	54°C
STEAKS — Broiled/Fried	140° — 160°F	60° — 71°C
RIBS — Beef or Pork	160°F	71°C
VEAL	160° — 175°F	71° — 79°C
HAM	160° — 175°F	71° — 79°C
PORK	160° — 175°F	71° — 79°C
LAMB	160° — 175°F	71° — 79°C
POULTRY		
CHICKEN — Fried/Baked	160° — 175°F	71° — 79°C
DUCK	160° — 175°F	71° — 79°C
TURKEY	160° — 175°F	71° — 79°C
GENERAL	160° — 175°F	71° — 79°C
FISH/SEAFOOD		
FISH — Baked/Fried	160° — 175°F	71° — 79°C
LOBSTER	160° — 175°F	71° — 79°C
SHRIMP — Fried	160° — 175°F	71° — 79°C
BAKED GOODS		
BREADS/ROLLS	120° — 140°F	49° — 60°C
MISCELLANEOUS		
CASSEROLES	160° — 175°F	71° — 79°C
DOUGH — Proofing	80° — 100°F	27° — 38°C
EGGS — Fried	150° — 160°F	66° — 71°C
FROZEN ENTREES	160° — 175°F	71° — 79°C
HORS D'OEUVRES	160° — 180°F	71° — 82°C
PASTA	160° — 180°F	71° — 82°C
PIZZA	160° — 180°F	71° — 82°C
POTATOES	180°F	82°C
PLATED MEALS	140° — 165°F	60° — 74°C
SAUCES	140° — 200°F	60° — 93°C
SOUP	140° — 200°F	60° — 93°C
VEGETABLES	160° — 175°F	71° — 79°C
THE HOLDING TEMPERATURES LISTED ARE SUGGESTED GUIDELINES ONLY. ALL FOOD HOLDING SHOULD BE BASED ON INTERNAL PRODUCT TEMPERATURES. ALWAYS FOLLOW LOCAL HEALTH (HYGIENE) REGULATIONS FOR ALL INTERNAL TEMPERATURE REQUIREMENTS.		



CLEANING AND PREVENTATIVE MAINTENANCE

PROTECTING STAINLESS STEEL SURFACES



It is important to guard against corrosion in the care of stainless steel surfaces. Harsh, corrosive, or inappropriate chemicals can completely destroy the protective surface layer of stainless steel. Abrasive pads, steel wool, or metal implements will abrade surfaces causing damage to this protective coating and will eventually result in areas of corrosion. Even water, particularly hard water that contains high to moderate concentrations of chloride, will cause oxidation and pitting that result in rust and corrosion. In addition, many acidic foods spilled and left to remain on metal surfaces are contributing factors that will corrode surfaces.

Proper cleaning agents, materials, and methods are vital to maintaining the appearance and life of this appliance. Spilled foods should be removed and the area wiped as soon as possible but at the very least, a minimum of once a day. Always thoroughly rinse surfaces after using a cleaning agent and wipe standing water as quickly as possible after rinsing.

CLEANING AGENTS

Use non-abrasive cleaning products designed for use on stainless steel surfaces. Cleaning agents must be chloride-free compounds and must not contain quaternary salts. Never use hydrochloric acid (muriatic acid) on stainless steel surfaces. Always use the proper cleaning agent at the manufacturer's recommended strength. Contact your local cleaning supplier for product recommendations.

CLEANING MATERIALS

The cleaning function can usually be accomplished with the proper cleaning agent and a soft, clean cloth. When more aggressive methods must be employed, use a non-abrasive scouring pad on difficult areas and make certain to scrub with the visible grain of surface metal to avoid surface scratches. Never use wire brushes, metal scouring pads, or scrapers to remove food residue.

 CAUTION	
  	TO PROTECT STAINLESS STEEL SURFACES, COMPLETELY AVOID THE USE OF ABRASIVE CLEANING COMPOUNDS, CHLORIDE BASED CLEANERS, OR CLEANERS CONTAINING QUATERNARY SALTS. NEVER USE HYDROCHLORIC ACID (MURIATIC ACID) ON STAINLESS STEEL. NEVER USE WIRE BRUSHES, METAL SCOURING PADS OR SCRAPERS.

CARE AND CLEANING



The cleanliness and appearance of this appliance will contribute considerably to operating efficiency and savory, appetizing food. Good equipment kept clean works better and lasts longer.



DANGER



Disconnect unit from power source before cleaning or servicing. Failure to observe this precaution can cause electrical shock and personal injury.

NOTE: Always allow the appliance to cool before cleaning.

CLEAN THE APPLIANCE DAILY.

DANGER	
	AT NO TIME SHOULD THE INTERIOR OR EXTERIOR BE STEAM CLEANED, HOSED DOWN, OR FLOODED WITH WATER OR LIQUID SOLUTION OF ANY KIND. DO NOT USE WATER JET TO CLEAN.
	SEVERE DAMAGE OR ELECTRICAL HAZARD COULD RESULT. WARRANTY BECOMES VOID IF APPLIANCE IS FLOODED

NOTE: Completely avoid the use of abrasive cleaning compounds, chloride-based cleaners, or cleaners containing quaternary salts. To protect metal finish on stainless steel, never use hydrochloric acid (muriatic acid).



INTERIOR:



1. Disconnect appliance from the power source. Let unit cool.
2. After the appliance has cooled, remove all detachable items such as pans and divider bars. Clean these items separately.
3. Remove any food scraps.
4. Wipe the interior metal surfaces with a paper towel to remove any remaining food debris.
5. Clean interior with a damp cloth or sponge and any good commercial detergent at the recommended strength.
6. For baked-on food deposits, use a non-caustic and non-toxic commercial oven cleaner appropriate for the interior surface. Follow the product manufacturer's instructions carefully for the use of this product. Any commercial oven cleaner must be approved for use on food contact areas. Remove soil with the use of a plastic scouring pad.
7. Rinse surfaces by wiping with a clean cloth or sponge and clean warm water.
8. Remove excess water with a sponge and wipe dry with a clean cloth or air dry. Leave area open until interior is completely dry. Replace divider bars and pans.
9. Interior can be wiped with a sanitizing solution after cleaning and rinsing. This solution must be approved for use on stainless steel food contact surfaces.

DO NOT USE ABRASIVE CLEANING COMPOUNDS.

Always follow appropriate state or local health (hygiene) regulations regarding all applicable cleaning and sanitation requirements for food service equipment.

SANITATION

Food flavor and aroma are usually so closely related that it is difficult, if not impossible, to separate them. There is also an important, inseparable relationship between cleanliness and food flavor. Cleanliness, top operating efficiency, and appearance of equipment contribute considerably to savory, appetizing foods. Good equipment that is kept clean, works better and lasts longer.

Most food imparts its own particular aroma and many foods also absorb existing odors. Unfortunately, during this absorption there is not distinction between GOOD and BAD odors. The majority of objectionable flavors and odors troubling food service operations are caused by bacteria growth. Sourness, rancidity, mustiness, stale or other OFF flavors are usually the result of germ activity.

The easiest way to insure full, natural food flavor is through comprehensive cleanliness. This means good control of both visible soil (dirt) and invisible soil (germs). A thorough approach to sanitation will provide essential cleanliness. It will assure an attractive appearance of equipment, along with maximum efficiency and utility. More importantly, a good sanitation program provides one of the key elements in the prevention of food-borne illnesses.

A controlled holding environment for prepared foods is just one of the important factors involved in the prevention of food-borne illnesses. Temperature monitoring and control during receiving, storage, preparation, and the service of foods are of equal importance.

The most accurate method of measuring safe temperatures of both hot and cold foods is by internal product temperature. A quality thermometer is an effective tool for this purpose, and should be routinely used on all products that require holding at a specific temperature.

A comprehensive sanitation program should focus on the training of staff in basic sanitation procedures. This includes personal hygiene, proper handling of raw foods, cooking to a safe internal product temperature, and the routine monitoring of internal temperatures from receiving through service.

Most food-borne illnesses can be prevented through proper temperature control and a comprehensive program of sanitation. Both these factors are important to build quality service as the foundation of customer satisfaction. Safe food handling practices to prevent food-borne illness is of critical importance to the health and safety of your customers.


HACCP, an acronym for Hazard Analysis (at) Critical Control Points, is a quality control program of operating procedures to assure food integrity, quality, and safety. Taking steps necessary to augment food safety practices is both cost effective and relatively simple. While HACCP guidelines go far beyond the scope of this manual, additional information is available by contacting:

**CENTER FOR FOOD SAFETY AND APPLIED
NUTRITION FOOD AND DRUG ADMINISTRATION
1-888-SAFEFOOD**

INTERNAL FOOD PRODUCT TEMPERATURES		
HOT FOODS		
DANGER ZONE	40° TO 140°F	(4° TO 60°C)
CRITICAL ZONE	70° TO 120°F	(21° TO 49°C)
SAFE ZONE	140° TO 165°F	(60° TO 74°C)
COLD FOODS		
DANGER ZONE	ABOVE 40°F	(ABOVE 4°C)
SAFE ZONE	36° TO 40°F	(2° TO 4°C)
FROZEN FOODS		
DANGER ZONE	ABOVE 32°F	(ABOVE 0°C)
CRITICAL ZONE	0° TO 32°F	(-18° TO 0°C)
SAFE ZONE	0°F or below	(-18°C or below)

SERVICE

CONTROL SERVICE VIEW (100-HW SHOWN)

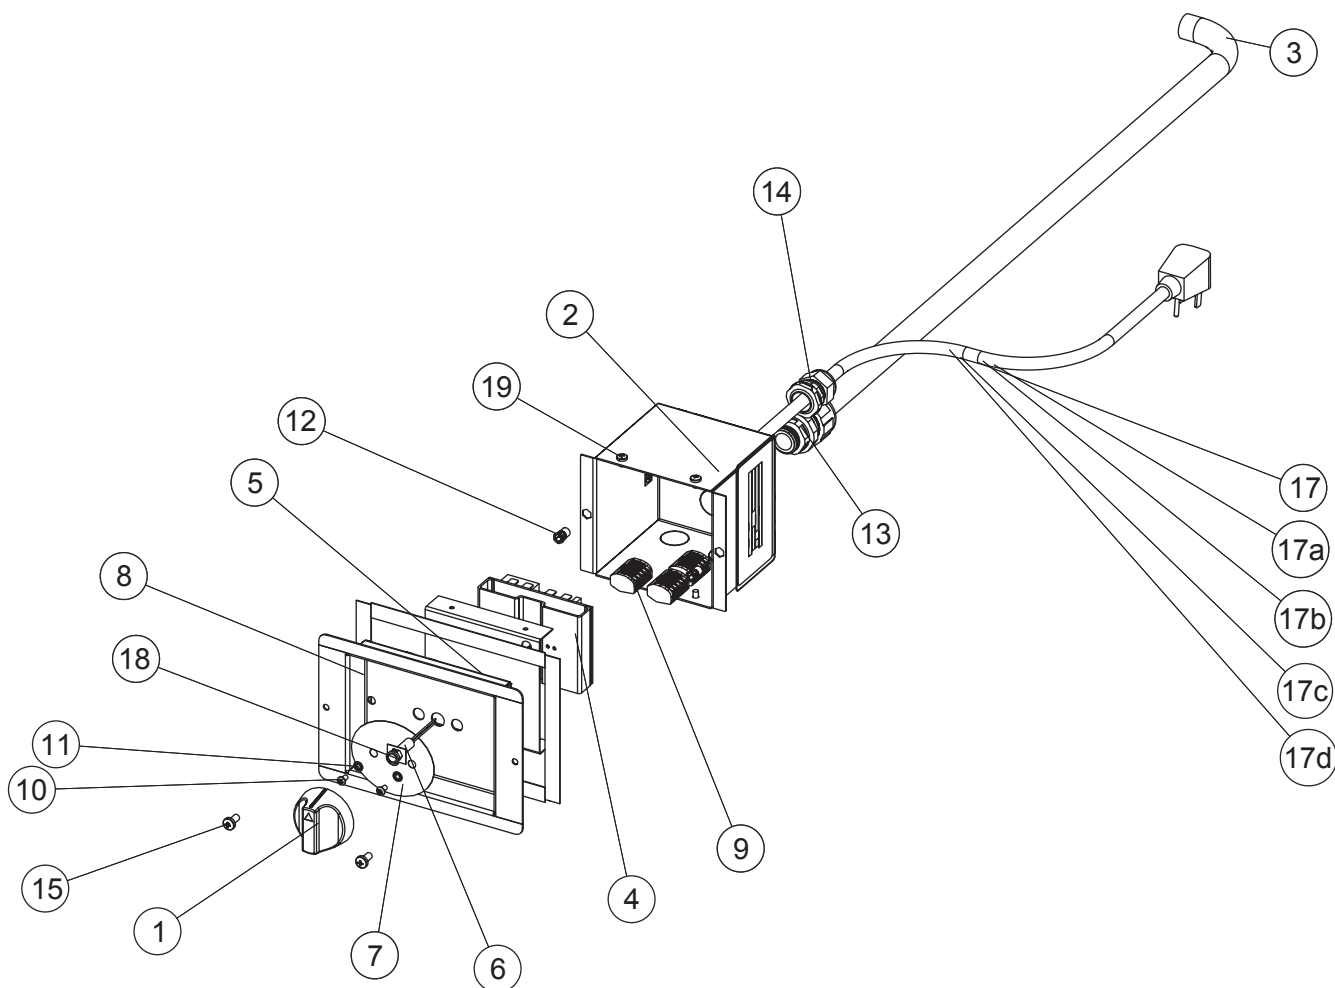


Item	Part	Description	Qty
1	KN-36424	KNOB, T-STAT CONTROL	1
2	1015723	SHELL, CONTROL POD, 1 KNOB	1
3	TU-33178	CONDUIT, FLEXIBLE, 6 FT	1
4	CC-36859	CONTROL	1
5	1017287	PLATE, FACE	1
6	LI-37215	LIGHT, INDICATOR	1
7	PE-36566	PANEL OVERLAY, CONTROL	1
8	TA-24637	TAPE, VHB, FOAM, 1/2" WIDE	1
9	CR-34646	CONNECTOR-5 CONDUCTOR	3
10	SC-22500	SCREW 6-32 x 1/4" PAN HD	2
11	WS-2768	WASHER, #6, LOCK	2
12	NU-23909	NUT, HEX INSERT M5	2

Item	Part	Description	Qty
13	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
14	BU-3964	BUSHING, STRAIGHT, STRAIN RELIEF	1
15	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2
17	CD-3232	CORDSET, 14/3 SJTOW, 125V	1
17a	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
17b	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
17c	CD-33840	CORDSET 15A 208-240V	1
17d	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
18	CL-37245	CLIP, LIGHT MOUNTING	1
19	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4

Part numbers and drawings are subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (100-HW SHOWN)

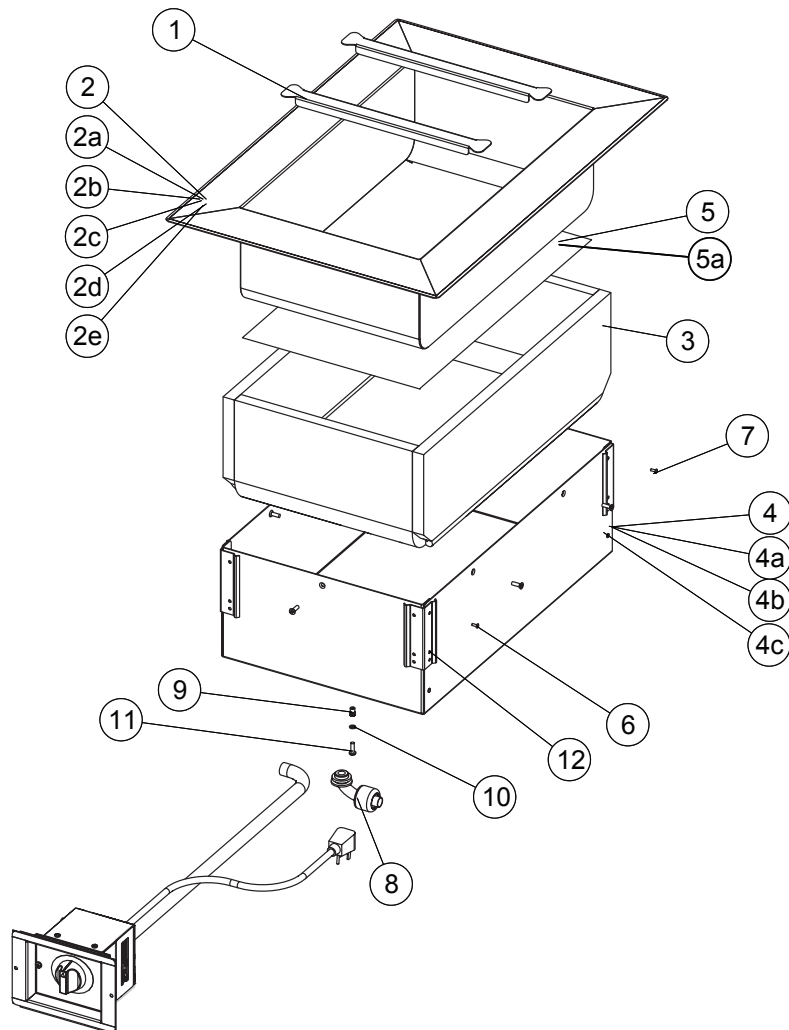


Item	Part	Description	Qty
1	11318	DIVIDER, PAN, SHORT	2
2	5017271	WELDMENT, D6, STD FLANGE	1
2a	5017613	WELDMENT, D4, STD FLANGE	1
2b	5017684	WELDMENT, D643, STD FLANGE	1
2c	5017703	WELDMENT, D6, WIDE FLANGE	1
2d	5017708	WELDMENT, D4, WIDE FLANGE	1
2e	5018740	WELL SPOT, D443, STD FLANGE	1
3	IN-24588	INSULATION	1
4	1015827	WRAPPER, 1 WELL, 6" DEEP	1
4a	1016193	WRAPPER, 1 WELL, 4" DEEP	1
4b	1016204	WRAPPER, 1 WELL, 6" DEEP, 4/3 MODEL	1

Item	Part	Description	Qty
4c	1016200	WRAPPER, 1 WELL, 4" DEEP, 4/3 MODEL	1
5	EL-36317	ELEMENT, HEATING PAD	1
5a	EL-36860	ELEMENT, HEATING PAD, 4/3 MODEL	1
6	RI-27108	RIVET, SEALED	8
7	SC-22281	SCREW, M5 x 0.8 x 16mm FLAT	6
8	CR-33179	CONNECTOR FLEX NYLON SWEEP	1
9	NU-23909	NUT, HEX INSERT M5	1
10	WS-22301	WASHER, M5 SPLIT LOCK	1
11	SC-36973	SCREW, PAN PH, METRIC, M5	1
12	1017049	BRACKET, STANDOFF, 230V ONLY	4

Part numbers and drawings are subject to change without notice.

SERVICE

CONTROL SERVICE VIEW (200-HW SHOWN)

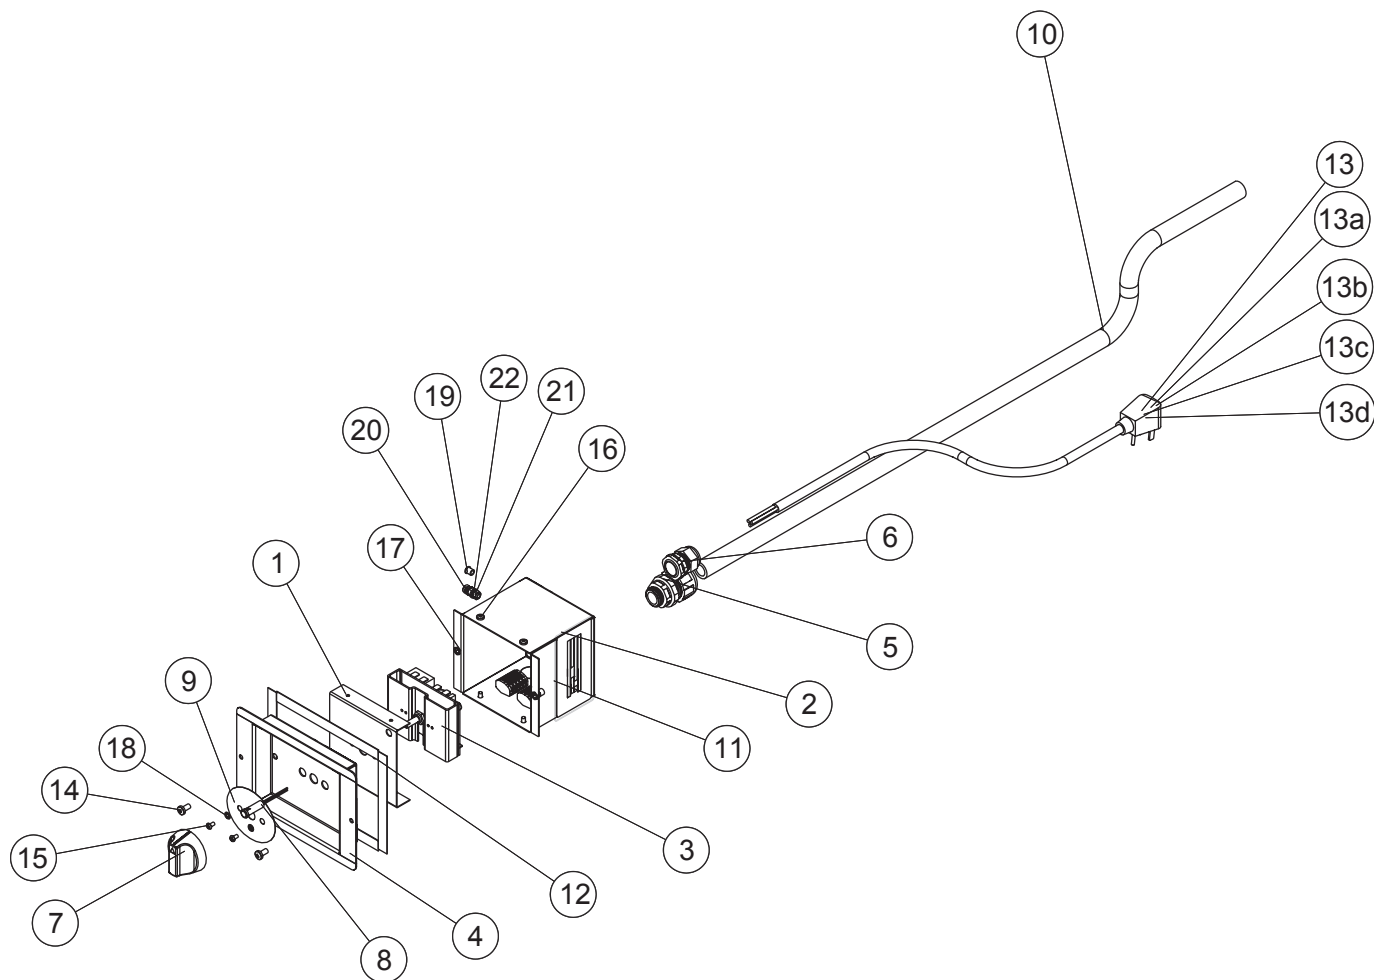


Item	Part	Description	Qty
1	1017287	PLATE, FACE	1
2	1017303	SHELL, CONTROL POD DEEP, 1 KNOB	1
3	CC-36859	CONTROL	1
4	1015805	BOX, REMOTE, DECOR FACE, 1 KNOB	1
5	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
6	BU-3964	BUSHING, STRAIGHT, STRAIN RELIEF	1
7	KN-36424	KNOB, T-STAT CONTROL	1
8	LI-37215	LIGHT, INDICATOR	1
9	PE-36566	PANEL OVERLAY	1
10	TU-33178	CONDUIT FLEX LIQUID TIGHT, 3'	1
11	CR-34646	CONNECTOR-5 CONDUCTOR	3
12	TA-24637	TAPE, VHB, FOAM, 1/2"	4
13	CD-3232	CORDSET, 14/3 SJTOW, 125V	1
13a	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1

Item	Part	Description	Qty
13b	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
13c	CD-33840	CORDSET 15A 208-240V	1
13d	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
14	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2
15	SC-22500	SCREW 6-32 X 1/4" PAN HD	2
16	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4
17	NU-23909	NUT, HEX INSERT M5	2
18	WS-2768	WASHER, #6, LOCK	2
19	PG-35411	1/4" HOLE PLUG	1
20	SC-22926	SCREW, M5 x 0.8 x 16mm HEX	1
21	NU-36234	NUT, M5, KEPS	2
22	WS-22295	WASHER, FLAT M5 S/S	1

Part numbers and drawings are subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (200-HW SHOWN)

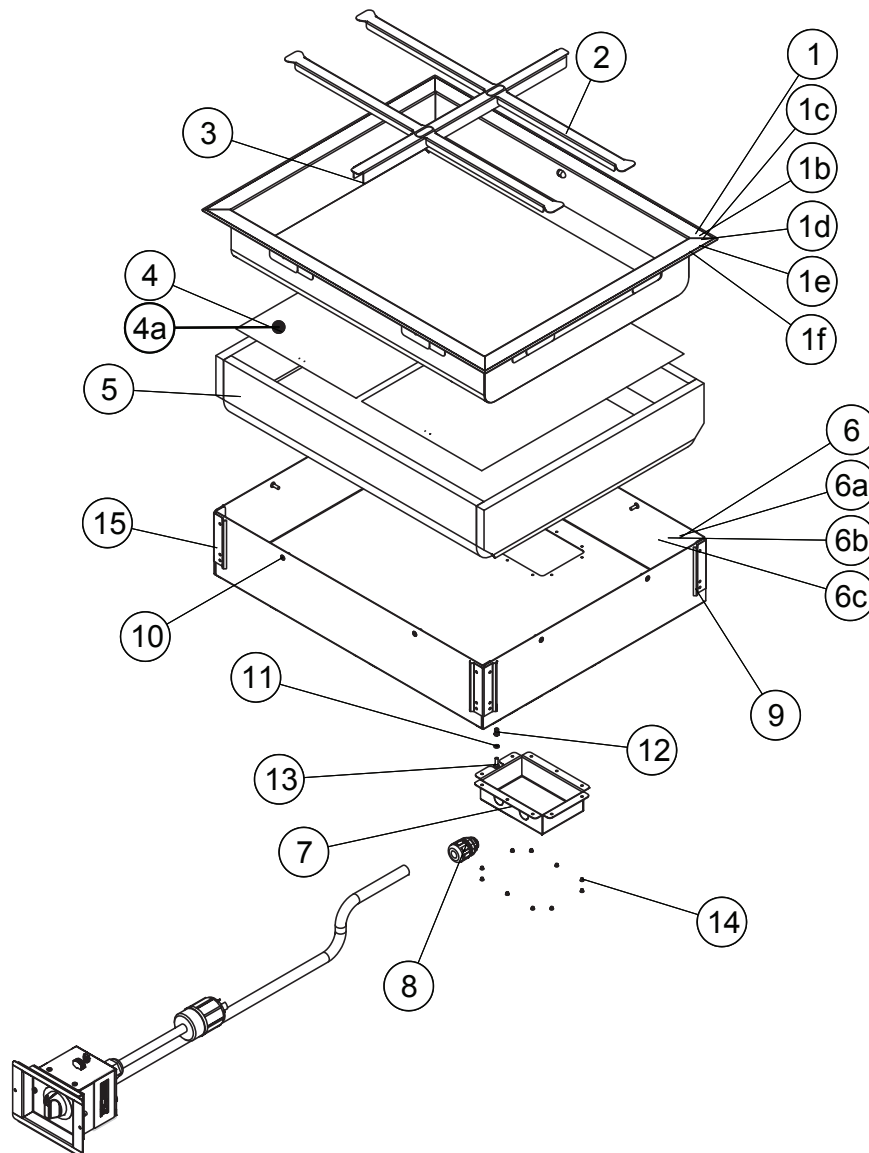


Item	Part	Description	Qty
1	5018588	WELL, D4, STD	1
1b	5018589	WELL, D6, STD FLANGE	1
1c	5018590	WELL, D4, WIDE FLANGE	1
1d	5018591	WELL, D6, WIDE FLANGE	1
1e	5018695	WELL, D443, STD FLANGE	1
1f	5018696	WELL, D643, STD FLANGE	1
2	11318	DIVIDER, PAN, SHORT	4
3	16019	DIVIDER, PAN	1
4	EL-36317	ELEMENT, HEATING PAD	2
4a	EL-36860	ELEMENT, HEATING PAD, 4/3 MODEL	1
5	IN-24588	INSULATION	1
6	1015828	WRAPPER, 2 WELL, 6" DP	1
6a	1016194	WRAPPER, 2 WELL, 4" DP	1

Item	Part	Description	Qty
6b	1017333	WRAPPER, 2 WELL, 6" DP, 4/3 MODEL	1
6c	1017334	WRAPPER, 2 WELL, 4" DP, 4/3 MODEL	1
7	1016034	BOX, CONNECTION	1
8	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
9	R-27108	RIVET, SEALED	8
10	SC-22281	SCREW, M5 x 0.8 x 16mm FLAT	8
11	WS-22301	WASHER, M5 SPLIT LOCK	1
12	NU-23909	NUT, HEX INSERT M5	1
13	SC-36973	SCREW, PAN PH, METRIC, M5	1
14	RI-2097	#42 STAINLESS RIVET	10
15	1017049	BRACKET, STANDOFF, 230V ONLY	4

Part numbers and drawings are subject to change without notice.

SERVICE

CONTROL SERVICE VIEW (200-HWI SHOWN)

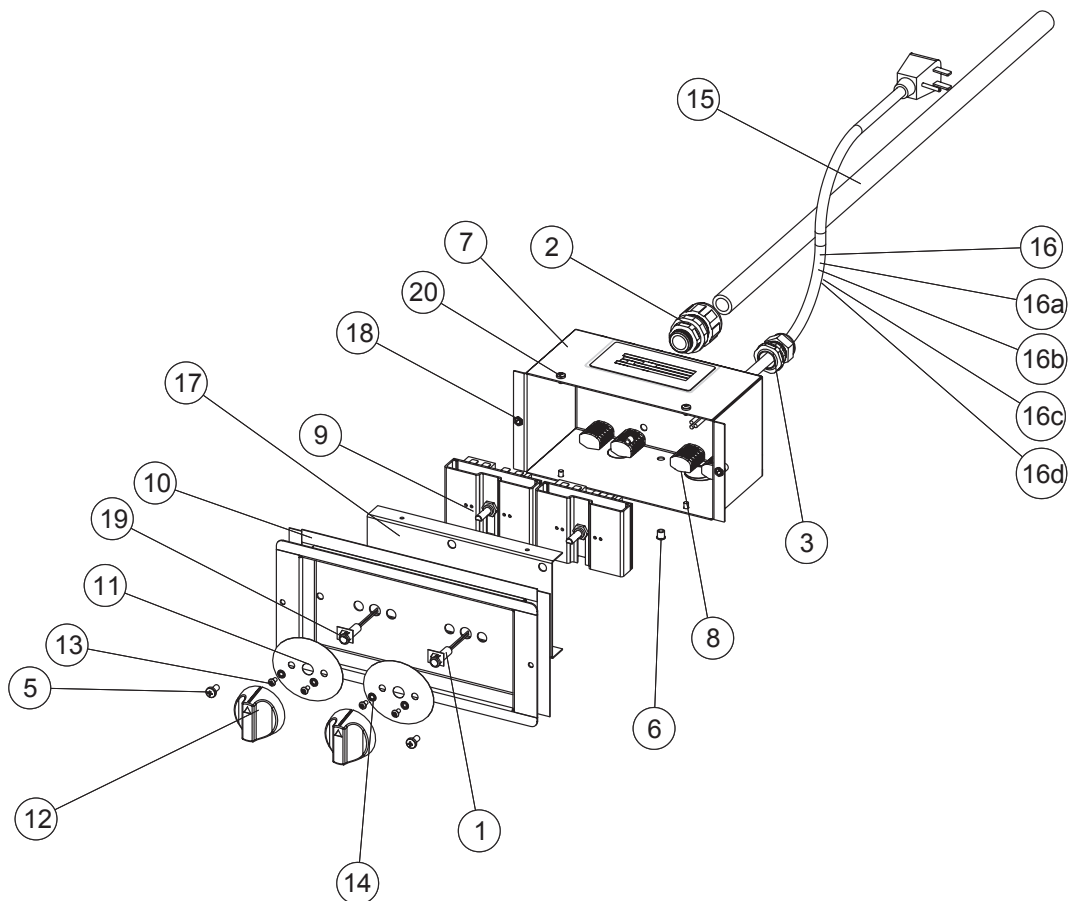


Item	Part	Description	Qty
1	LI-37215	LIGHT, INDICATOR	2
2	BU-34606	BUSHING, STRAIGHT, STRAINRELIE	1
3	BU-3964	BUSHING, STRAIGHT, STRAINRELIE	1
5	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2
6	PG-35411	1/4" HOLE PLUG	1
7	1015724	SHELL, CONTROL POD, 2 KNOB	1
8	CR-34646	CONNECTOR-5 CONDUCTOR	4
9	CC-36859	CONTROL, DETENT, 650F MAX	2
10	TA-24637	TAPE, VHB, FOAM, 1/2" x 9.4"	1
11	PE-36566	PANEL OVERLAY	2
12	KN-36424	KNOB, T-STAT CONTROL	2
13	SC-22500	SCREW, 6-32 x 1/4" PAN HEAD	4

Item	Part	Description	Qty
14	WS-2768	WASHER, #6, LOCKING SS	4
15	TU-33178	CONDUIT FLEX LIQUID TIGHT	1
16	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
16a	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
16b	CD-33840	CORDSET 15A 208-240V	1
16c	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
16d	CD-3232	CORDSET, 14/3 SJTOW, 125V	1
17	1017288	PLATE, FACE	1
18	NU-23909	NUT, HEX INSERT M5	2
19	CL-37245	CLIP, LIGHT MOUNTING	2
20	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4

Part numbers and drawings are subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (200-HWI SHOWN)

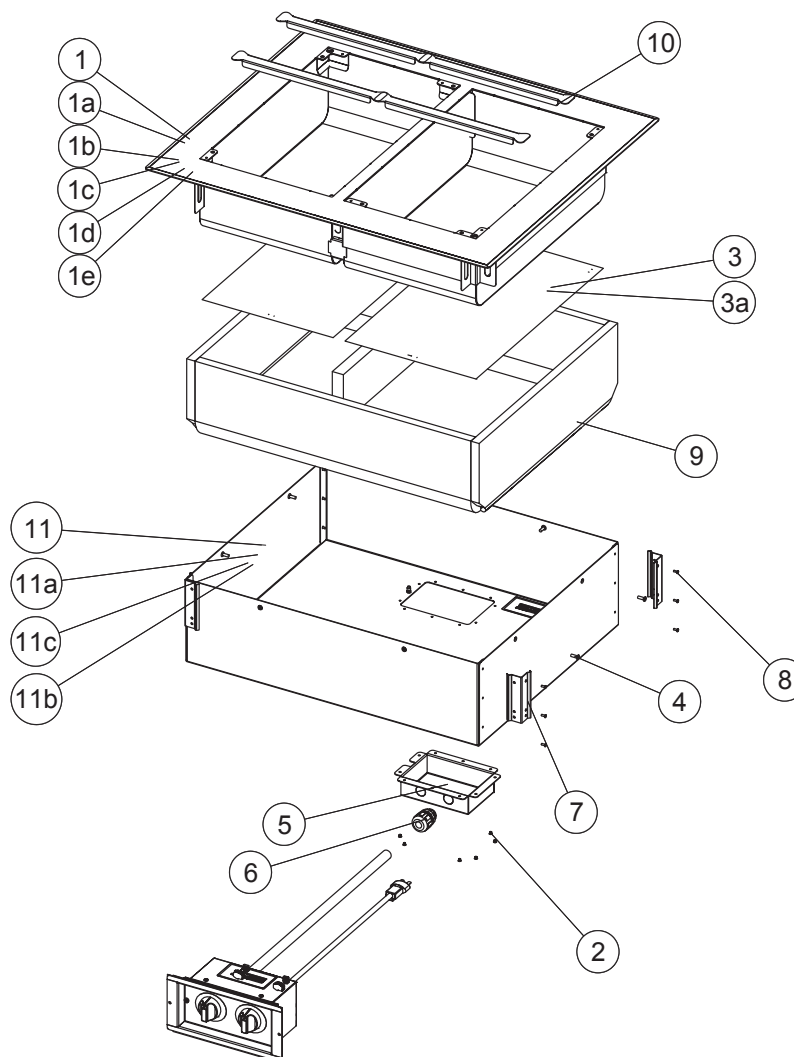


Item	Part	Description	Qty
1	5017704	WELDMENT, D6, WIDE FLANGE	1
1a	5017612	WELDMENT, D6, STD FLANGE	1
1b	5017709	WELDMENT, D4, WIDE FLANGE	1
1c	5017614	WELDMENT, D6, WIDE FLANGE	1
1d	5018690	WELDMENT, D643, STD FLANGE	1
1e	5018691	WELDMENT, D443, STD FLANGE	1
2	RI-2097	#42 STAINLESS RIVET	10
3	EL-36317	ELEMENT, FOIL HEATING PAD	2
3a	EL-36860	ELEMENT, HEATING PAD, 810W	2
4	SC-22281	SCREW, M5 x 0.8 x 16mm FLAT	6
5	1016034	BOX, CONNECTION	1

Item	Part	Description	Qty
6	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
7	1017049	BRACKET, STANDOFF, 230V ONLY	4
8	RI-27108	RIVET, SEALED	12
9	IN-24588	INSULATION	1
10	11318	DIVIDER, PAN, SHORT	4
11	1015828	WRAPPER, 2 WELL, 6" DEEP	1
11a	1016194	WRAPPER, 2 WELL, 4" DEEP	1
11b	1017333	WRAPPER, 2 WELL, 6" DEEP, 4/3 MODEL	1
11c	1017334	WRAPPER, 2 WELL, 4" DEEP, 4/3 MODEL	1

Part numbers and drawings are subject to change without notice.

SERVICE

CONTROL SERVICE VIEW (300-HW SHOWN)

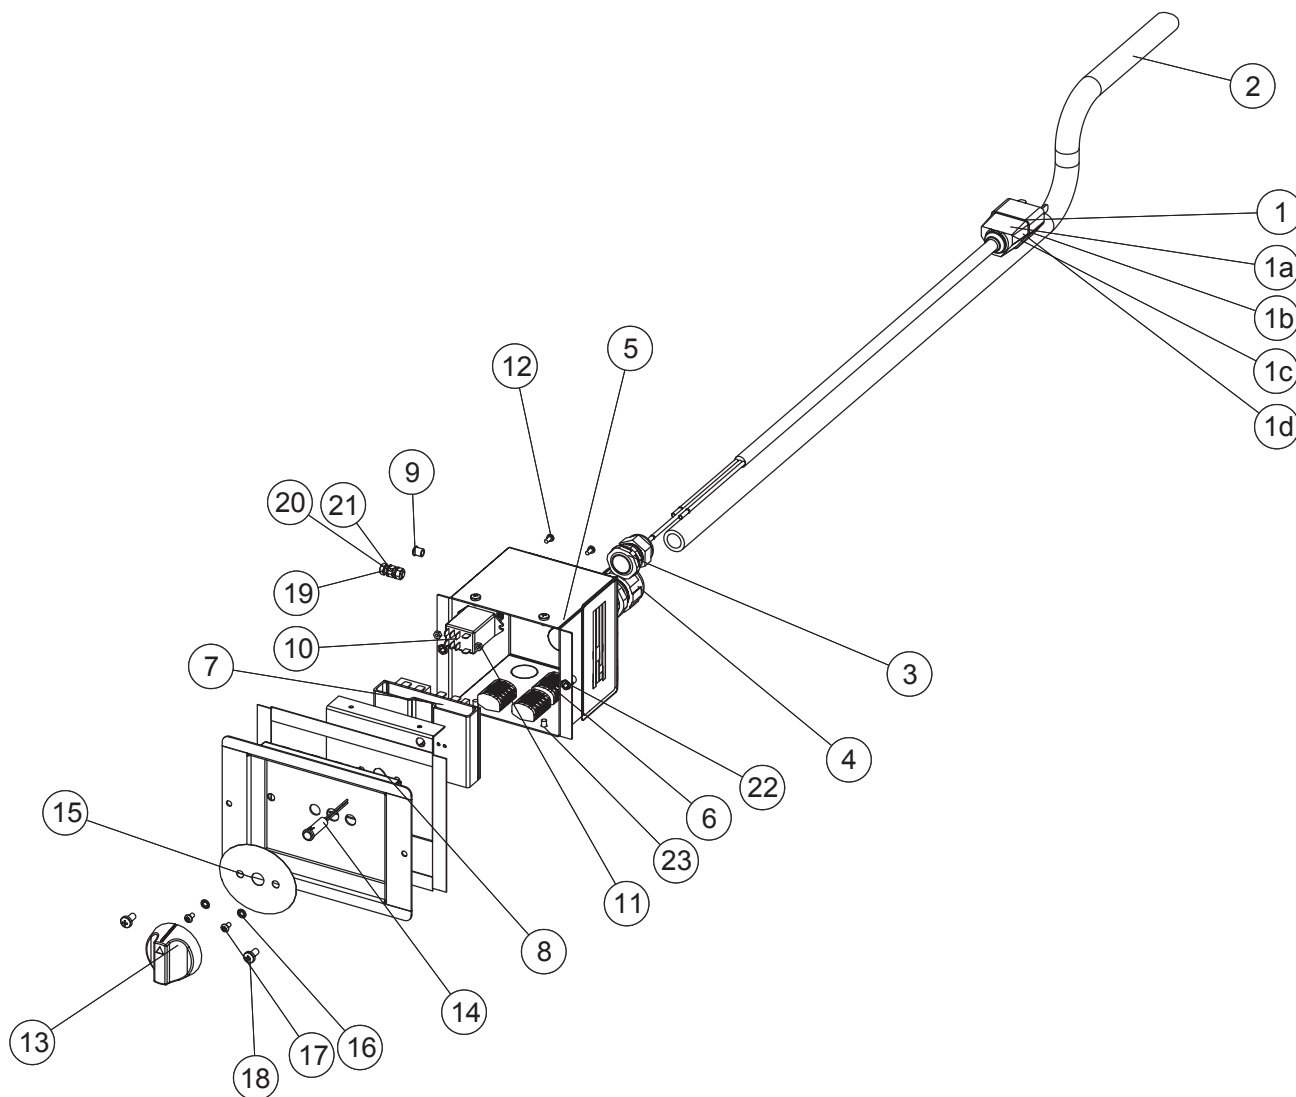


Item	Part	Description	Qty
1	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
1a	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
1b	5017529	NEMA 5-20P CORDSET FERRULE ASSEMBLY	1
1c	CD-33840	CORDSET 15A 208-240V	1
1d	CD-3922	CORDSET 16AWG, 3/C, INT'L HARM	1
2	TU-33178	CONDUIT FLEX LIQUID TIGHT, 3FT	1
3	BU-3964	BUSHING, STRAIGHT, STRAIN RELIEF	1
4	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
5	1017312	SHELL, CONTROL POD, 1 KNOB	1
6	CR-34646	CONNECTOR-5 CONDUCTOR	3
7	CC-36859	CONTROL	1
8	1017287	PLATE, FACE	1
9	PG-35411	1/4" HOLE PLUG	1
10	RL-34279	RELAY, 120V	1

Item	Part	Description	Qty
11	NU-22285	NUT, M3-0.5 HEX NUT	2
12	SC-22266	SCREW, M3 x 0.5 x 6mm PAN	2
13	KN-36424	KNOB, T-STAT CONTROL	1
14	LI-37215	LIGHT, INDICATOR	1
15	PE-36566	PANEL OVERLAY	1
16	WS-2768	WASHER, #6, LOCK	2
17	SC-22500	SCREW 6-32 x 1/4" PAN	2
18	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2
19	SC-22926	SCREW, M5 x 0.8 x 16mm HEX	1
20	NU-36234	NUT, M5, KEPS	2
21	WS-22295	WASHER, FLAT M5 S/S	1
22	NU-23909	NUT, HEX INSERT M5	2
23	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4

Part numbers and drawings are subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (300-HW SHOWN)

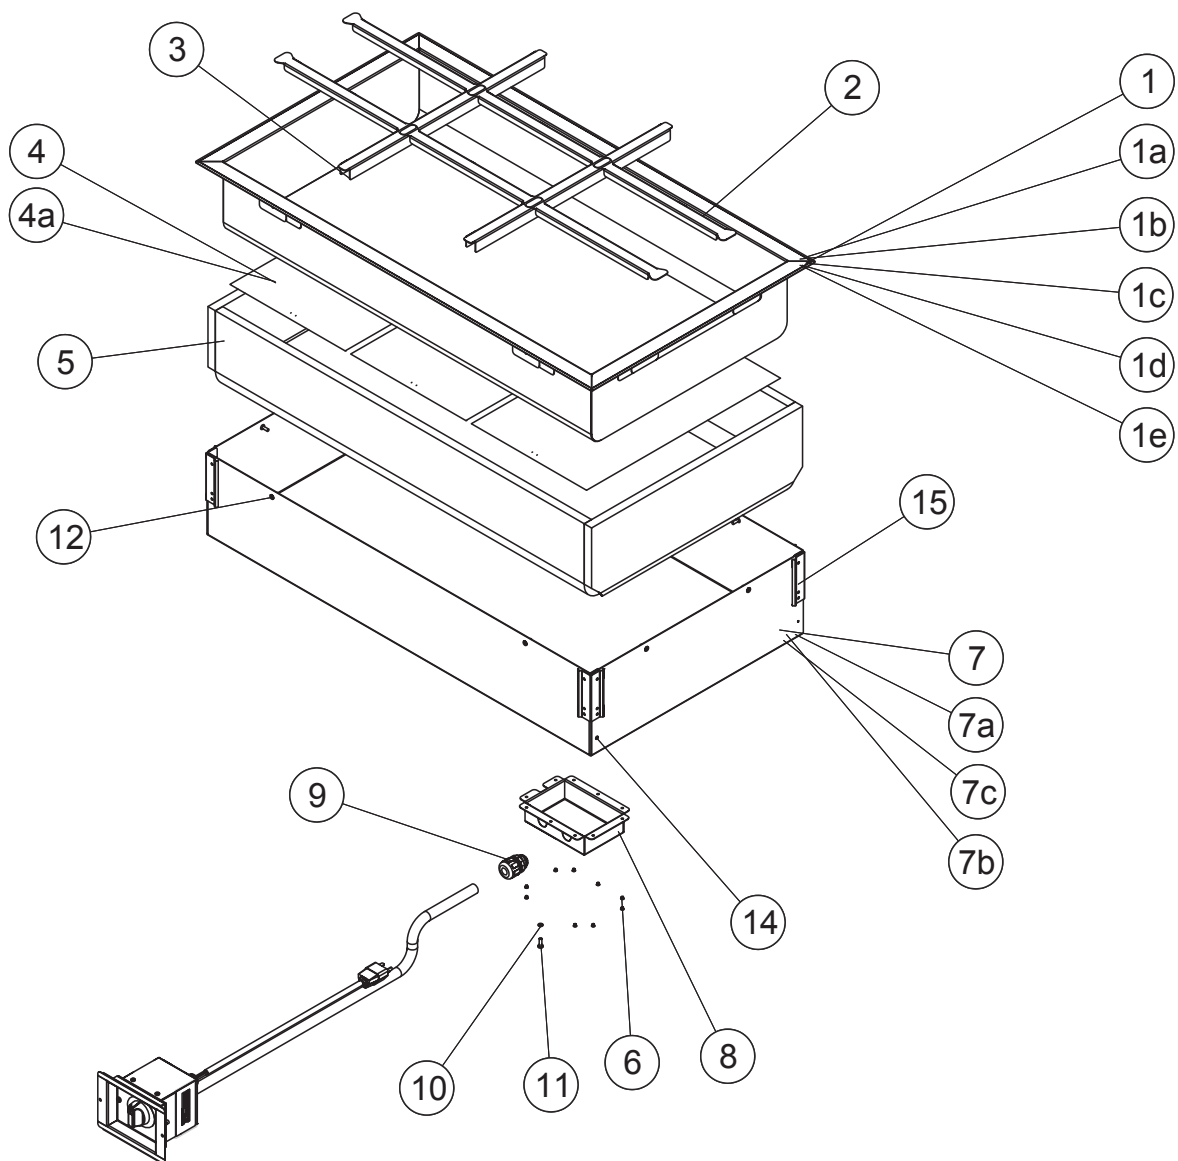


Item	Part	Description	Qty
1	5018554	WELL, D4, STD	1
1a	5018555	WELL, D6 STD	1
1b	5018556	WELL, D443 STD	1
1c	5018557	WELL, D643 STD	1
1d	5018558	WELL, D4 WIDE FLANGE	1
1e	5018559	WELL, D6, WIDE FLANGE	1
2	11318	PAN DIVIDER SHORT	6
3	16019	DIVIDER, PAN	2
4	EL-36317	ELEMENT, HEATING PAD	3
4a	EL-36860	ELEMENT, HEATING PAD, 4/3 MODEL	3
5	IN-24588	INSULATION	1
6	R-2097	#42 STAINLESS RIVET	10

Item	Part	Description	Qty
7	1015670	WRAPPER, 3 WELL, 6" DEEP	1
7a	1016195	WRAPPER, 3 WELL, 4" DEEP	1
7b	1016205	WRAPPER, 3 WELL, 6" DEEP, 4/3 MODEL	1
7c	1016207	WRAPPER, 3 WELL, 4" DEEP, 4/3 MODEL	1
8	1016034	BOX, CONNECTION	1
9	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
10	WS-22301	WASHER, M5 SPLIT LOCK	1
11	SC-36973	SCREW, PAN PH, METRIC, M5	1
12	SC-22281	SCREW, M5 x 0.8 x 16mm FLAT	8
14	RI-27108	RIVET, SEALED	12
15	1017049	BRACKET, STANDOFF	4

Part numbers and drawings are subject to change without notice.

SERVICE

CONTROL SERVICE VIEW (300-HWI SHOWN)

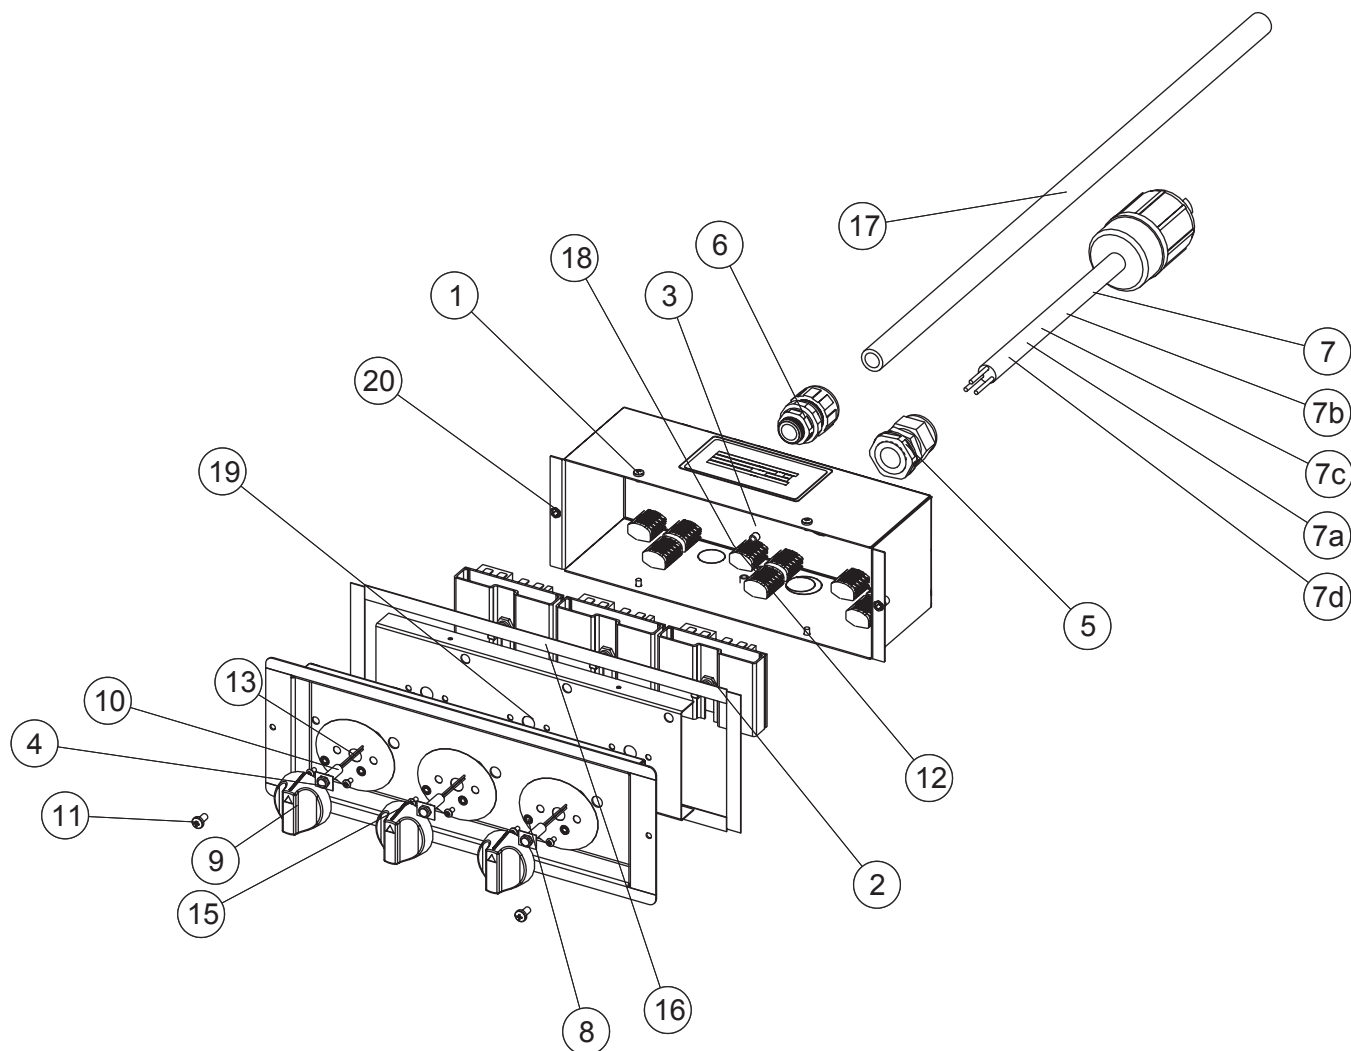


Item	Part	Description	Qty
1	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4
2	CC-36859	CONTROL, 650F MAX	3
3	1015725	CONTROL POD SHELL	1
4	CL-37245	CLIP, LIGHT MOUNTING	3
5	BU-33505	BUSHING, STRAIN RELIEF	1
6	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
7	CD-33366	CORDSET 6' 125V 30A 10/3	1
7a	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
7b	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
7c	CD-33840	CORDSET 15A 208-240V	1
7d	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
8	WS-2768	WASHER, #6, LOCK, SS	6

Item	Part	Description	Qty
9	KN-36424	KNOB, T-STAT CONTROL	3
10	LI-37215	LIGHT, INDICATOR	3
11	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2
12	NU-36234	NUT, M5, KEPS	2
13	PE-36566	PANEL OVERLAY, CONTROL	3
15	SC-22500	SCREW, 6-32 x 1/4" PAN HEAD	6
16	TA-24637	TAPE, VHB, FOAM, 1/2" x 12.9"	1
17	TU-33178	CONDUIT FLEX LIQUID TIGHT	1
18	WS-22295	WASHER, FLAT M5 S/S	1
19	1017289	PLATE, FACE	1
20	NU-23909	NUT, HEX INSERT M5	2

Part numbers and drawings are subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (300-HWI SHOWN)

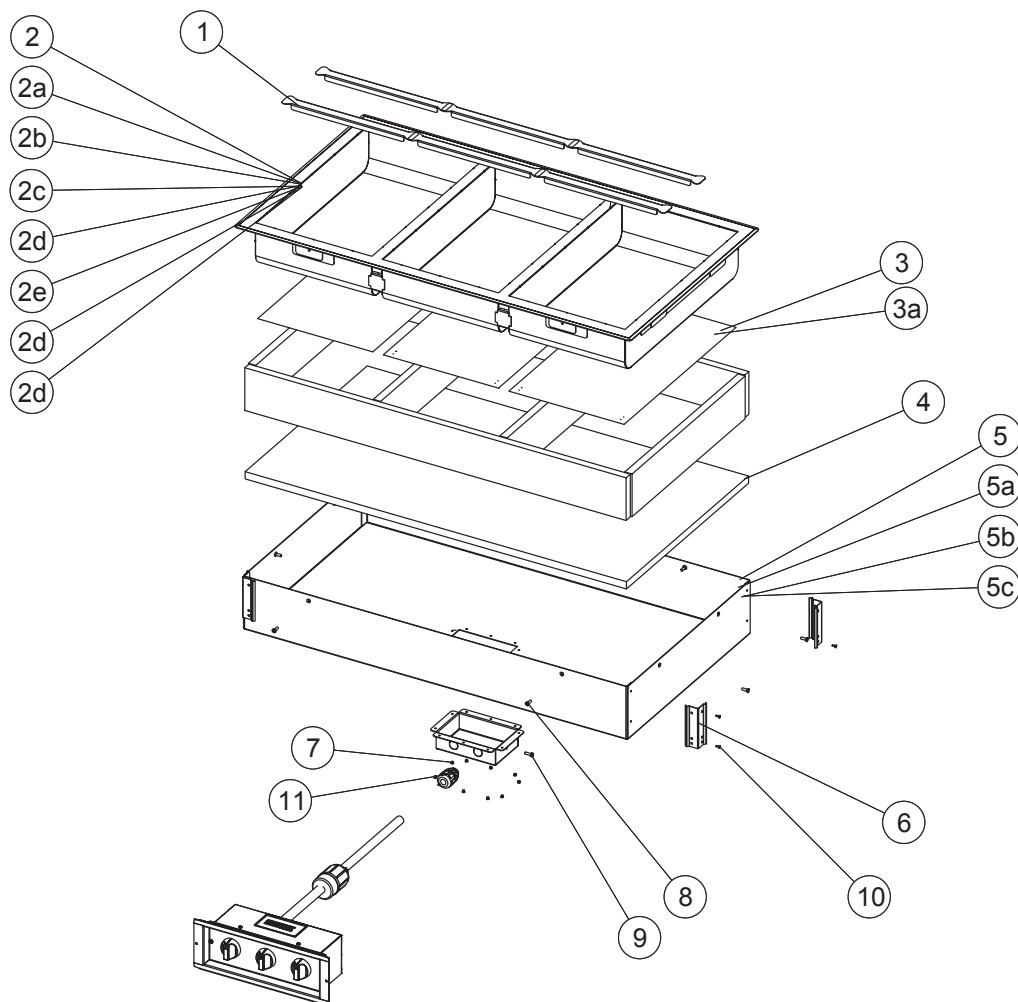


Item	Part	Description	Qty
1	11318	PAN DIVIDER SHORT	6
2	5017216	WELDMENT, D6, STANDARD FLANGE	1
2a	5017615	WELDMENT, D4, STANDARD FLANGE	1
2b	5017692	WELDMENT, D643, STANDARD FLANGE	1
2c	5017696	WELDMENT, D443, STANDARD FLANGE	1
2d	5017705	WELDMENT, D6, LARGE FLANGE	1
2e	5017710	WELDMENT, D4, LARGE FLANGE	1
3	EL-36317	ELEMENT, FOIL HEATING PAD, 600W	3
3a	EL-36860	ELEMENT, FOIL HEATING PAD, 810W	3
4	IN-24588	8# DENSITY, 39.3" x 21.8" x 1"	1
5	1015670	WRAPPER, 3 WELL, 6" DEEP	1

Item	Part	Description	Qty
5a	1016195	WRAPPER, 3 WELL, 4" DEEP	1
5b	1016205	WRAPPER, 3 WELL, 6" DEEP, 4/3 MODEL	1
5c	1016207	WRAPPER, 3 WELL, 4" DEEP, 4/3 MODEL	1
6	1017049	BRACKET, STANDOFF	4
7	RI-2097	#42 STAINLESS RIVET	9
8	SC-22281	SCREW, M5 x 0.8 x 16mm FLAT	8
9	SC-22926	SCREW, M5 x 0.8 x 16mm HEX	1
10	RI-27108	RIVET, SEALED	8
11	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1

Part numbers and drawings are subject to change without notice.

SERVICE

CONTROL SERVICE VIEW (400-HW SHOWN)

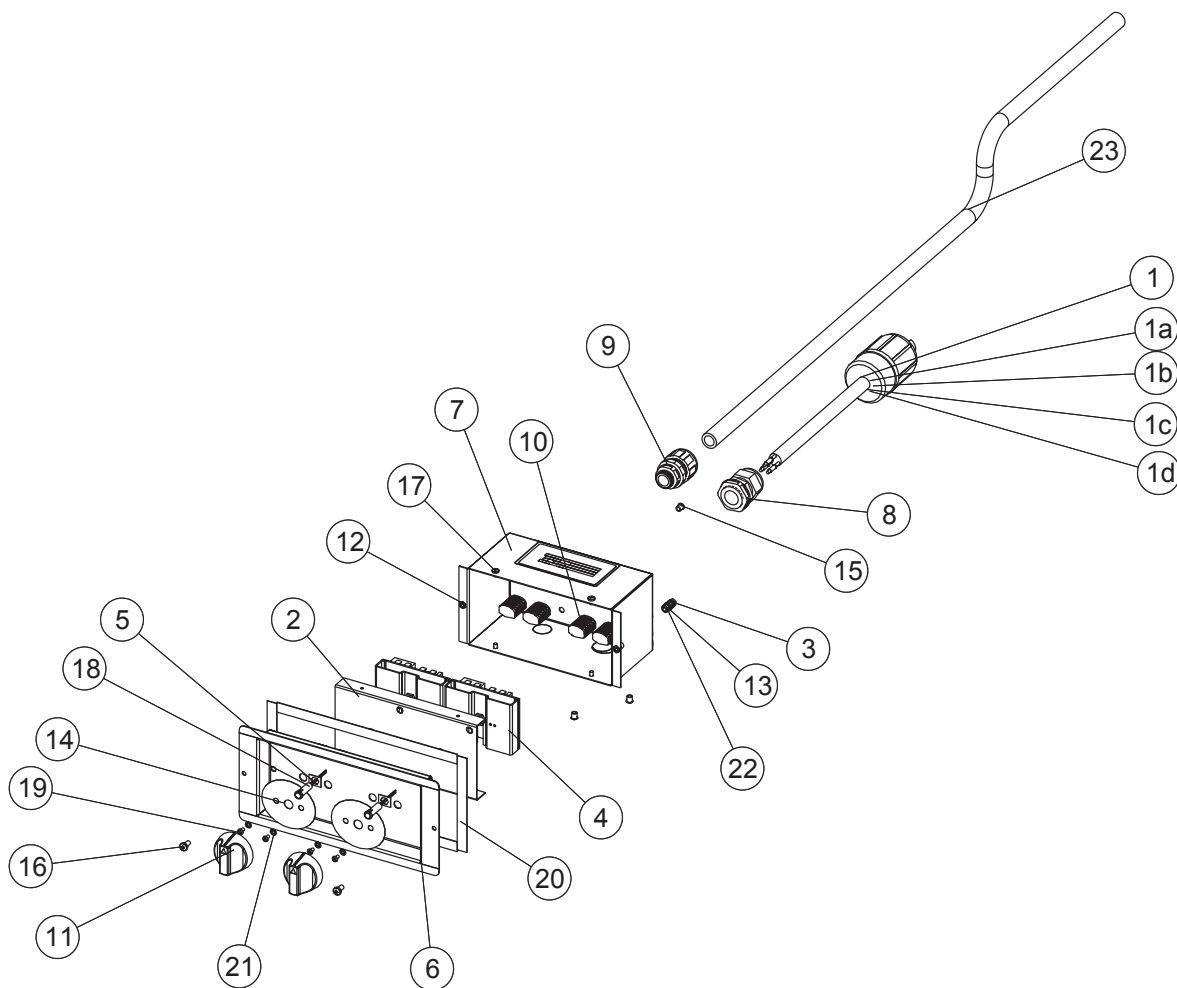


Item	Part	Description	Qty
1	5013668	NEMA L5-30P CORDSET FERRULE ASSEMBLY	1
1a	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
1b	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
1c	CD-33840	CORDSET 15A 208-240V	1
1d	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
2	1017288	PLATE, FACE	1
3	SC-22926	SCREW, M5 x 0.8 x 16mm HEX	1
4	CC-36859	CONTROL, DUTY CYCLE TIMING - SEE TABLE	2
5	CL-37245	CLIP, LIGHT MOUNTING	2
6	1015806	BOX, REMOTE, DECOR FACE 2 KNOB	1
7	1015724	SHELL, CONTROL POD, 2 KNOB	1
8	BU-33505	BUSHING, STRAIN RELIEF, 230V	1
9	BU-34606	BUSHING, STRAIN RELIEF, 120V, 208-240V	1
10	CR-34646	CONNECTOR-5 CONDUCTOR	4

Item	Part	Description	Qty
11	KN-36424	KNOB, T-STAT CONTROL	2
12	NU-23909	NUT, HEX INSERT M5	2
13	NU-36234	NUT, M5, KEPS	2
14	PE-36566	PANEL OVERLAY	2
15	PG-35411	1/4" HOLE PLUG	3
16	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2
17	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4
18	LI-37215	LIGHT, INDICATOR	2
19	SC-22500	SCREW 6-32 x 1/4" PAN HD	4
20	TA-24637	TAPE, VHB, FOAM, 1/2" WIDE	4
21	WS-2768	WASHER, #6, LOCK	4
22	WS-22295	WASHER, FLAT M5 S/S	1
23	TU-33178	CONDUIT, FLEX, 6 FT	1

Part numbers and drawings are subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (400-HW SHOWN)

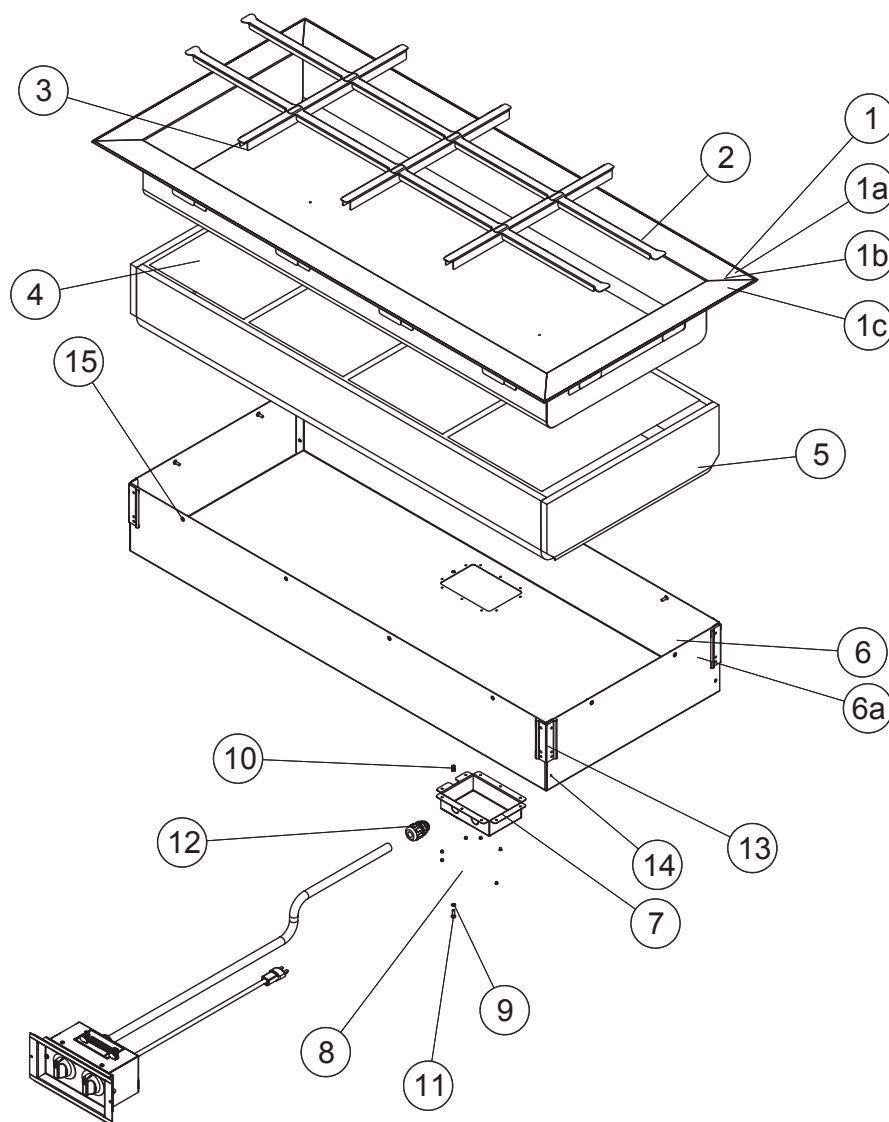


Item	Part	Description	Qty
1	5018600	WELL, D4, STD	1
1a	5018601	WELL, D6 STD	1
1b	5018602	WELL, D4 WIDE FLANGE	1
1c	5018603	WELL SPOT	1
2	11318	DIVIDER, PAN, SHORT	8
3	16019	DIVIDER, PAN	3
4	EL-36317	ELEMENT, FOIL HEATING PAD	4
5	IN-24588	INSULATION	1
6	1016162	WRAPPER, 4 WELL, 6" DEEP	1
6a	1016168	WRAPPER, 4 WELL, 4" DEEP	1

Item	Part	Description	Qty
7	1016034	BOX, CONNECTION	1
8	RI-2097	#42 STAINLESS RIVET	10
9	WS-22301	WASHER, M5 SPLIT LOCK	1
10	NU-23909	NUT, HEX INSERT M5	1
11	SC-36973	SCREW, PAN PH, METRIC, M5	1
12	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	1
13	1017049	BRACKET, STANDOFF, 230V ONLY	4
14	RI-27108	RIVET, SEALED	8
15	SC-22281	SCREW, M5 wx 0.8 x 16mm FLAT	12

Part numbers and drawings are subject to change without notice.

CONTROL SERVICE VIEW (400-HWI SHOWN)

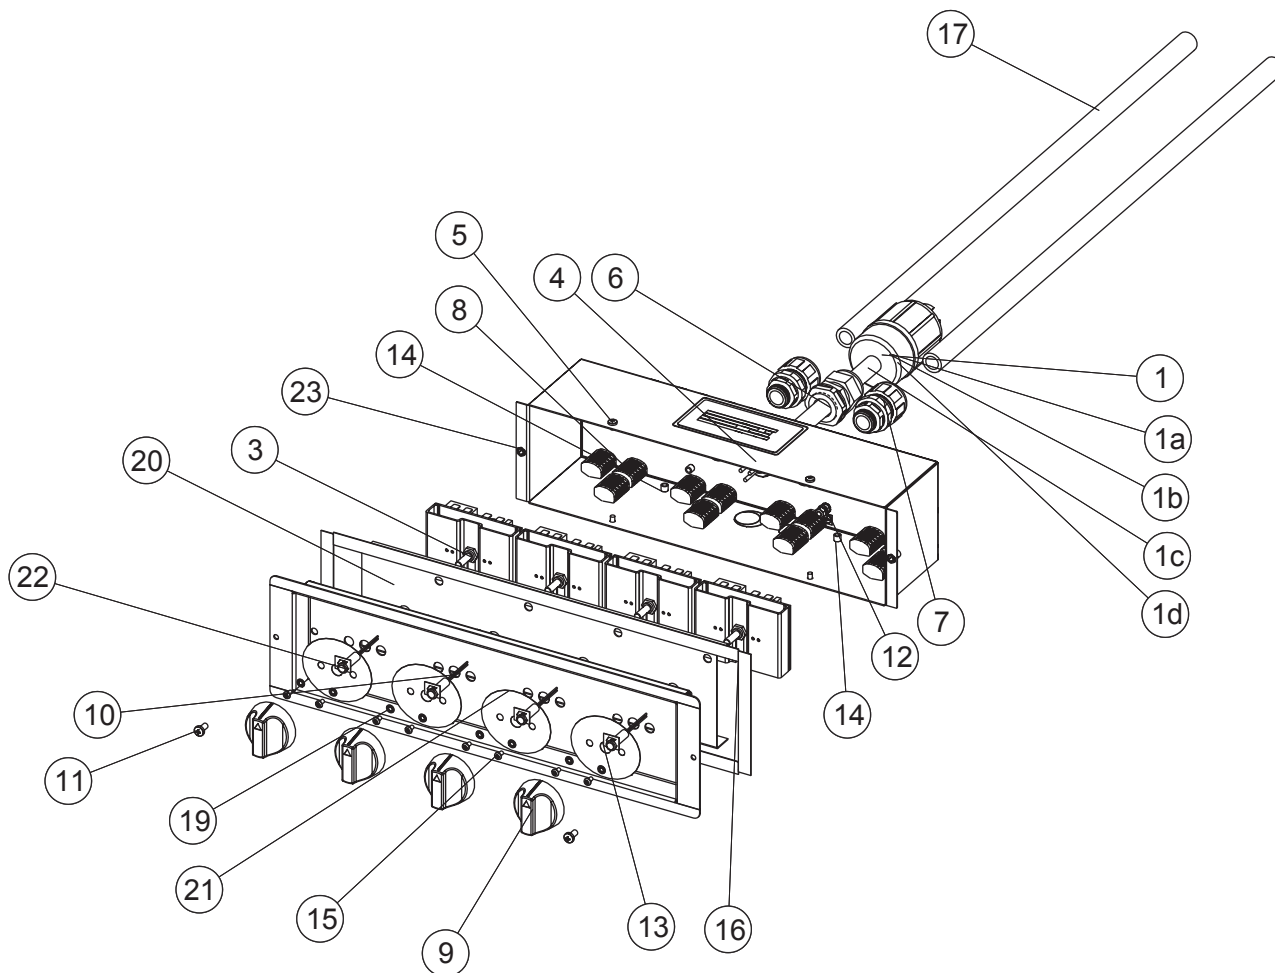


Item	Part	Description	Qty
1	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
1a	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
1b	CD-33840	CORDSET 15A 208-240V	1
1c	CD-33366	CORDSET 6' 125V 30A 10/3	1
1d	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
3	CC-36859	CONTROL	4
4	1015726	SHELL, CONTROL POD, 4 KNOB	1
5	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4
6	BU-33505	BUSHING, STRAIN RELIEF, 230V	1
7	BU-34606	BUSHING, STRAIN RELIEF, 120V, 208-240V	2
8	CR-34646	CONNECTOR-5 CONDUCTOR	12
9	KN-36424	KNOB, T-STAT CONTROL	4
10	LI-37215	LIGHT, INDICATOR	4

Item	Part	Description	Qty
11	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2
12	NU-36234	NUT, M5, KEPS	2
13	PE-36566	PANEL OVERLAY	4
14	PG-35411	1/4" HOLE PLUG	2
15	SC-22500	SCREW 6-32 x 1/4" PAN HD	8
16	TA-24637	TAPE, VHB, FOAM, 1/2" WIDE	1
17	TU-33178	CONDUIT FLEX LIQUID TIGHT	2
19	WS-2768	WASHER, #6, LOCK	8
20	1017290	PLATE, FACE	1
21	1015807	BOX, REMOTE, DECOR FACE, 4 KNOB	1
22	CL-37245	CLIP, LIGHT MOUNTING	4
23	NU-23909	NUT, HEX INSERT M5	2

Part numbers and drawings are
subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (400-HWI SHOWN)

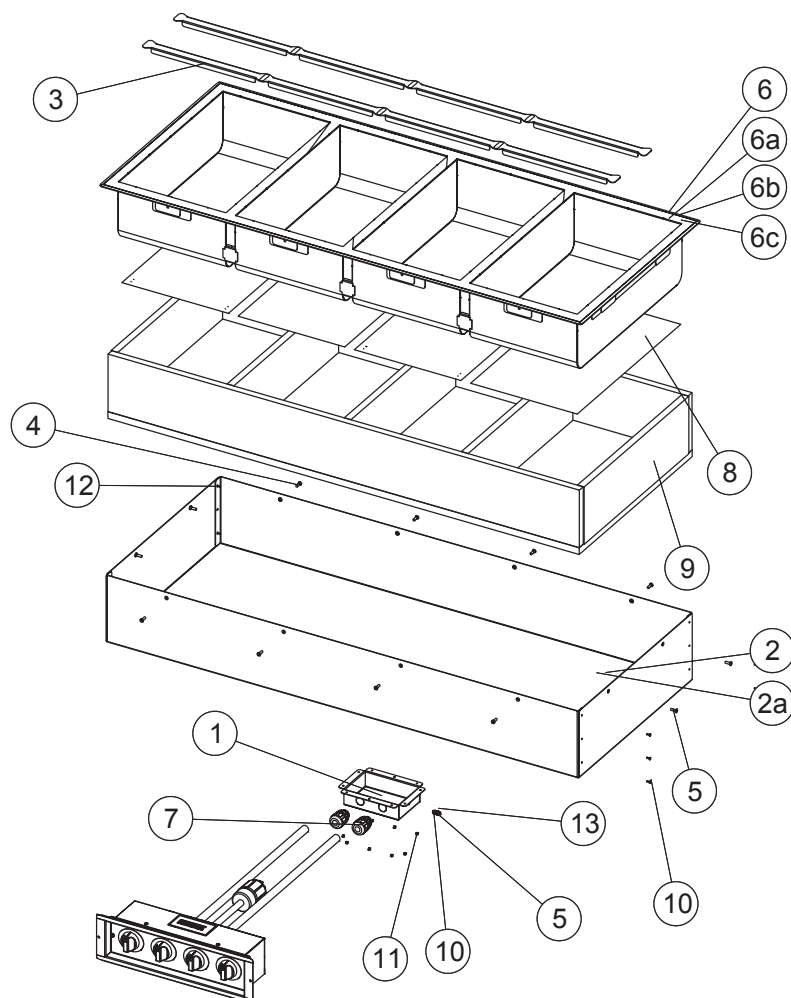


Item	Part	Description	Qty
1	1016034	BOX, CONNECTION	1
2	1016162	WRAPPER, 4 WELL, 6" DEEP	1
2a	1016168	WRAPPER, 4 WELL, 4" DEEP	1
3	11318	PAN DIVIDER SHORT	8
4	SC-22281	SCREW, M5 x 0.8 x 16mm FLAT	12
5	SC-22926	SCREW, M5 x 0.8 x 16mm HEX	1
6	5017611	WELDMENT, D6, STD FLANGE	1
6a	5017616	WELDMENT, D4, STD FLANGE	1
6b	5017711	WELDMENT, D4, WIDE FLANGE	1

Item	Part	Description	Qty
6c	5017706	WELDMENT, D6, WIDE FLANGE	1
7	BU-34606	BUSHING, STRAIGHT, STRAIN RELIEF	2
8	EL-36317	ELEMENT, FOIL HEATING PAD	4
9	IN-24588	INSULATION	1
10	NU-36234	NUT, M5, KEPS	2
11	RI-2097	#42 STAINLESS RIVET	10
12	RI-27108	RIVET, SEALED	12
13	WS-22295	WASHER, FLAT M5 S/S	1

Part numbers and drawings are subject to change without notice.

SERVICE

CONTROL SERVICE VIEW (500-HW SHOWN)

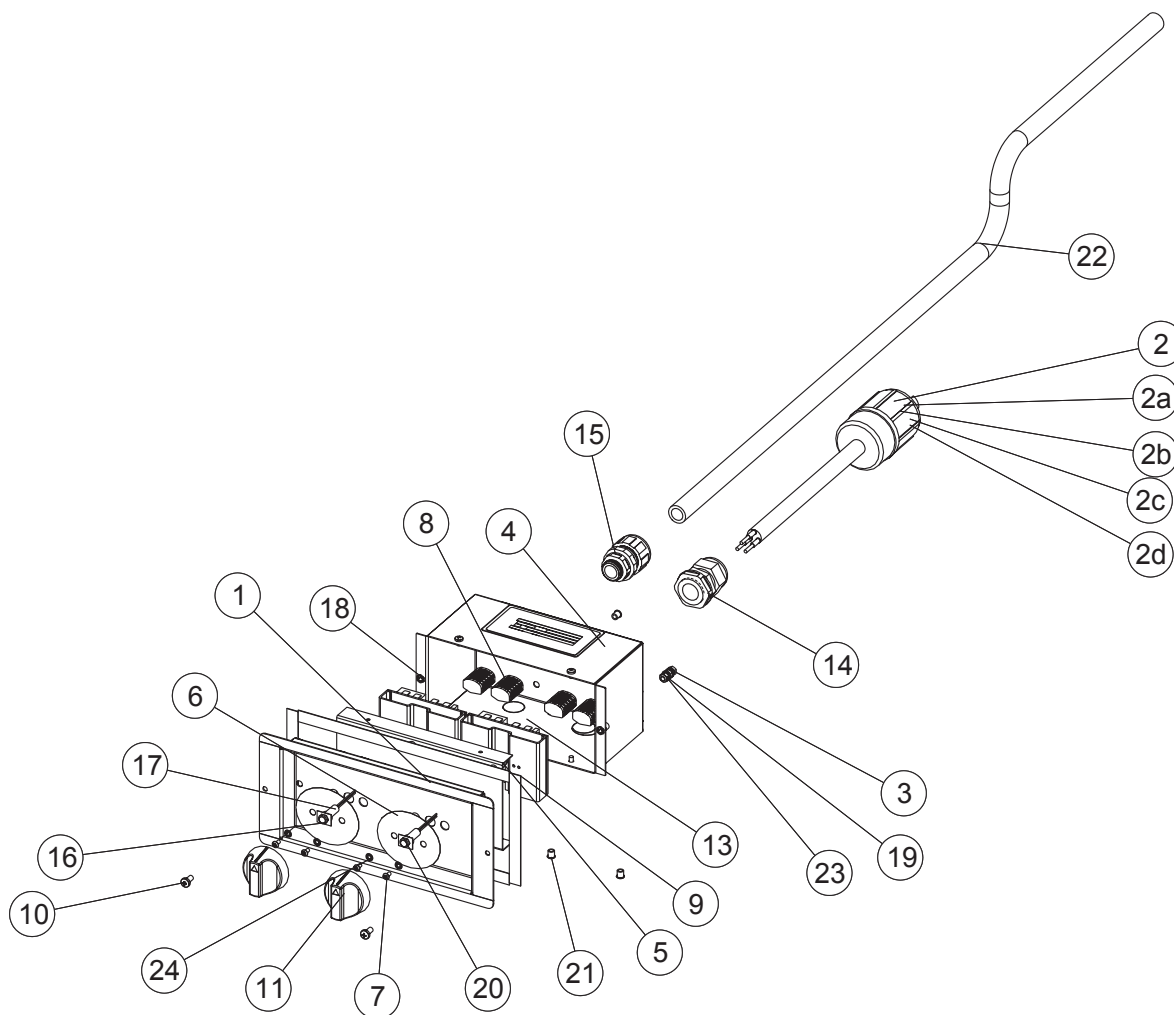


Item	Part	Description	Qty
1	1017288	PLATE, FACE	1
2	5013668	NEMA L5-30P CORDSET FERRULE ASSEMBLY	1
2a	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
2b	CD-33840	CORDSET 15A 208-240V	1
2c	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
2d	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
3	SC-22926	SCREW, M5 x 0.8 x 16mm HEX	1
4	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4
5	CC-36859	CONTROL	2
6	1015806	BOX, REMOTE, DECOR FACE 2 KNOB	1
7	SC-22500	SCREW 6-32 x 1/4" PAN HD	4
8	CR-34646	CONNECTOR-5 CONDUCTOR	4
9	TA-24637	TAPE, VHB, FOAM, 1/2" WIDE	4
10	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	2

Item	Pat	Description	Qty
11	KN-36424	KNOB, T-STAT CONTROL	2
13	1015724	SHELL, CONTROL POD, 2 KNOB	1
14	BU-33505	BUSHING, STRAIN RELIEF, 230V	1
15	BU-34606	BUSHING, STRAIN RELIEF, 120V, 208-240V	1
16	CL-37245	CLIP, LIGHT MOUNTING	2
17	LI-37215	LIGHT, INDICATOR	2
18	NU-23909	NUT, HEX INSERT M5	2
19	NU-36234	NUT, M5, KEPS	2
20	PE-36566	PANEL OVERLAY	2
21	PG-35411	1/4" HOLE PLUG	3
22	TU-33178	CONDUIT, FLEXIBLE, 6 FT	1
23	WS-22295	WASHER, FLAT M5 S/S	1
24	WS-2768	WASHER, #6, LOCK	4

Part numbers and drawings are subject to change without notice.

SERVICE

EXTERIOR SERVICE VIEW (500-HW SHOWN)

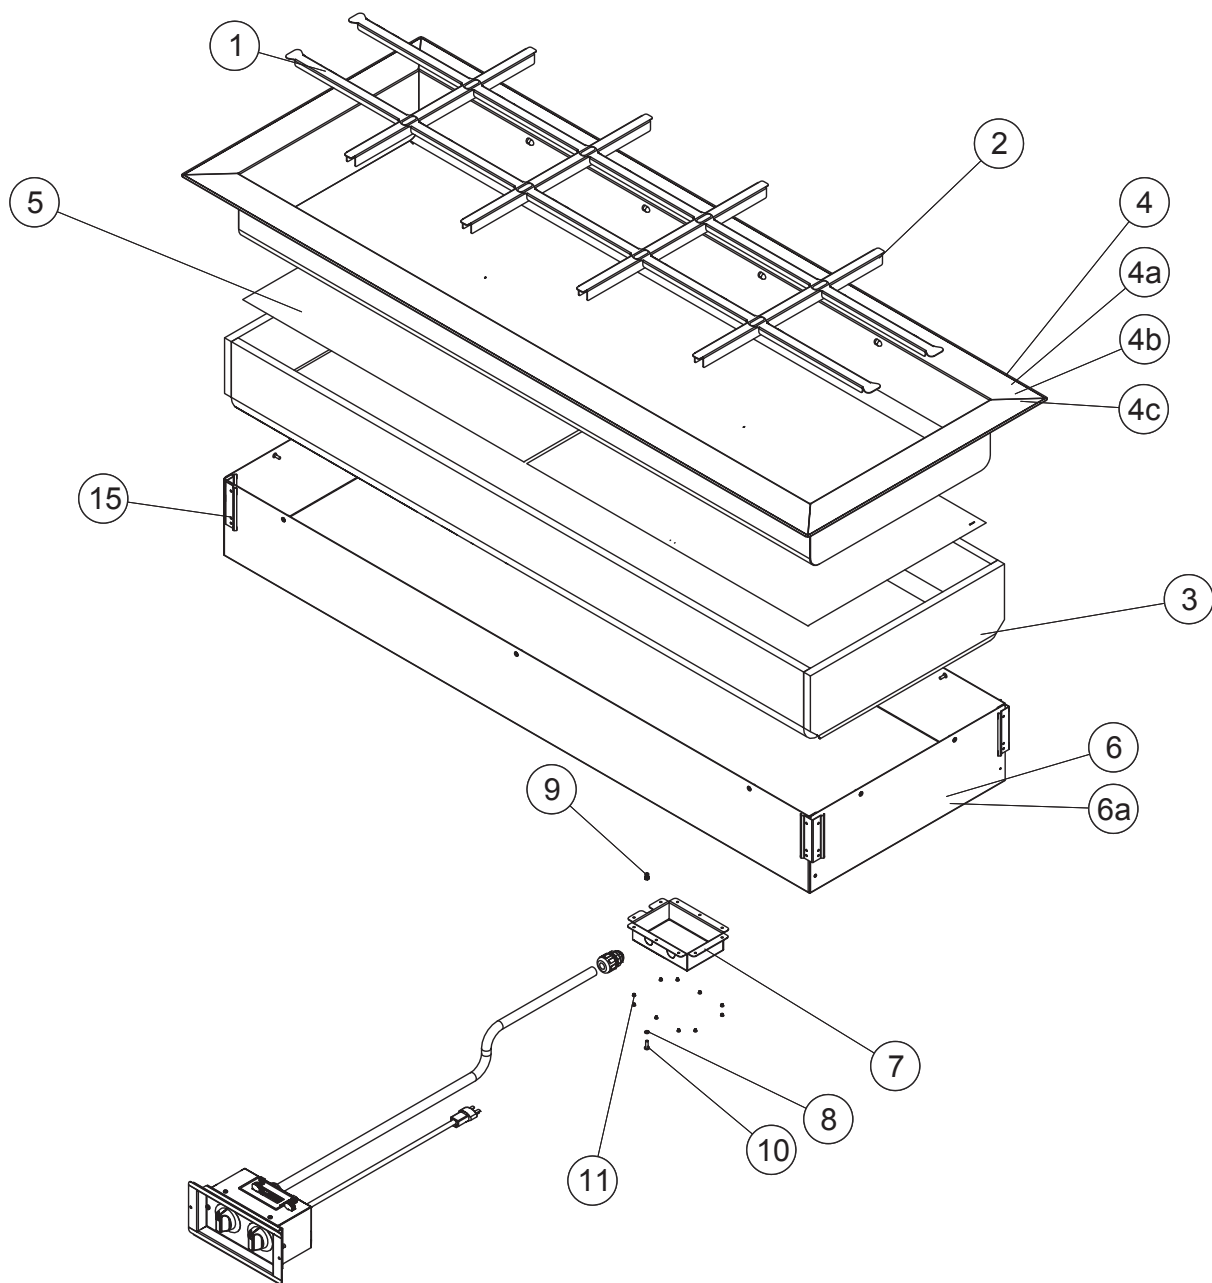


Item	Part	Description	Qty
1	11318	DIVIDER, PAN, SHORT	10
2	16019	DIVIDER, PAN	4
3	IN-24588	INSULATION	1
4	5018546	WELL, D4, STD	1
4a	5018547	WELL, D6, WIDE FLANGE	1
4b	5018548	WELL, D4 WIDE FLANGE	1
4c	5018549	WELL, D6 WIDE FLANGE	1
5	EL-37233	ELEMENT, HEATING PAD	2
6	1015717	WRAPPER, 5 WELL, 6" DEEP	1

Item	Part	Description	Qty
6a	1016196	WRAPPER, 5 WELL, 4" DEEP	1
7	1016034	BOX, CONNECTION	1
8	WS-22301	WASHER, M5 SPLIT LOCK	1
9	NU-23909	NUT, HEX INSERT M5	1
10	SC-36973	SCREW, PAN PH, METRIC, M5	1
11	RI-2097	#42 STAINLESS RIVET	10
15	1017049	BRACKET, STANDOFF, 230V ONLY	4

Part numbers and drawings are subject to change without notice.

SERVICE

CONTROL SERVICE VIEW (500-HWI SHOWN)

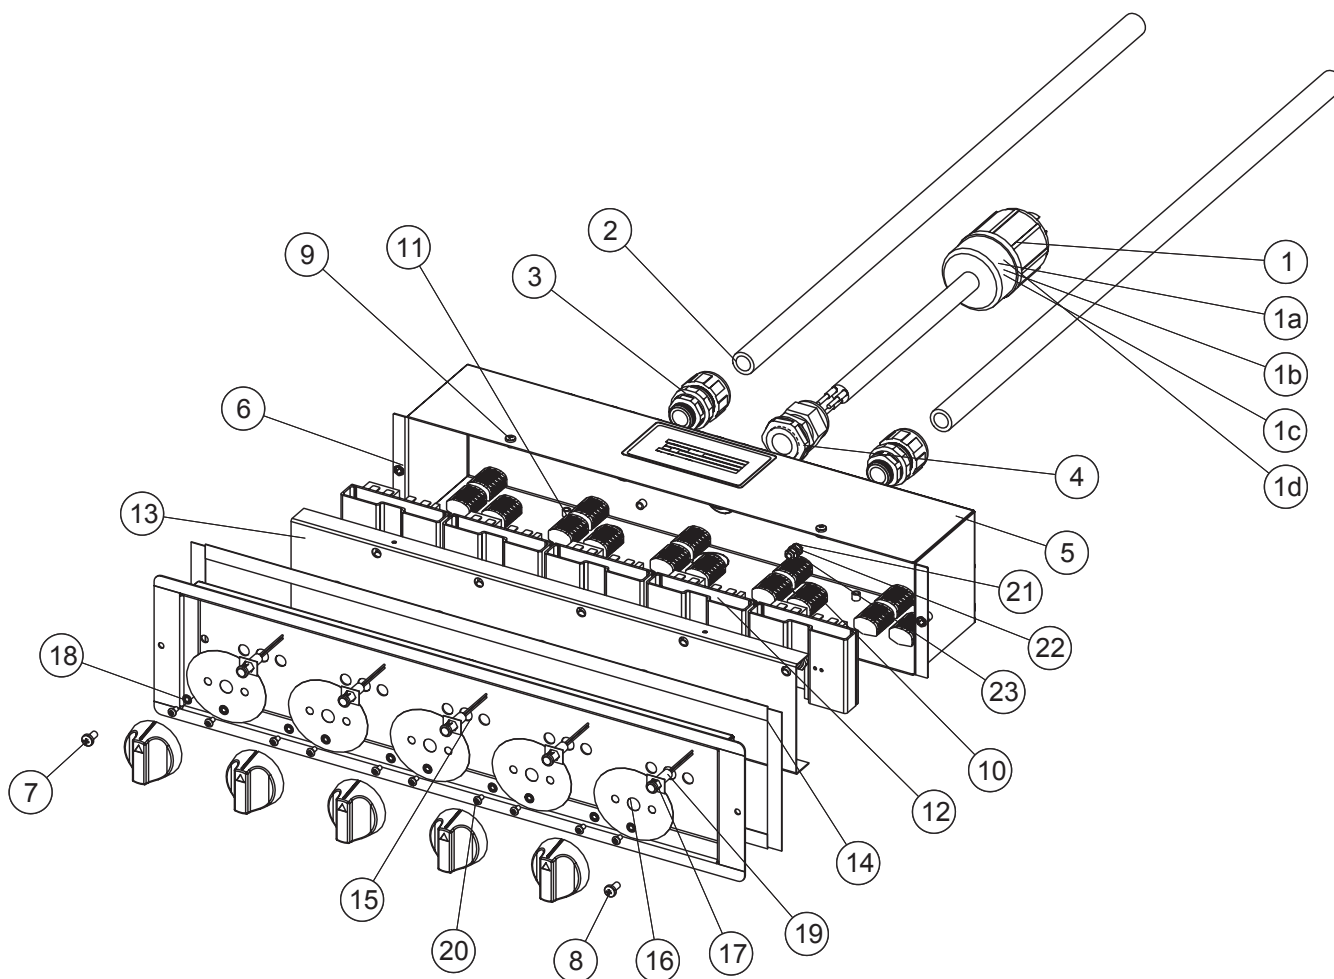


Item	Part	Description	Qty
1	5013668	NEMA L5-30P CORDSET FERRULE ASSEMBLY	1
1a	CD-33840	CORDSET 15A 208-240V	1
1b	5014997	BS 1363 CORDSET FERRULE ASSEMBLY	1
1c	5016998	CH2-16P CORDSET FERRULE ASSEMBLY	1
1d	CD-3922	CORDSET-16AWG, 3/C, INT'L HARM	1
2	TU-33178	CONDUIT, FLEXIBLE	2
3	BU-34606	BUSHING, STRAIN RELIEF	2
4	BU-33505	BUSHING, STRAIN RELIEF, 230V	1
5	1015727	SHELL, CONTROL POD, 5 KNOB	1
6	NU-23909	NUT, HEX INSERT M5	2
7	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	1
8	SC-22766	SCREW, M5 x 0.8 x 10mm PAN	1
9	SC-22271	SCREW, M4 x 0.7 x 6mm PAN	4
10	CR-34646	CONNECTOR-5 CONDUCTOR	14

Item	Part	Description	Qty
11	PG-35411	1/4" HOLE PLUG	3
12	CC-36859	CONTROL	5
13	1017291	PLATE, FACE	1
14	TA-24637	TAPE, VHB, FOAM, 1/2" WIDE	1
15	1015808	BOX, REMOTE, DECOR FACE, 5 KNOB	1
16	PE-36566	PANEL OVERLAY	5
17	CL-37245	CLIP, LIGHT MOUNTING	5
18	WS-2768	WASHER, #6, LOCK	10
19	LI-37215	LIGHT, INDICATOR	5
20	SC-22500	SCREW 6-32 x 1/4" PAN HD	10
21	SC-22926	SCREW, M5 x 0.8 x 16mm HEX	1
22	NU-36234	NUT, M5, KEPS	2
23	WS-22295	WASHER, FLAT M5 S/S	1

Part numbers and drawings are subject to change without notice.

SERVICE





EXTERIOR SERVICE VIEW (500-HWI SHOWN)

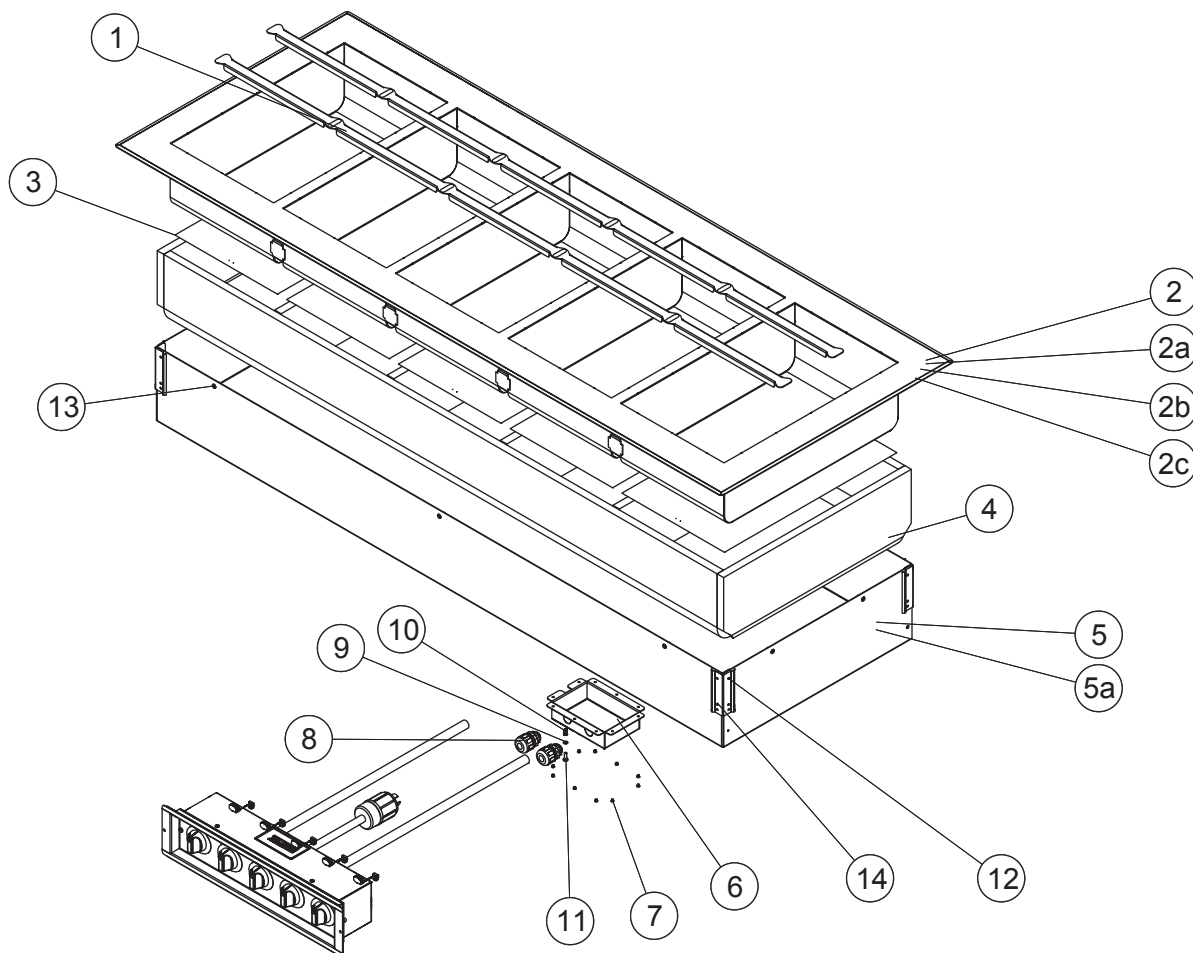








Item	Part	Description	Qty
1	11318	DIVIDER, PAN, SHORT	10
2	5017707	WELDMENT, D6, WIDE FLANGE	1
2a	5017712	WELDMENT, D4, WIDE FLANGE	1
2b	5017270	WELDMENT, D6 STD FLANGE	1
2c	5017617	WELDMENT, D4 STD FLANGE	1
3	EL-36317	ELEMENT, FOIL HEATING PAD	5
4	IN-24588	INSULATION, 33.4" x 78"	1
5	1015717	WRAPPER, 5 WELL, 6" DEEP	1
5a	1016196	WRAPPER, 5 WELL, 4" DEEP	1
6	1016034	BOX, CONNECTION	1

Item	Part	Description	Qty
7	RI-2097	#42 STAINLESS RIVET	10
8	BU-34606	BUSHING, STRAIN RELIEF	2
9	WS-22301	WASHER, M5 SPLIT LOCK	1
10	NU-23909	NUT, HEX INSERT M5	1
11	SC-36973	SCREW, PAN PH, METRIC, M5	1
12	RI-27108	RIVET, SEALED	12
13	SC-22281	SCREW, M5 x 0.8 x 16mm FLAT	8
14	1017049	BRACKET, STANDOFF, 230V ONLY	4

Part numbers and drawings are subject to change without notice.

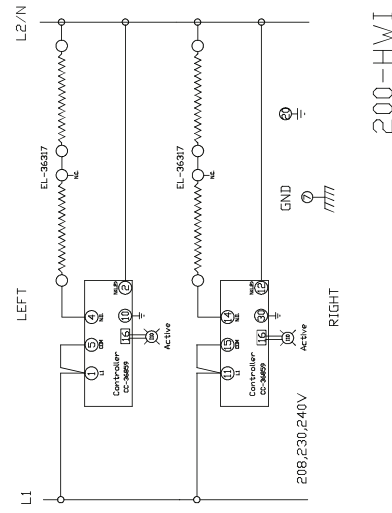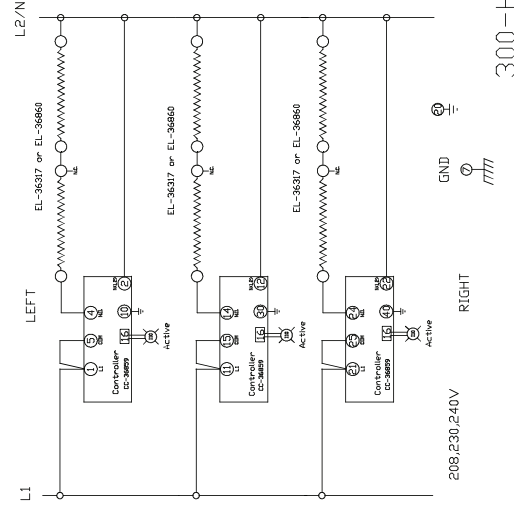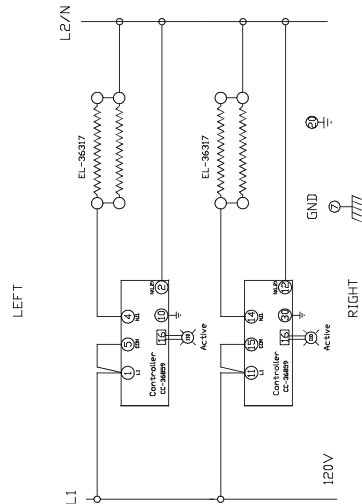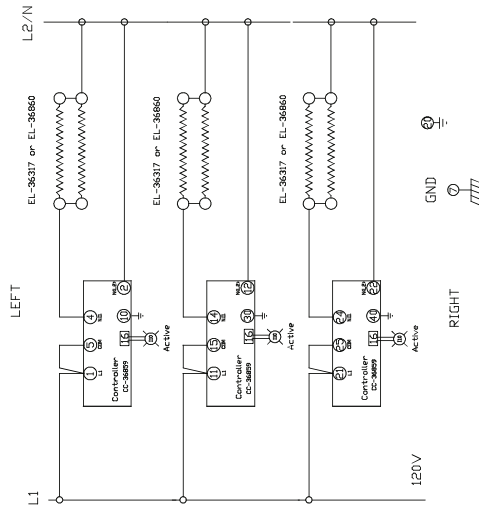

Cardset	Line 1	Line 2/N
120V	Black	White
230V	Brown	Blue

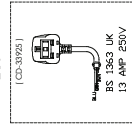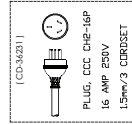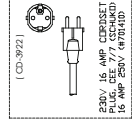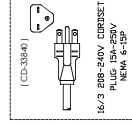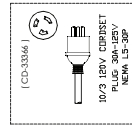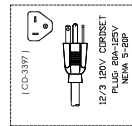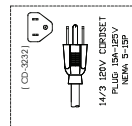

FOIL PAD OF HI-TEMP CABLE EL-36317 = 96 OHMS (SERIES), 24 OHMS (PARALLEL) AMBIENT TEMP

FOIL PAD OF HI-TEMP CABLE EL-36860 = 712 OHMS (SERIES), 17.8 OHMS (PARALLEL) AMBIENT TEMP

REFERENCE WIRE ASSBY: 5017776 for HWI-200 , 5017777 for HWI-300

[illegible]

[illegible]

TRANSPORTATION DAMAGE and CLAIMS



All Alto-Shaam equipment is sold F.O.B. shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

1. Make an immediate inspection while the equipment is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the material is moved to a storage area.
2. Do not sign a delivery receipt or a freight bill until you have made a proper count and inspection of all merchandise received.
3. Note all damage to packages directly on the carrier's delivery receipt.
4. Make certain the driver signs this receipt. If he refuses to sign, make a notation of this refusal on the receipt.
5. If the driver refuses to allow inspection, write the following on the delivery receipt:
Driver refuses to allow inspection of containers for visible damage.
6. Telephone the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation of the time, date, and the person called.
7. Save any packages and packing material for further inspection by the carrier.
8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

We will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. We cannot, however, file any damage claims for you, assume the responsibility of any claims, or accept deductions in payment for such claims.

LIMITED WARRANTY

Alto-Shaam, Inc. warrants to the original purchaser only that any original part that is found to be defective in material or workmanship will, at Alto-Shaam's option, subject to provisions hereinafter stated, be replaced with a new or rebuilt part.

The original parts warranty period is as follows:

For the refrigeration compressor on Alto-Shaam Quickchillers™, five (5) years from the date of installation of appliance.

For the heating element on Halo Heat® cooking and holding ovens, as long as the original purchaser owns the oven. This excludes holding only equipment.

For all other original parts, one (1) year from the date of installation of appliance or fifteen (15) months from the shipping date, whichever occurs first.

The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any additional fees.

To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

THIS WARRANTY DOES NOT APPLY TO:

1. Calibration.
2. Replacement of light bulbs, door gaskets, and/or the replacement of glass due to damage of any kind.
3. Equipment damage caused by accident, shipping, improper installation or alteration.
4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
5. Damage incurred as a direct result of poor water quality, inadequate maintenance of steam generators and/or surfaces affected by water quality. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator.
6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm® Cleaner, including but not limited to damage due to chlorine or other harmful chemicals. **Use of Alto-Shaam's Combitherm® Cleaner on Combitherm® ovens is highly recommended.**
7. Any losses or damage resulting from malfunction, including loss of product, food product, revenue, or consequential or incidental damages of any kind.
8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. In no event shall Alto-Shaam be liable for loss of use, loss of revenue or profit, or loss of product, or for any indirect, special, incidental, or consequential damages. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.



Effective November 1, 2012

RECORD THE MODEL AND SERIAL NUMBER OF THE APPLIANCE FOR EASY REFERENCE.

ALWAYS REFER TO BOTH MODEL AND SERIAL NUMBER IN ANY CONTACT WITH ALTO-SHAAM REGARDING THIS APPLIANCE.

Model: _____ Date Installed: _____
Voltage: _____ Purchased From: _____
Serial Number: _____

W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 • U.S.A.

PHONE: 262.251.3800 • 800.558-8744 USA/CANADA

FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY

www.alto-shaam.com

PRINTED IN U.S.A.