


Quick Start Guide

Refer to Owner's Manual for Safety Statements. Complete Owner's Manual available online.

This document covers RMS*A and MMS*A models with touchpad controls

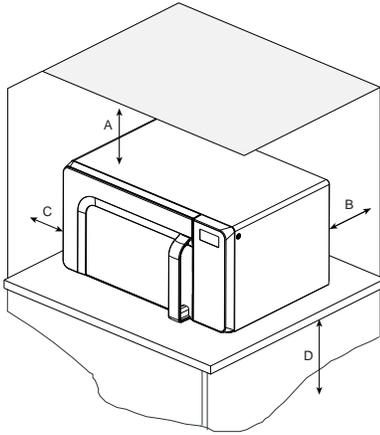

OVEN CLEARANCES

- Allow at least 7" (17.78 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.
- There is not an installation clearance requirement for the back of the oven.
- Allow at least 1" (2.54 cm) of clearance around sides of oven.
- Install oven so oven bottom is at least 3 feet (91.5 cm) above floor.

So...how do I use it? (Electronic Control)

Preset Program Keys

To cook food using preprogrammed cooking sequences:

- Open oven door and place food in oven. Close door.
- Press desired Number Key
- Oven begins cooking
- At the end of the cooking cycle, the oven beeps and LED displays "End".

X2 - Double Quantity Cooking

- Open oven door and place food in oven. Close door.
- Press X2 key .
- Press desired Preset Program Number Key(s). LED displays the cooking time for two quantities. The oven will start cooking per the quantity preset cooking time.

Manual Time Entry Mode

Time entry mode allows the user to manually enter a cook time and power level.

- Open oven door and place food in oven. Close door.
- Press the TIME ENTRY key .
- Press Number Keys to enter the desired cook time.
- Press POWER LEVEL key , ,  or  to change power level if desired.
- If stage cooking is desired, press TIME ENTRY key  and repeat steps 2-4.
- Press START key  to begin cooking.
- At the end of the cooking cycle, the oven beeps and LED displays "End".

Programming Mode


- Open oven door and press and hold Number Key "1" for 5 seconds.
- Press a Number Key to change or review a Preset Program setting.
- Press Number Keys to enter the new desired cook time.
- Press POWER LEVEL key , ,  or  to change power level if desired.
- If stage cooking is desired, press TIME ENTRY key  and repeat steps 3-5.
- Press START key  to save the cooking program.
- Close the door to exit Programming Mode.

Note: If STOP/RESET key  is pressed before programming is complete, changes are discarded and microwave exits programming mode.


The switching operation of this microwave oven can cause voltage fluctuations on the supply line. The operation of this oven under unfavorable voltage supply conditions can have adverse effects. This device is intended for the connection to a power supply system with a maximum permissible system impedance Z_{max} of 0.2 Ohms at the interface point of the user's supply. The user has to ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

Quick Start Guide

Refer to Owner's Manual for Safety Statements. Complete Owner's Manual available online.

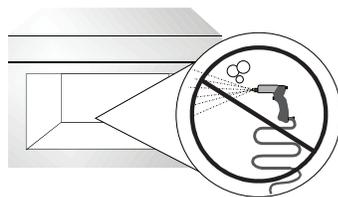

DO NOT power spray

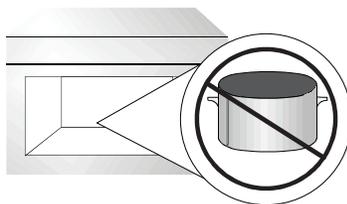

No metal pans

Refer to Owner's Manual for complete care and cleaning instructions.

⚠ Do NOT use abrasive cleaners or cleaners containing ammonia, citrus, phosphates, chlorine, sodium or potassium hydroxide (lye).
Use of unapproved cleaning agents will void the terms of the warranty.

User Option Mode

There are several options you can change to customize the operation of the oven for your business. The table below shows these options; the **factory setting is shown in bold type**.

1. Open oven door and press Number Key "2" for 5 seconds.
2. Press any Number Key to enter related options as noted in chart below.
3. To change, repeat pressing the Number Key until desired setting is reached.
4. Press START key  to save the selected setting.
5. To exit User Option Mode, press STOP/RESET key  and close door.

NUMBER KEY	DISPLAY	OPTIONS (FACTORY SETTINGS IN BOLD)
1 End of Cycle Beep	OP:10 OP:11 OP:12	3 second beep Continuous beep until door is opened 5 beep bursts until door is opened
2 Key Beep Volume	OP:20 OP:21 OP:22 OP:23	Eliminates beep Sets volume to low Sets volume to medium Sets volume to high
3 Key Beep	OP:30 OP:31	Prevents beep when pad is pressed Allows beep when pad is pressed
4 Active Display	OP:40 OP:41 OP:42 OP:43	15 seconds after oven door is opened, keyboard disabled 30 seconds after oven door is opened, keyboard disabled 1 minute after oven door is opened, keyboard disabled 2 minutes after oven door is opened, keyboard disabled
5 On-the-Fly Cooking	OP:50 OP:51	Prevents different pre-programmed pads to be activated during cooking Allows different pre-programmed pads to be activated during cooking
6 Reset Door Open	OP:60 OP:61	Allows oven to resume heating time countdown after door is opened during cycle Cancels heating time count down after door is opened during cycle.
7 Maximum Heating Time	OP:70 OP:71	Allows 30 minutes of heating time Allows 10 minutes of heating time
8 Manual Operation	OP:80 OP:81	Allows use of preprogrammed pads only Allows use of manual time entry and preprogrammed pads
9 Double Digit Operation	OP:90 OP:91	Allows 10 (0-9) preprogrammed pads Allows 20 (00-99) preprogrammed pads

*Note: Factory setting may vary by model