



JS052C

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.


**The world's fastest & most versatile preparation
serving & storage system**

Assembly instructions:

- Take the base
- Position one crossbar under the central column
- Tighten the cylinder and lock with allen key
- Fit the cylinder into the hole in the middle of the base
- Fit the second crossbar above the central column and lock with wing-nut
- Fit the four uprights between the two crossbars, arrows pointing upwards

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

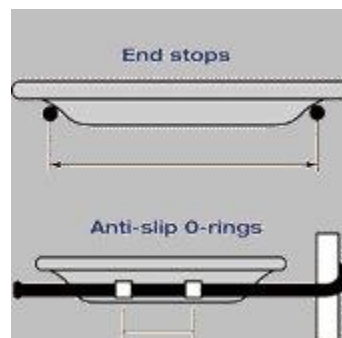

Conversion possibilities

JS052C + JS036F = JS088

JS052C + JS052F = JS104

HS Code: 73269098

Tariff No: 9403200020 (US)

Barcode: 5425023481523

Made in Sweden (EU)

Contents:

1x base
2x crossbar
1x cylinder
1x center pole
4x upright with plateholders (arms)
with 5cm (2inch) spacing.
1x wing-nut

Quantity plates: 4x 13 plates

Weight & Dimensions

1 box, 80x49x23cm, 13kgs

Assembled: 89x48x48cm

1 box, 19x19x35inch, 29lbs

Assembled: 30x22x10inch

Min/max plate size

Min: 12cm (4,73inch)

Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance : regular washing

Guarantee: 2 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28

8300 Knokke-Heist, Belgium

Phone: +32 50 621020

Fax: +32 50 615757

E-mail: info@jackstack.com

www.jackstack.com