



HS Code: 73269098  
 Tariff No: 9403200020 (US)  
 Barcode: 5425023480724  
 Made in Sweden (EU)

#### **Contents:**

- \*1 wheel base with 4 swiveling wheels of which 2 with brakes
- \*2 round center columns
- \*8 uprights with plateholders (arms) with 8cm (3 1/4inch) spacing
- \*1 big middle crossbar
- \*1 small upper crossbar
- \*1 male & 1 female wingnut
- \*spare parts bag

#### **Weight & Dimensions:**

1 box, 80x60x30cm, 28kgs  
 Assembled: 176x60x60cm

1box, 31.50x24x12inch, 62lbs  
 Assembled: 24x24x70.5inch

#### **Min/Max plate sizes:**

Min: 12cm (4,73inch)  
 Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

**Maintenance:** regular washing.

**Guarantee:** 2 year worldwide on any manufacturing default.

# JS072

Quick and easy assembly

Adjustable within seconds

To take any size of plate

## Jackstack International N.V.


**The world's fastest & most versatile preparation serving & storage system**

#### **Assembly instructions:**

- A. Take wheelbase and put brakes on the 2 wheels (15cm/6inch) so it will not move during assembling.
- B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
- C. Lay big crossbar with "JACKSTACK" marking on the male side of center column.
- D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
- E. Move the upright in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- F. Tighten the middle crossbar and thus the uprights by fixing the second center column with the female side down.
- G. Put the small upper crossbar on the male side of the second center column and use the female wingnut to tighten a little.
- H. Slide four uprights with upmarking up between upper and middle crossbar
- I. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- J. In case you want to use two plate sizes on the same rack, you can choose a different setting for the upper and lower sections.
- K. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.

#### **Adjustments:**

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

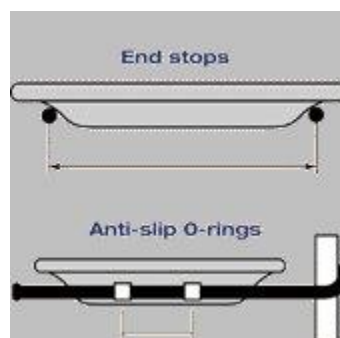

## Jackstack International N.V.

Zoutelaan 28  
 8300 Knokke-Heist, Belgium  
 Phone: +32 50 621020  
 Fax: +32 50 615757  
 E-mail: [info@jackstack.com](mailto:info@jackstack.com)  
[www.jackstack.com](http://www.jackstack.com)