



HS Code: 73269098
 Tariff No: 9403200020
 Barcode: 5425023480885
 Made in Sweden (EU)

Contents:

- *1 wheel base with 4 swiveling wheels of which 2 with brakes
- *2 round center columns
- *4 uprights with plateholders (arms) 5cm (2inch) spacing – 52 plates section
- *4 uprights with plateholders (arms) 8cm (3 ¼ inch) spacing for higher food presentation – 36 plates section
- *1 big middle crossbar
- *1 small upper crossbar
- *1 male & 1 female wingnut
- *spare parts bag

Weight & Dimensions

1 box, 80x60x30cm, 29kgs
 Assembled: 176x60x60cm

1box, 31.50x24x12inch, 64lbs
 Assembled: 24x24x70.50inch

Min/Max plate sizes:

Min: 12cm (4,73inch)
 Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance: regular washing

Guarantee: 2 year worldwide on any manufacturing default

Jackstack International N.V.

Zoutelaan 28
 8300 Knokke-Heist, Belgium
 Phone: +32 50 621020
 Fax: +32 50 615757
 E-mail: info@jackstack.com
www.jackstack.com

JS088

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

The world's fastest & most versatile preparation serving & storage system

We strongly advise to see our 2 video's on www.jackstack.com where assembly and use of the units are clearly explained

- A. Take wheelbase and put brakes on the 2 wheels (15cm/6inch) so it will not move during assembling.
- B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
- C. Lay big crossbar with "JACKSTACK" marking on the male side of center column.
- D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
- E. Move the upright in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- F. Tighten the middle crossbar and thus the uprights by fixing the second center column with the female side down.
- G. Put the small upper crossbar on the male side of the second center column and use the female wingnut to tighten a little.
- H. Slide four uprights with upmarking up between upper and middle crossbar
- I. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- J. In case you want to use two plate sizes on the same rack, you can choose a different setting for the upper and lower sections.
- K. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

