

Locking and Unlocking the Book Safe

Open book cover, insert key and turn to lock or unlock safe door.
Lift door of safe to add or remove items from the safe

Caution: Door of safe will only open about 90 degrees, do not force open the safe door it may damage the safe

Place keys in a secure location, DO NOT place keys inside of safe

Care and Maintenance

- DO NOT use chemicals or cleaning agents this will damage the safe. If necessary use a dry duster or micro fiber cloth to clean
- Keep liquids and moisture away from the safe
- DO NOT force open or it will damage the safe, safe door will only open about 90 degrees
- DO NOT over stuff the contents of the safe or you can damage the motor mechanism or the contents
- DO NOT disassemble the product. For all repairs and maintenance, contact authorized service centers or distributor
- DO NOT place keys inside of safe