CERAMIC DINNERWARE



Ceramic dinnerware, including Fortaluxe®, Vitraluxe®, TechnoCeram®, bone china, and porcelain, requires proper care to retain its beauty and durability throughout its service life.

FIRST USE -

 Before first use, wash dinnerware in hot water using mild detergent (rinse and dry before storing)

HANDLING -

- After clearing tables, immediately remove food remnants from dinnerware with a soft dish cloth or sponge
- Avoid using abrasive materials (steel wool, metal scrapers, scouring pads) to remove debris

PRE-SOAKING

• Soak in 140-160°F water with chlorine-free, acid-free, non-abrasive detergent for 10-20 minutes

WASHING

- Wash as soon as possible, using a peg rack to maximize water contact with dishware
- Utilize appropriately-sized glass racks for coffee and bouillon cups to avoid breakage
- Dinnerware is safe for both high and low temperature commercial dish machines unless otherwise noted





DRYING (afterwash)

• Remove residual water by drying with a soft cloth or towel

BEST — PRACTICES

- Do not microwave or heat over 400°F
- Avoid abrupt temperature changes, from hot-to-cold or cold-to-hot, to reduce the risk of cracking and breakage due to thermal shock
- · Wash in dish machine for best cleaning results
- Soak in 10% oxygenated bleach/water solution for 8-24 hours to remove coffee stains
- Consult your chemical supplier to ensure use of recommended products for best results with your dishwasher and water conditions



