

 
2 Tray- #176BDC2

Tools needed: Phillips Head Screwdriver; Adjustable Wrench

Parts:


I. Hardware

- A. (6) - Screws
- B. (3) - Handles
- C. (12) - Bolts
- D. (12) - Spring Washers
- E. (12) - Locking Nuts

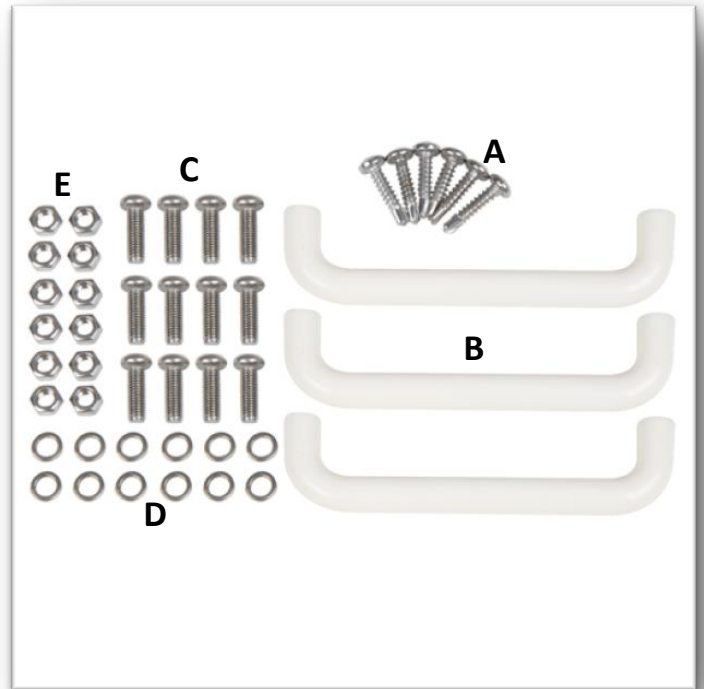

II. Sections

- A. (2) Side Sections with Hinges and Angled Front
- B. (1) Short Bent Section (Top of Case)
- C. (1) Long Bent Section (Bottom of Case) with Magnet Attached and Non-Skid Grips
- D. (1) Flat Section with Pre-Drilled Holes and Plastic Knobs at the Top
- E. (2) Trays

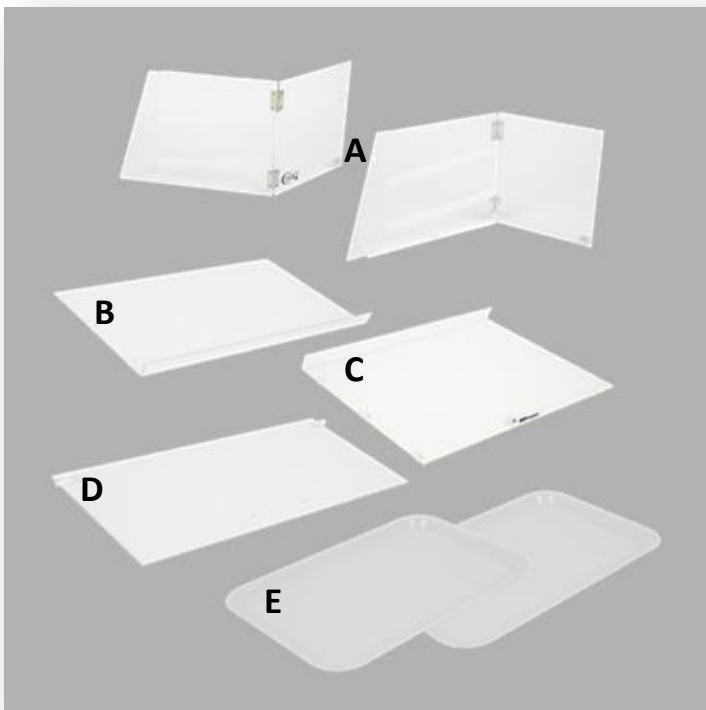

Assembly:

1. Find the pre-drilled holes on each of the hinged side sections (A) and line up the plastic handles with the holes. Screw each of the plastic handles onto the outside of each section. Then use the remaining two screws to attach the last handle to the flat front section (D). The handle should be on the flat side of the front section piece, opposite the side that has the large plastic knobs on the top. This will be the front access door of the case.
2. Place the two hinged side sections (A) upside down so the interior grooves face each other and the case's shorter side is on the bottom. Place the bottom section (B) on top of the two side sections (A). The bent side will be at the front of the case and the magnet will be at the back of the case. Align the pre-drilled holes and insert a bolt into the pre-drilled holes and then slide a spring washer onto the bolt and secure with a locking nut. Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten. Continue until all six bolts are secure. At this time, the magnet on the bottom section (B) will align with the metal door catches on each of the doors.
3. Flip the display case over and align the top section (C) with the pre-drilled holes. The bent side of this piece will be at the front of the case. Insert each bolt into the pre-drilled hole and then slide a spring washer onto the bolt and secure with a locking nut. Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten. Secure the back four bolts but leave the front two bolts unsecure until you insert the front piece (D).
4. Gently insert the plastic knobs of the front piece (D) into the larger pre-drilled holes on each side of the case. Once the door (D) is inserted, secure the two remaining bolts using spring washers and lock nuts. These will be on the top section of the case.
5. After the case is assembled, check that all parts are correctly aligned and that the locking nuts are secure. Slide each of the Choice trays into the grooves inside the display case.