

# COMBITHERM® CLEANING and MAINTENANCE



**CAUTION**

**RUBBER GLOVES AND PROTECTIVE EYE WEAR MUST BE WORN WHEN USING THE OVEN CLEANER. DO NOT MIX THE OVEN CLEANER WITH ANYTHING BUT WATER.**



Causes severe burns. Do not get in eyes, on skin, or on clothing. Harmful or fatal if swallowed. Do not breathe mist. Use in well ventilated area. Keep out of reach of children.

**USE AUTHORIZED COMBITHERM LIQUID OVEN CLEANER ONLY.**

Unauthorized cleaning agents may discolor or harm interior surfaces of the oven. Read and understand label and material safety data sheet before using the oven cleaner.

**THOROUGHLY RINSE EMPTY CONTAINER WITH WATER AND SAFELY DISCARD.**

At no time should the exterior of the oven be steamed cleaned, hosed down with the hand-sprayer, flooded with water, or liquid solution.

## Oven Cleaning



Clean the oven daily at the end of the production day or between production shifts.

**USE THE AUTHORIZED COMBITHERM LIQUID OVEN CLEANER ONLY\***

### 1. ▼ IF THE OVEN IS HOT:

Turn the Power Switch to the "OFF" position and allow the oven to cool to approximately 130°F (54°C). Leave the oven door open during the cooling process.

### ▼ IF THE OVEN IS COLD:

Turn the Power Switch to the "ON" position and preheat the oven in Superheated Steam or Convection at 130°F (54°C) for 10 minutes. After preheating, turn the Power Switch to the "OFF" position.

2. Wearing safety glasses and rubber gloves, generously spray the interior oven surfaces with an even coating of Combitherm Liquid Oven Cleaner. Spray all built in components and pans. Unfasten the Fan Guard Cover Plate, swing open and spray the back of the Fan Guard Cover Plate, convection element, the oven fan, along with the left-hand side of the oven.
3. If unit is equipped with the optional programmable control, securely close the oven door. Turn the Power Switch to the "ON" position, press the Cleaning Program Key and then press the Start Key. Steps 4 and 5 can then be bypassed.
4. Securely close the oven door and let the solution stand for a minimum of 10 minutes.
5. Turn the Power Switch to the "ON" position. Press the Steam program key and set the timer for ten minutes.
6. When the beeper signals the end of the cleaning process, press any Program key to deactivate the beeper. Turn the Power Switch to the "OFF" position and open the oven door.
7. Rinse the interior and all sprayed components with the hand-held hose. Make certain to thoroughly rinse all surfaces to remove any cleaning solution residue. Use a non-abrasive cleaning pad for any problem areas.
8. Use the hand held hose and direct a stream of water into the Steam By-Pass Port and into the oven drain to rinse away oven cleaner residue.
9. Replace the Fan Guard Cover Plate. Lock the cover into place and tighten thumb screws.

#### \*COMBITHERM OVEN CLEANER

SPECIALLY FORMULATED FOR COMBITHERM OVEN CLEANING  
TWELVE (12) CONTAINERS PER CASE  
—1 QUART (C. 1 LITER) EACH . . . . ORDER ITEM: CE-24750

**LEAVE DOOR SLIGHTLY OPEN AFTER CLEANING TO ALLEVIATE WEAR AND TEAR ON GASKET.**