









Preheating the Appliance

Alto-Shaam recommends preheating the Combitherm® before cooking.


1. Press the **Power ON** button.  or  Green light will appear while oven is booting up.
2. Touch the desired **Cook Mode** icon.
 Steam  Combi  Convection  Retherm
3. Touch the **Preheat** icon. 
4. Enter the temperature on the touch pad and touch the **Check Mark** icon. ✓


The oven beeps when it is preheated.

Cooking with Programmed Recipes






1. Load the food into the appliance.
2. Touch the **Recipes** icon. 
3. Locate the food item program by scrolling through pages using arrow icons.
4. Touch the programmed food icon.

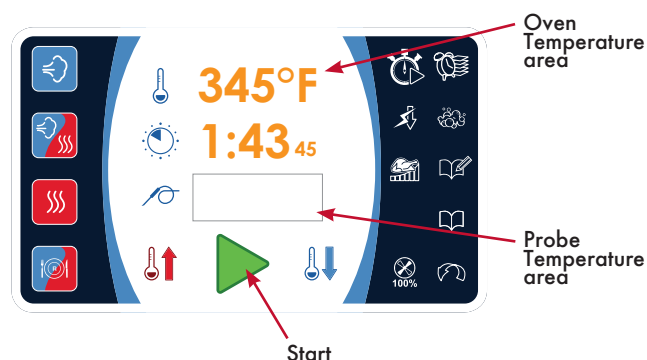
The oven begins operating automatically.

NOTE: To shut the oven off, press and hold  for five seconds. The red light will appear indicating that the oven will begin the shut down process.






To force shut down in the rare event the control locks up, press and hold  for ten seconds.

Cooking Manually by Probe

1. Preheat the appliance.
2. Touch the desired **Cook Mode** icon.
 Steam  Combi  Convection  Retherm
3. Touch the **Temperature** area to the right of the thermometer icon, enter the oven temperature using the touch pad, then touch the **Check Mark** icon. ✓
4. Touch the **Temperature** area to the right of the probe icon, enter the probe temperature using the touch pad, then touch the **Check Mark** icon. ✓
5. Load the food into the appliance and insert probe into food.
6. Touch the **Start** icon. 








Cooking Manually by Time


1. Preheat the appliance.
2. Touch the desired **Cook Mode** icon.
 Steam  Combi  Convection  Retherm
3. Touch the **Temperature** area to the right of the thermometer icon, enter the oven temperature using the touch pad, then touch the **Check Mark** icon. ✓
4. Touch the **Time** area to the right of the timer, enter the cook time using the touch pad, then touch the **Check Mark** icon. ✓
5. Load food into the appliance.
6. Touch the **Start** icon. 


Using Gold-n-Brown™

1. Follow the first three steps of “**Cooking Manually by Probe**” or “**Cooking Manually by Time**” from the front of this sheet.
2. Touch the **Gold-n-Brown** icon. 
3. Select the desired Gold-n-Brown level and touch the corresponding icon. 
4. Touch the **Start** icon. 



Programming a Recipe

1. Touch the **Add a Recipe** icon. 
2. Follow the first three steps of “**Cooking Manually By Probe**” or “**Cooking Manually By Time**” from the front of this sheet for each cooking step.
3. If there is more than one cooking step, touch the **Write** icon between each step. 
4. After the last cooking step, touch the **Confirm Changes** icon. 
5. A touchpad will appear. Input the name of the recipe and press the **Confirm Changes** icon. 
6. If at any time you need to pause the oven during a program, touch the **Rest** icon. 






NOTE: To shut the oven off, press and hold  for five seconds. The red light will appear indicating that the oven will begin the shut down process.

To force shut down in the rare event the control locks up, press and hold  for ten seconds.

Cleaning The Appliance

1. Touch the **Cleaning** icon. 
2. Touch the **Water On** icon. 

If the appliance is too hot, a warning screen appears. Open the appliance door to allow the oven to cool. When the appliance has finished cooling, begin the cleaning procedure again.

3. Select **Rinse**, **Light**, **Normal**, or **Heavy-duty** cleaning.    
Rinse Light Normal Heavy-duty
4. For **Light**, **Normal**, or **Heavy-duty**, insert appropriate number of CombiClean® tabs as directed by the touchscreen, or spray CombiClean liquid cleaner inside the oven. Close the oven door and touch the **Start** icon. 
5. After the cleaning cycle is complete, leave the appliance door open approximately 2" (50mm) to allow the appliance to air dry.