
KF-772DH Clam Shell Sealer Spare Parts **DIAGRAM**

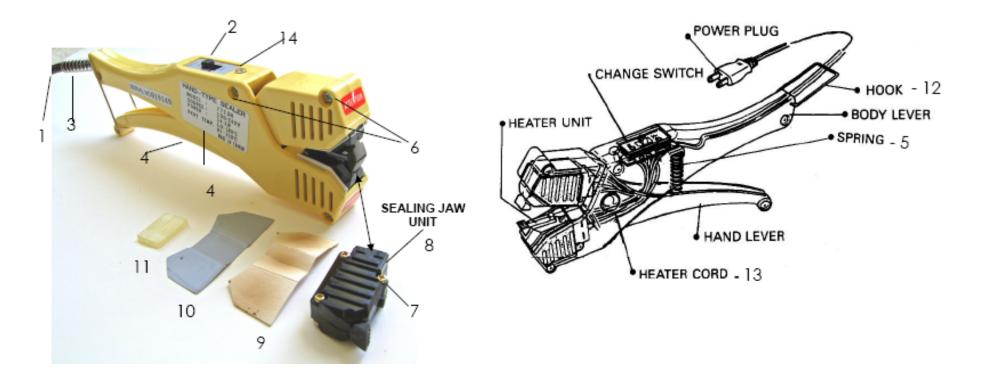



Detailed Parts of Sealing Jaw

Part Number	Description	Part Number	Description
1	Power / AC Cord	8	Top & Bottom Sealing Jaws Unit
2	Power Switch / Temp Switch w/PC Board	9	Insulator Plate (Inner)
3	Protected Spring (same as KF-150)	10	Rubber Plate (Outer)
4	Cover Set/Hand-Bottom & Body-Upper	11	Silicone Rubber (Top or Bottom)
5	Reverted Spring	12	Hook
6	Fixed Screw	13	Heater Cord with Power Switch, Protected Spring
7	Sealing Jaw Screw	14	Signal Light