




1 HP COMMERCIAL HAND BLENDER

MODELS:

KHBC412OB0 (Onyx Black)
KHBC414OB0 (Onyx Black)
KHBC416OB0 (Onyx Black)
KHBC418OB0 (Onyx Black)
KHBC420OB0 (Onyx Black)

BLENDER PARTS

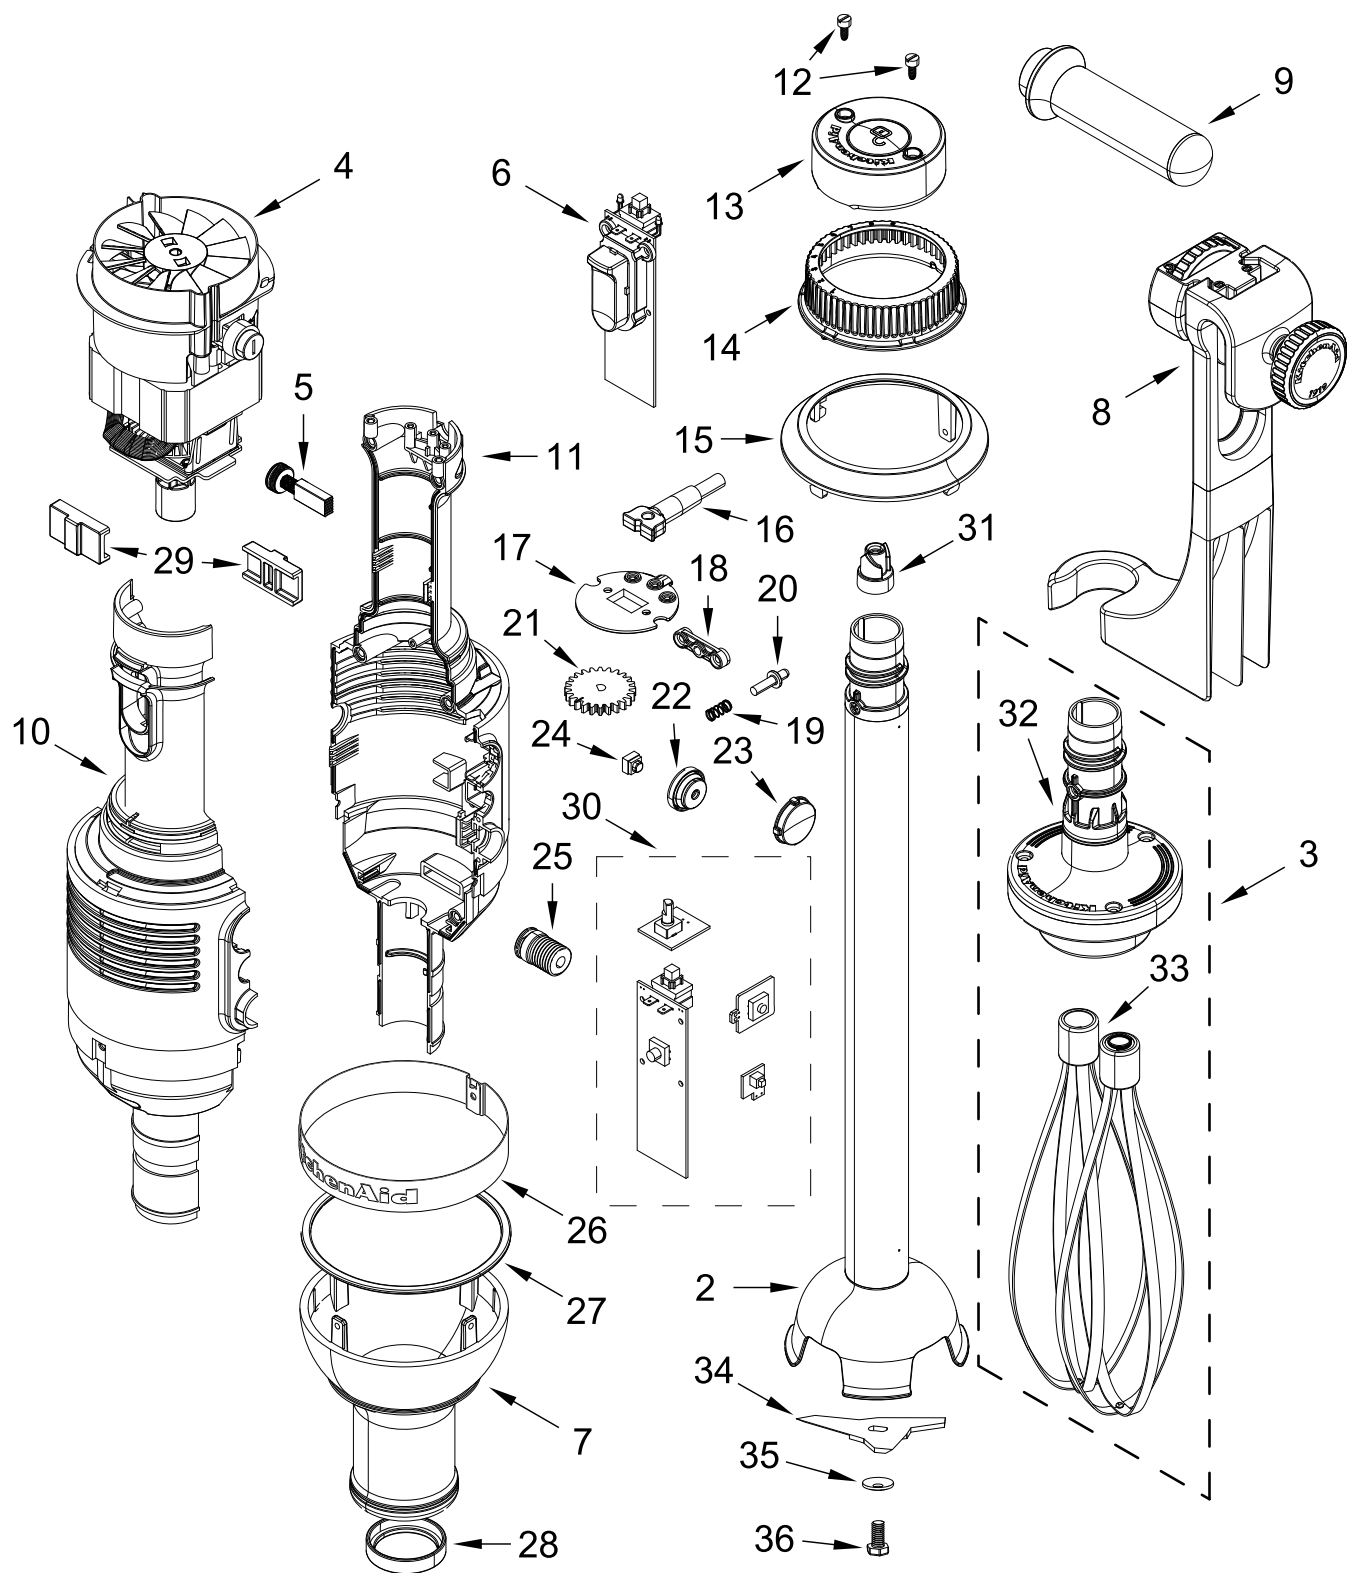

BLENDER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10831307	Use & Care Guide
2	W10860149	Blender Arm - 12"
	W10860150	Blender Arm - 14"
	W10860151	Blender Arm - 16"
	W10860152	Blender Arm - 18"
	W10860153	Blender Arm - 20"
3	W10860157	Whisk
4	W10860158	Motor Assembly
5	W10860159	Carbon Brush Assembly
6	W10860161	PCBA & Switch Assembly (Includes 30)
7	W10860162	Apron Assembly
8	W10860163	Bowl Clamp Assembly
9	W10860164	Secondary Handle
10	W10860165	Motor Housing, Front

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10860166	Motor Housing, Back
12	W10860167	Screw, Handle Cap
13	W10860168	Handle Cap
14	W10860169	Speed Selector Button
15	W10860170	Speed Selector Base
16	W10860171	Cord Lock
17	W10860172	Power Cord
18	W10860173	Spring Stop Plate
19	W10860174	Spring, Interlock
20	W10860177	Knob, Agitator
21	W10860178	Pinion, Speed Selector
22	W10860179	Rubber, Continuous Run
23	W10860181	Button, Continuous Run
24	W10860182	Rubber, Interlock Switch
25	W10860183	Nut, Handle

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
26	W10860184	Trim Band
27	W10860186	Gasket
28	W10860187	Rubber, Blender Arm
29	W10860188	Rubber, Motor Side
30	W10860191	PCBA Assembly
31	W10860192	Adapter, Blender
32	W10860194	Gearbox, Whisk
33	W10860196	Tines, Whisk
34	W10860889	Blade
35	W10860890	Washer
36	W10860891	Screw