




Dish Dolly Quick Adjust Arm Instructions


Step 1

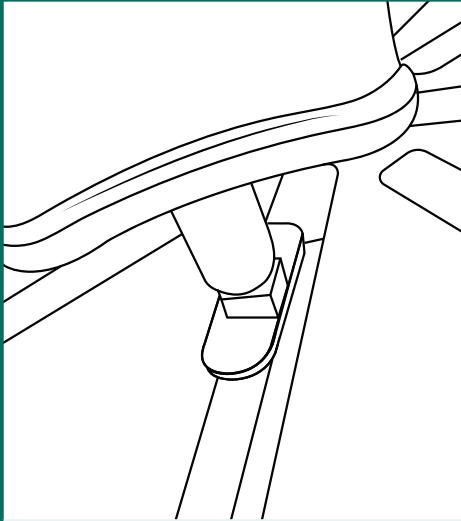

Insert the dish dolly arm into its desired slot.


NOTE: The bottom foot should be parallel to the slot.

Step 2

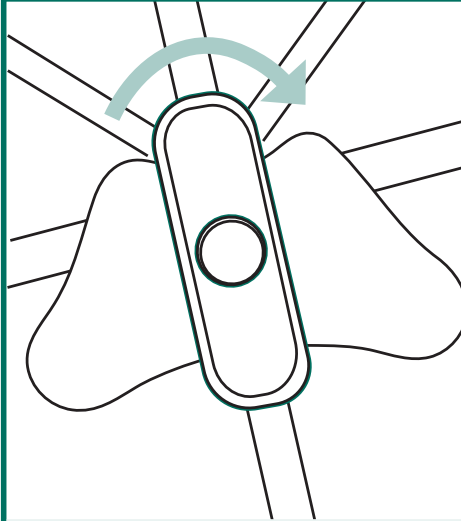


Turn the top knob clockwise until tension is felt while turning.

Step 3

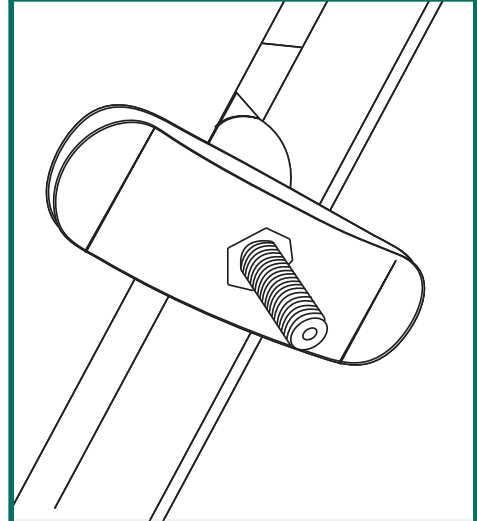


Once tightened, the dish dolly arm should not move from its desired location.

Step 4

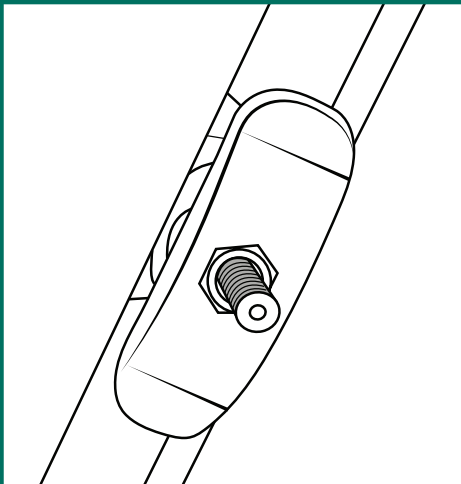


NOTE: Turning the top knob can tighten or loosen the bottom foot.

Step 5

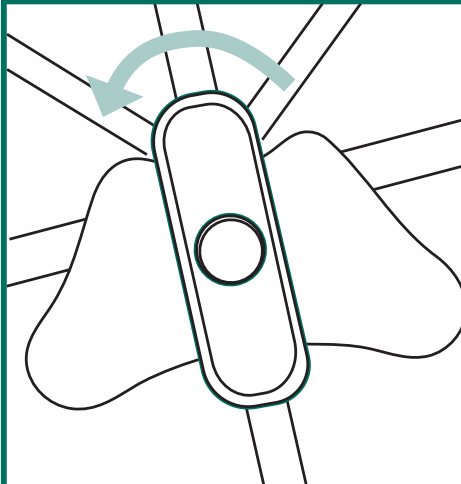

Adjustment: Turn the top knob counterclockwise to adjust the dish dolly arm location.

Step 6

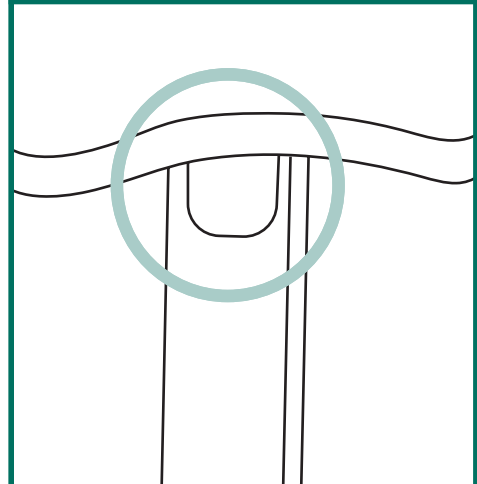

Once the bottom foot is back in the parallel position, move the arm to the new desired position. Repeat Step 2 to tighten.