

BREAD SLICER

CPF412, CPF416, CPF422, CPF512, CPF516, CPF522

IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS

DANGER
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,
CAREFULLY FOLLOW THESE INSTRUCTIONS

TABLE OF CONTENTS

<u>SECTION « A » DESCRIPTION</u>	<u>PAGE</u>
Introduction	A1
Construction	A2
Shipping	A2
Installation warnings	A3
Installation	A4
Operation of the bread slicer	A5
Instructions to remove the blades	A7
Troubleshooting	A8
For more information, please contact our office :	A9
 <u>SECTION « B » DIMENSIONS</u>	
CPF412, 416 & 422	B1
CPF512, 516 & 522	B2
 <u>SECTION « E » COMPONENT PARTS</u>	
CPF412, 416 , 422 & CPF512, 516, 522	E1
 <u>SECTION « G » ELECTRIC SCHEMATIC</u>	
CPF412, 416, 422 & CPF512, 516, 522	G1
 Warranty	

INTRODUCTION

CAUTION READ ALL INSTRUCTIONS

The manufacturer suggests to read this manual carefully.

This bread slicer is manufactured with first quality material by experienced technicians. Proper installation and maintenance will guarantee a reliable service for years to come.

A nameplate fixed to the slicer specifies the model number, serial number, voltage and amperage.

ATTENTION

DOYON is not responsible for damages to the property or the equipment caused by personnel who is not certified by known organisations. The customer is responsible for finding qualified technicians in electricity.

CONSTRUCTION

You just bought the most advanced bread slicer in the world, "DOYON" technology at its best. This slicer is manufactured using the highest quality components and material.

SHIPPING

For your safety, this equipment has been verified by qualified technicians and carefully crated before shipment. The freight company assumes full responsibility concerning the delivery in good condition of the equipment in accepting to transport it.

IMPORTANT

RECEPTION OF THE MERCHANDISE

Take care to verify that the received equipment is not damaged before signing the delivery receipt. If a damage or a lost part is noticed, write it clearly on the receipt. If it is noticed after the carrier has left, contact immediately the freight company in order that they do their inspection.

We do not assume the responsibility for damages or losses that may occur during transportation.

INSTALLATION WARNINGS

POWER FAILURE WARNING

WHEN YOU HAVE A POWER FAILURE, SHUT OFF THE BREAD SLICER POWER SWITCH TO PROTECT THE ELECTRIC COMPONENTS WHEN THE POWER COMES BACK.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY APPLIANCE.

INSTALLATION AND SERVICE

WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

Installation and service must be done by specialised technicians. Contact a certified electrician.

The bread slicer must be connected to the utility and electrically grounded in conformity to the effective local regulations. If these are not established, the oven must be connected according to the Canadian Electrical Code (CSA-C22.1-XX) or National Electrical Code (NFPA 70-XX). Refer to last edition year for XX. Installation must also **allow proper access for service** (24 inches each side and back).

INSTALLATION

IN GENERAL


Take off the packaging material with care. Take off all the material used for packing and accessories.

1. To the electrician




Electrical supply installation must be in accordance with the electrical rating on the nameplate.

OPERATION OF THE BREAD SLICER



Adjust the position of the finger at high or low position according with your bread, with the black adjustment screw. (picture A)

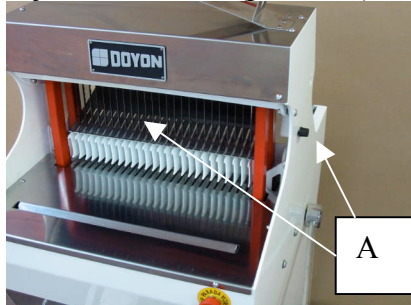


1. Turn the main switch to the [I] position.
2. Twist out the emergency stop switch.
3. Push the lever partway.

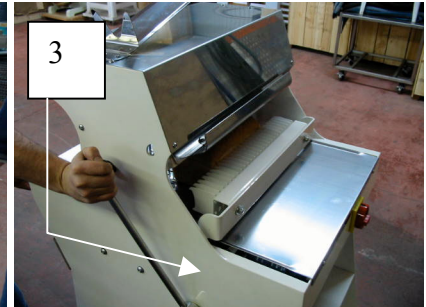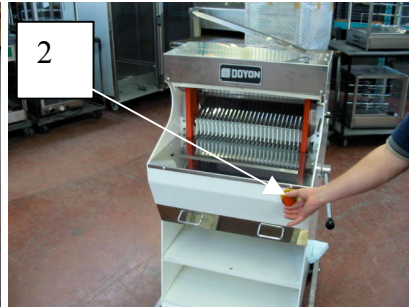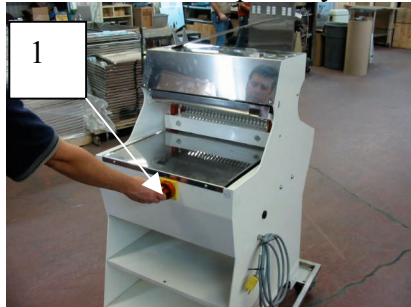

4. Insert the bread.
5. Push the lever again all the way back to start the slicer.


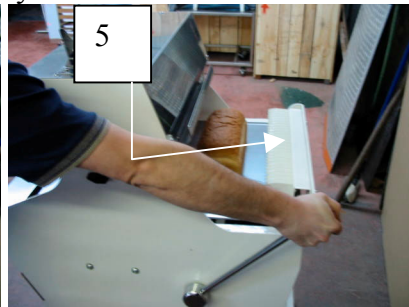
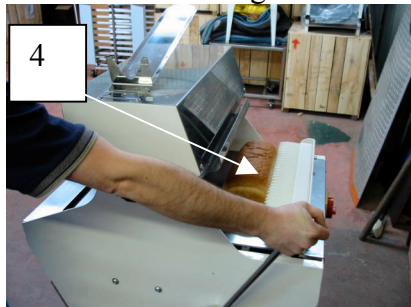


6. Let go and restrain the lever tension as not to crush the bread.


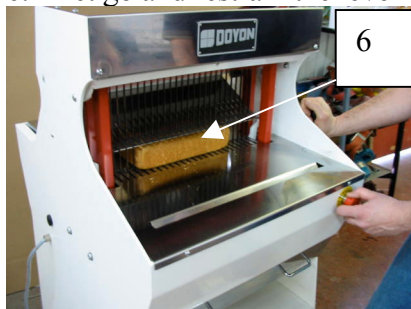


7. When the bread is sliced, the slicer stops working.
8. Remove bread from the outlet.

9. Place it on the bagger.
10. Slip the bag around the bread.
11. Remove the bag with the bread and tie the bag.



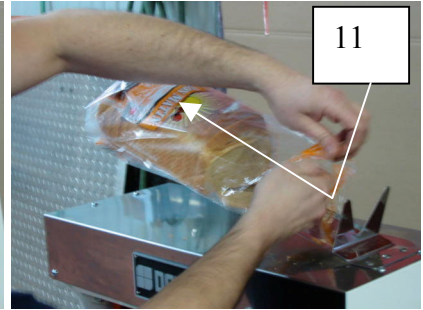
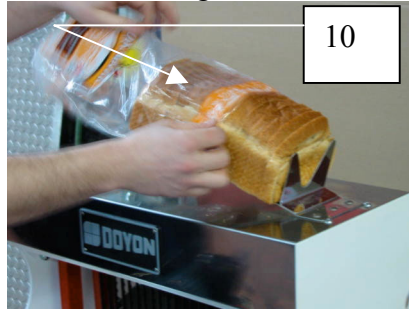
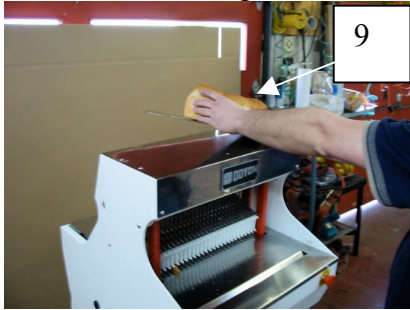


Remove the crumbs drawer to empty.

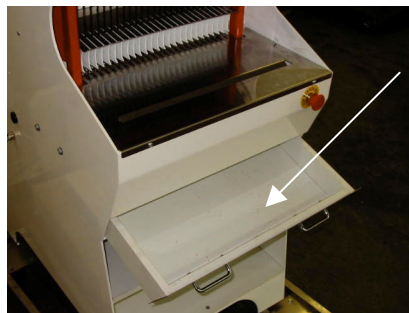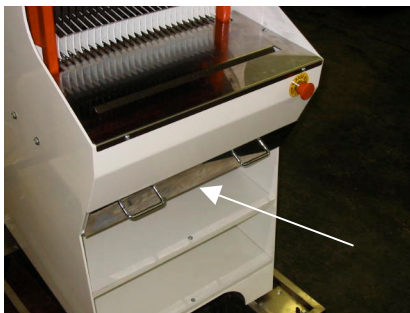

INSTRUCTIONS TO REMOVE THE BLADES

1. Remove the top cover.
2. Remove the front plate cover (picture 2) to have access to the bottom blade frame. To remove this plate cover, take out all front screws and loose the two screws at the other side of the blade frame (picture 2A).
3. Loose the blade screws and pull out the blades (picture 3).
4. Install the new blades and reinstall everything back.

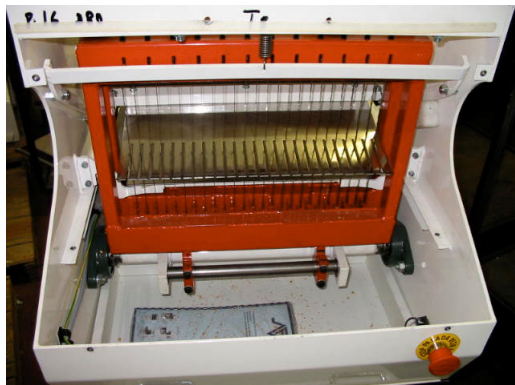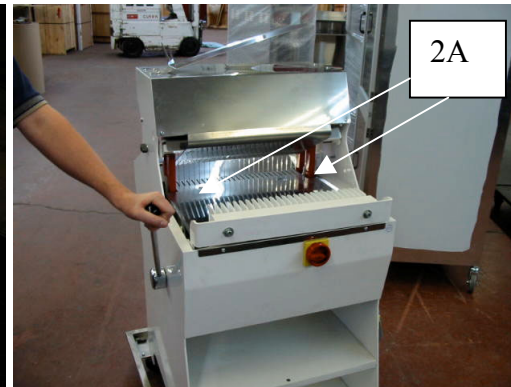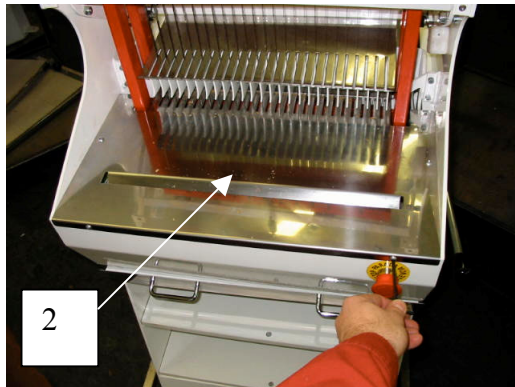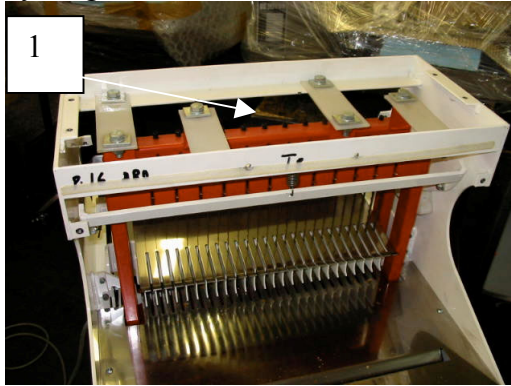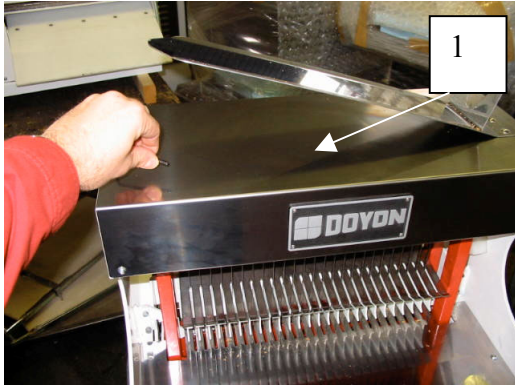

TROUBLESHOOTING
BEFORE CALLING FOR SERVICE
ANSWERS TO MOST FREQUENT QUESTIONS

Questions	Solutions
The bread slicer does not turn on.	Check the breakers of the building. Check the power on the wall outlet for the slicer. Check if the main switch of the slicer is at position [I]. Check if the emergency stop is twisted out. Check the lever micro switch underneath the bread infeed plate. Push the lever all the way back to start the slicer.
The bread does not have a nice cut.	Check and replace blades.
The lever is too hard or too loose.	Adjust the spring tension underneath the bread infeed plate.

CAUTION
SAVE THESE INSTRUCTIONS

FOR MORE INFORMATION,
PLEASE CONTACT OUR OFFICE:

DOYON EQUIPMENT INC.
1255, rue Principale
Linière, Qc, Canada G0M 1J0



Tel. : 1 (418) 685-3431
Canada : 1 (800) 463-1636
U.S. : 1 (800) 463-4273
FAX : 1 (418) 685-3948

Internet: <http://www.doyon.qc.ca>
E-Mail : doyon@doyon.qc.ca



SECTION
B

DIMENSIONS

CPF412, 416 & 422

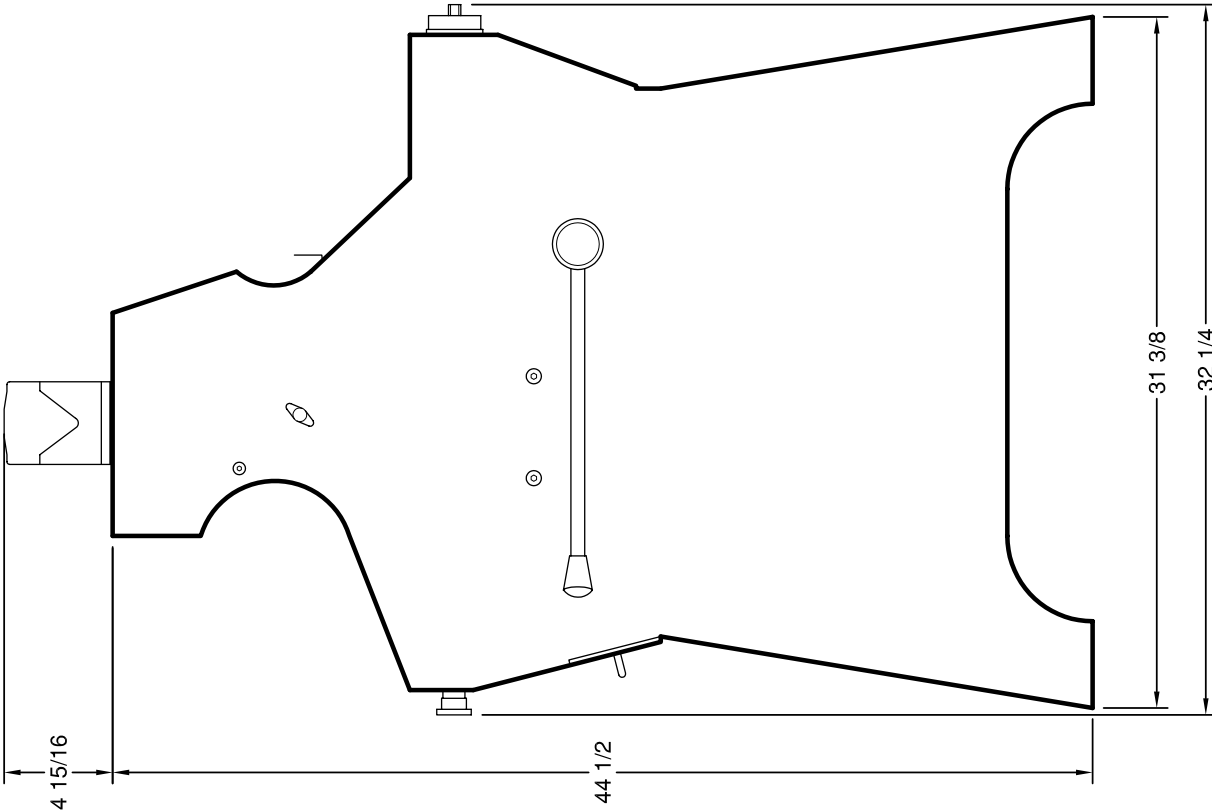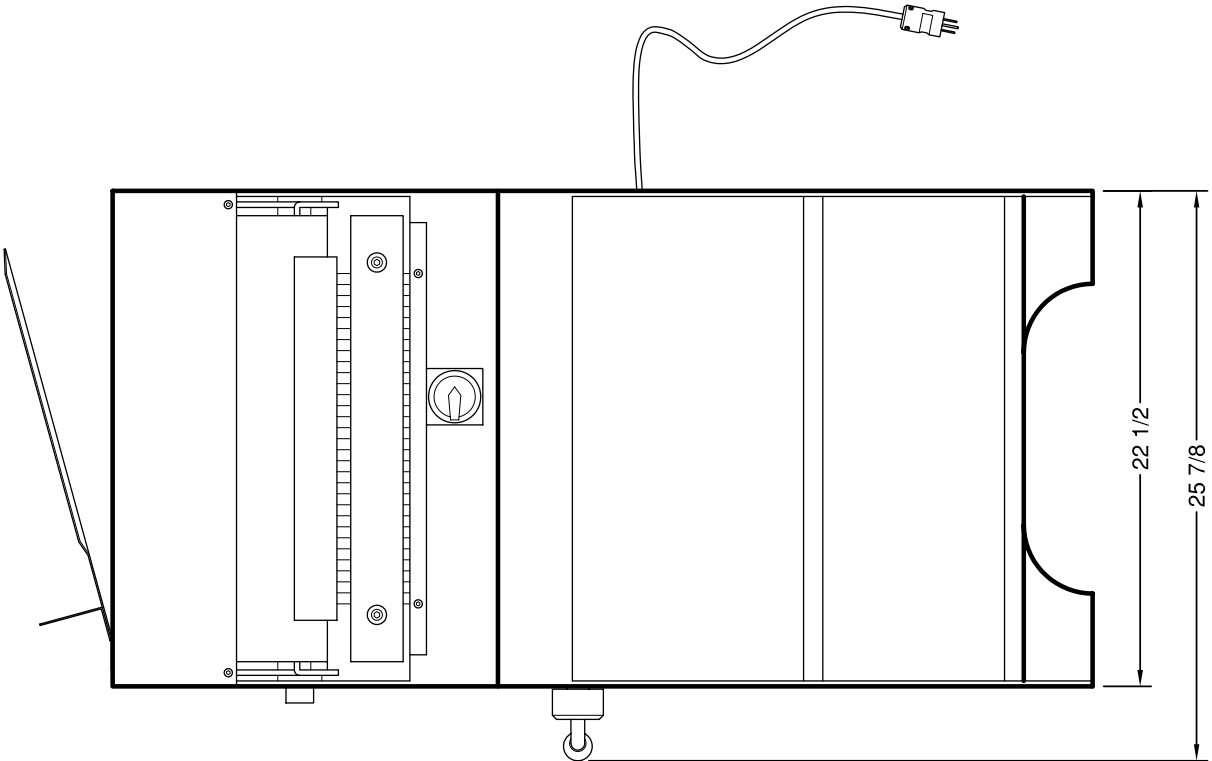


CPF512, 516 & 522

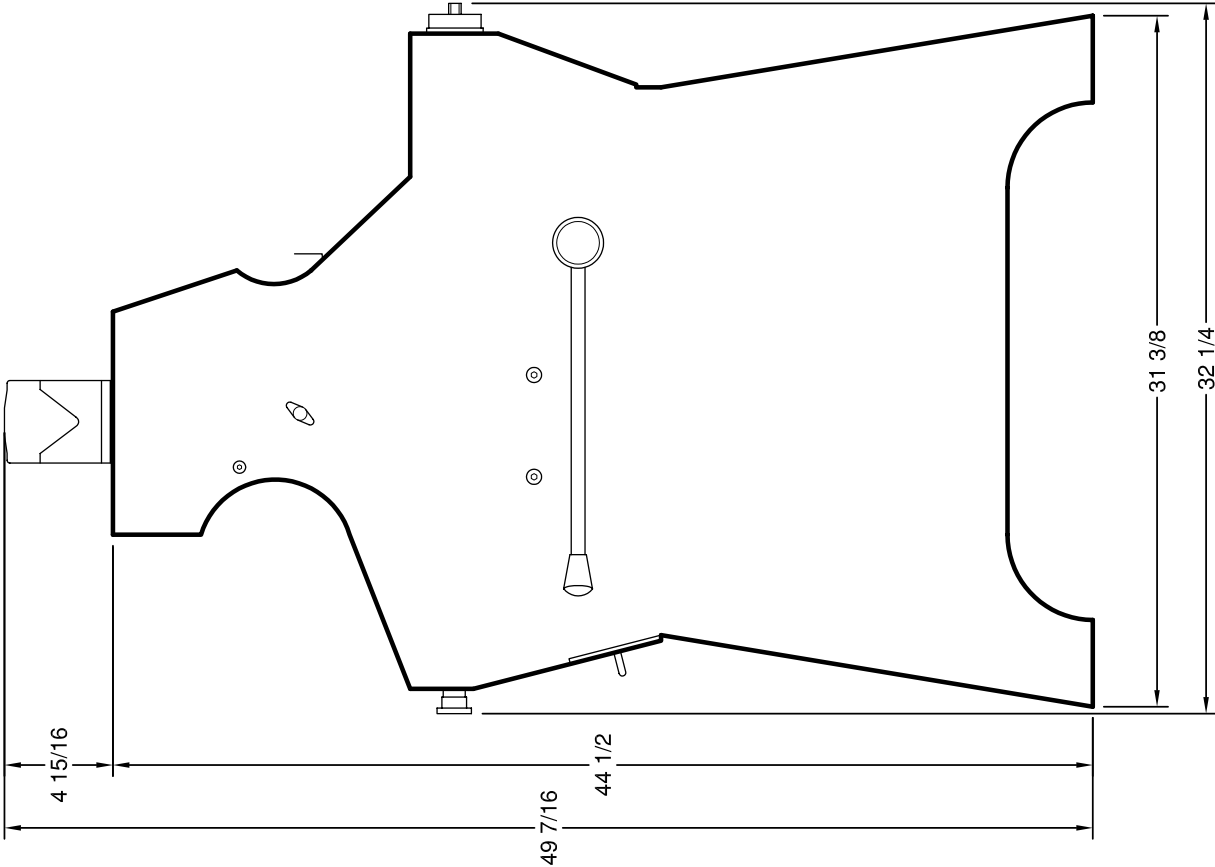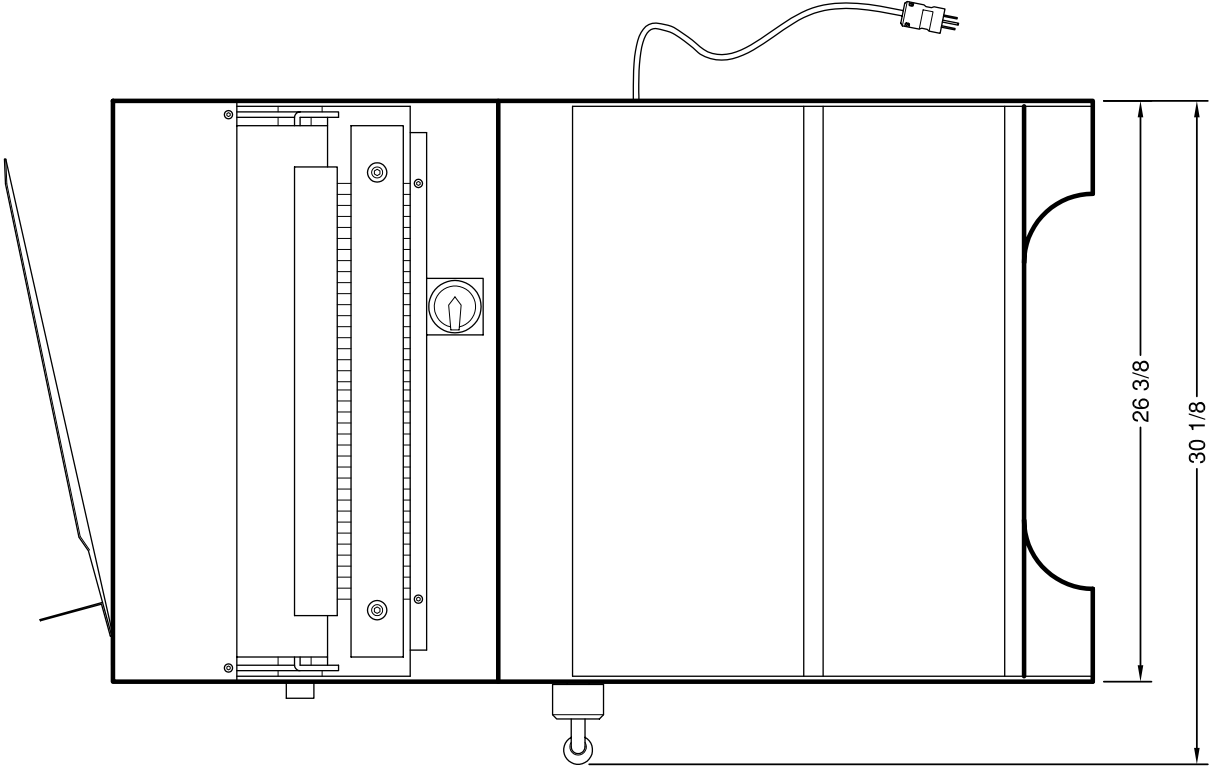

SECTION
E

COMPONENT PARTS

E1

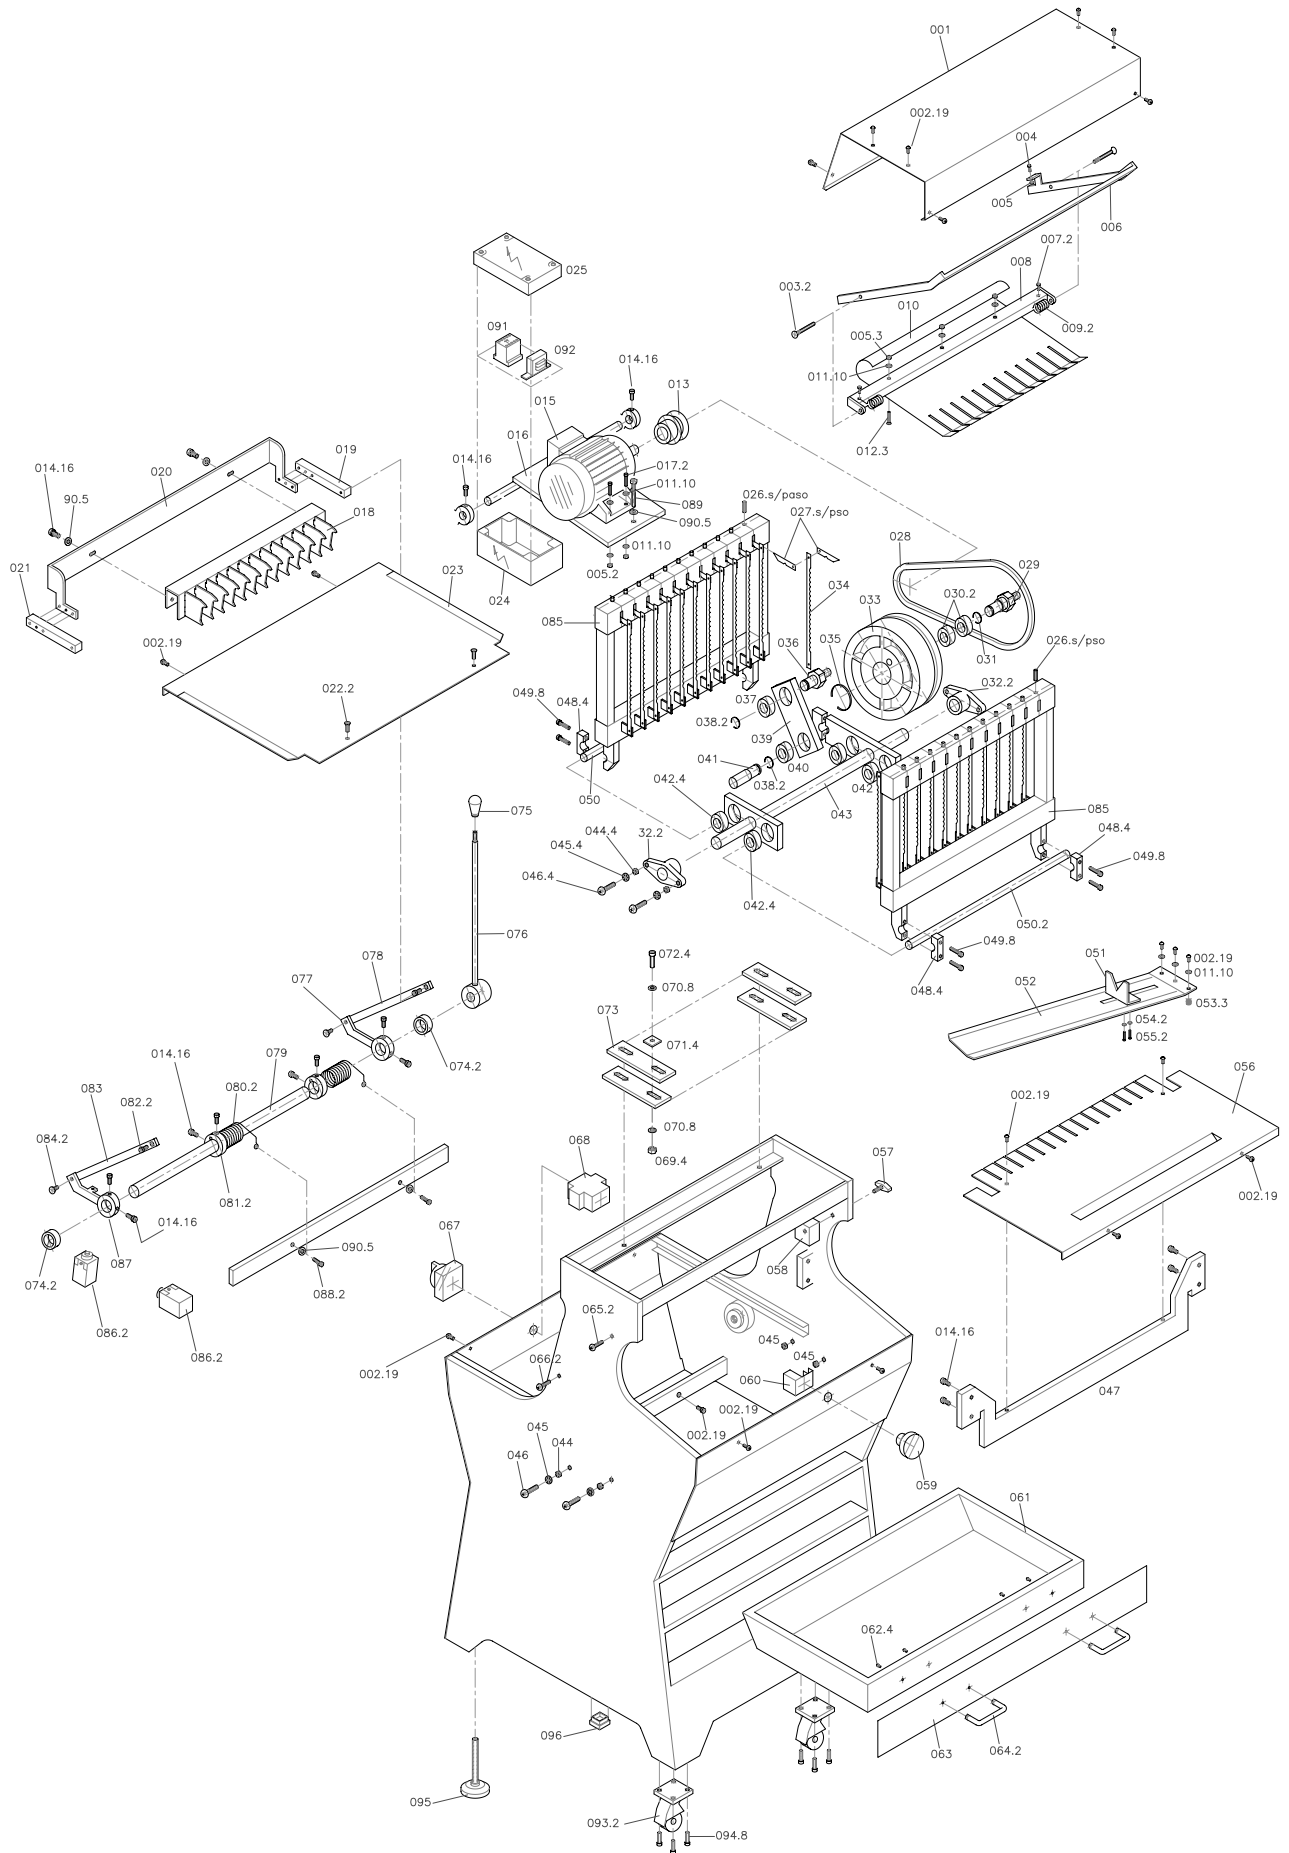

SECTION
G

ELECTRIC SCHEMATIC

LIMITED WARRANTY

(Continental United States Of America And Canada Only)

Doyon Equipment Inc. guarantees to the original purchaser only that its product are free of defects in material and workmanship, under normal use.

This warranty does not cover any light bulbs, thermostat calibration or defects due to or resulting from handling, abuse, misuse, nor shall it extend to any unit from which the serial number has been removed or altered, or modifications made by unauthorized service personnel or damage by flood, fire or other acts of God. Nor will this warranty apply as regards to the immersion element damaged by hard water.

The extent of the manufacturer's obligation under this warranty shall be limited to the replacement or repair of defective parts within the warranty period. The decision of the acceptance of the warranty will be made by Doyon Equipment service department, which decision will be final.

The purchaser is responsible for having the equipment properly installed, operated under normal conditions with proper supervision and to perform periodic preventive maintenance.

If any parts are proven defective during the period of one year from date of purchase, Doyon Equipment Inc. hereby guarantees to replace, without charge, F.O.B. Linière, Quebec, Canada, such part or parts.

Doyon Equipment Inc will pay the reasonable labor charges in connection with the replacement parts occurring within one year from purchase date. Travel over 50 miles, holiday or overtime charges are not covered. After one year from purchase date, all labor and transportation charges in connection with replacement parts will be the purchaser's responsibility.

Doyon Equipment Inc. does hereby exclude and shall not be liable to purchaser for any consequential or incidental damages including, but not limited to, damages to property, damages for loss of use, loss of time, loss of profits or income, resulting from any breach or warranty.

In no case, shall this warranty apply outside Canada and continental United States unless the purchaser has a written agreement from Doyon Equipment Inc.