






Wood cutlery dispenser instructions

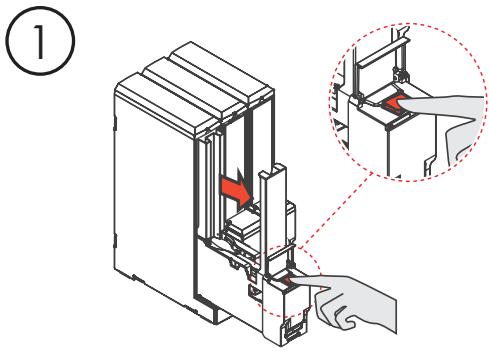


Open flap. Press red button.
Pull out cartridge.

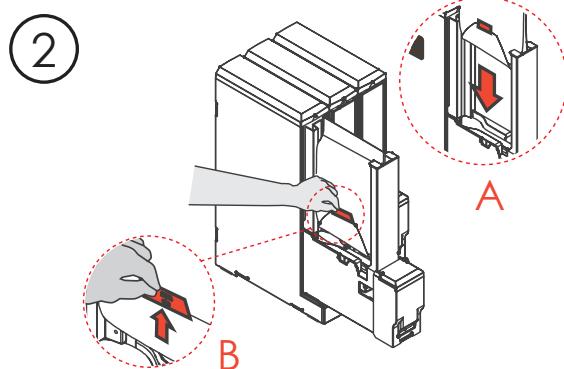

A. Load cutlery bag into chute.
B. Pull and peel label/tab off.

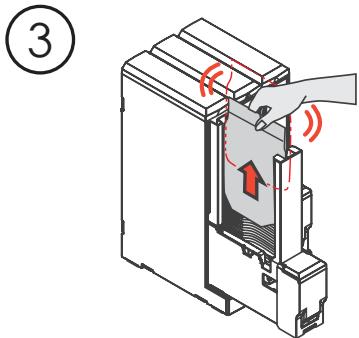

Jiggle and slowly pull up the bag from the chute. Make sure all the cutlery pieces are facing the same direction.

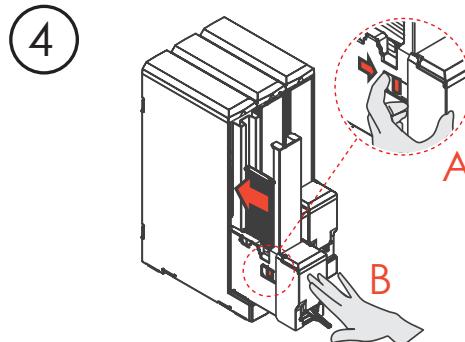

A. Pull red trigger to release the first utensil.
B. Push cartridge back in place.
Ready to use.

hoffmaster®

Hoffmaster Group, Inc.®
Oshkosh, WI 54901 • 800-327-9774
hoffmaster.com