

# Assembly Instructions — Classic Activity Leg

*Leg Designed for use with Econoline Activity Tables.*

## Tools Required:

- #2 Phillips head screw driver or cordless screw-driver with #2 Phillips bit

## Step 1

Place the table topside down on a clean, non scratching surface.


## Step 2

Leg locations are marked for proper installation.

Place leg at the proper location using markings as a guide.

Install Phillips head screws (provided) through the slotted center hole and into the table top. Tighten fully and repeat for remaining seven holes.


Repeat step 2 for the remaining legs.

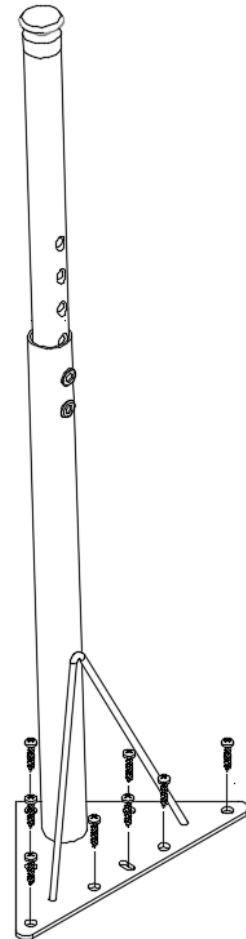

## Step 3

Adjust each leg to desired height using the provided Hex wrench.

Using two people, turn the table upright and rotate Nylon Glides as necessary to level table.

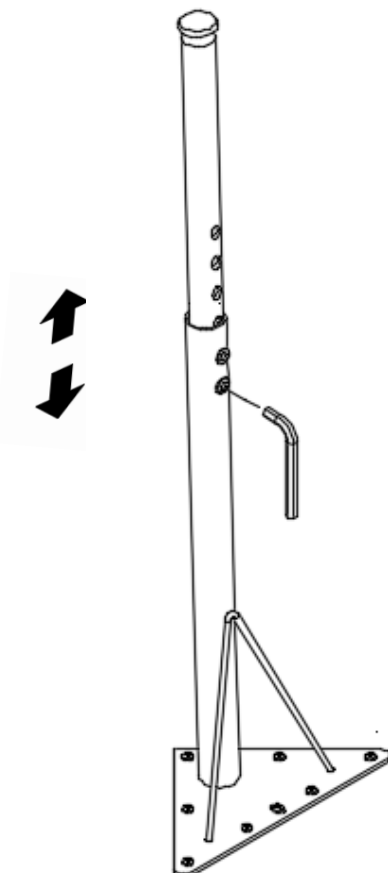

**SCAN ME**—For Assembly Video

# Melamine Econoline Top

## USE & CARE INSTRUCTIONS

A Melamine work surface will give you years of service if used with the same care you would give to a real wood furniture top.

1. Clean surface with a damp cloth, and then dry. Use a couple of drops of dish-washing detergent for stubborn stains. Be sure to dry the top after cleaning.
2. Crayons marks may be removed by using a cloth dampened with a few drops of mineral spirits (paint thinner, Goo Gone, Good Off), or similar solvent. Then wipe the surface dry.
3. Permanent marker can be removed by using a cloth dampened with a few drops of fingernail polish remover, or lacquer thinner. Then wipe the surface dry.
4. Do not leave wet objects on the top for long periods of time. Wipe up spills at once.
5. Do not place hot objects directly on the table top.
6. Use care to prevent scratching the top. Melamine is scratch resistant, it is not scratch proof. Treat the top with the same care you would give to the wood furniture in your home or office, and it will give you years of service.

### WARRANTY

This table has a 1-Year Warranty against Defects in Materials and/or Workmanship. This Warranty does not cover normal wear, abuse, accidental damage, improper assembly or failure to follow the Use & Care Instructions.