
YF-8J VOLUMETRIC POWDER FILLER

1. SPECIFICATIONS:

MODEL	DIMENSION (mm)	POWER	WEIGHT	TANK
YF-8J	410x270x480	110/220V 40W	12kg	5L

2. OPERATION:

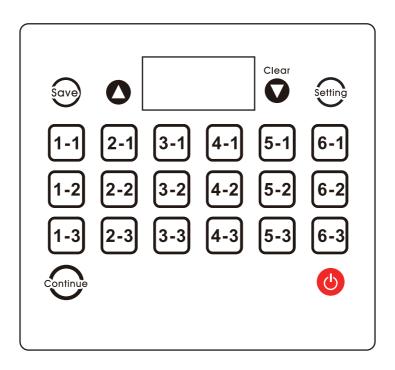

- 1. Please fill the powder up before turn operation.
- 2. To the continuous feeding, please pin the "Continue" key for 3 seconds until alarm warning in "B" (To **STOP** "continuous mode", press "continuous" key again)
- 3. Press "▲" for check the counter.
- Fill the powder up when the supply lamp(panel) lights up, and pin "▼" for 5 seconds for "0" reset after fill up.
- 5. Setting for the single running: Press "SET" → Select the level → Press "▲" or "▼" to increase or reduce → Press "SET" again → Press "SAVE" → Setting finished.

3. PRECAUITION & ATTENTION:

- 1. Clean the tank and the output nozzle by plastic brush daily without water washing.
- 2. For the propose of powder clearance from tank, please keep pressing "Continue" key in 3 seconds till alarm warning in "Beep" sound. (To stop, please press "Continue "key again.) And then fill hot water (50~60 degre C) into tank for washing.
- 3. Warning! Well cover the acrylic cap above tank in case the powder got wet in bulk.

ITEM	FUNCTION SETTING	FACTORY SETTING	SETTING INFORMATION
P1	Running Setting (0~250)	200	Press 「▲ 」: increase the powder volume. Press 「▼ 」: decrease the powder volume.
P2	Alarm Setting For Volume Shortage (0~200)	0	when the display shows "P1", press SET button for five seconds until the display shows "P2" 0: indicator light doesn't flash.(100 unit)
P4	Stop Setting For The Output Nozzle	1	0 (OFF) 1 (ON)

4. SETTING INSTRUCTION (FOR ENGINEER)

%Press the "SET" for 5 seconds to enter the mode for function setting, and leave mission after press "SET" and "SAVE" when finish the setting.

5. USER'S MAINTENANCE:

Strip the output nozzle down and clean it after working, and cover the output nozzle with yellow plastic cap once complete clearance.