

# Operations Manual

Endurance X2 Dual Heat Manual Dough Press  
Model #: DP2000



**PROLUXE**  
WWW.PROLUXE.COM

Version: 122820

Congratulations on your selection of the Endurance X2 Manual Dough Press. Proluxe is a leading manufacturer of food preparation and cooking equipment designed for the most demanding commercial kitchens. Proluxe equipment is a result of the highest quality engineering and time-tested design.

This manual includes installation, operation, and maintenance procedures for your new Endurance X2 Dough Press. Please read this manual carefully and keep it with your machine for proper operation and lasting service.

## INSTALLATION

### Domestic

Use a separate 15 amp AC circuit. Only industrial extension cords with proper wire size should be used; size 16/3 wire for distance up to 25 feet, and size 14/3 for distance up to 50 feet.

### International

Use a designated 16 amp AC circuit. Only industrial extension cords with proper wire

size (2.5 sq. mm) shall be used. Make sure there is a proper electrical wall outlet located within reach of the cord and plug attached to the press.

Then place the dough press in an area which allows for “swing clearance” of the lower platen. The machine requires a vertical clearance of 33” from the bottom of the machine to the top of the pull handle shown in FIG. 1.

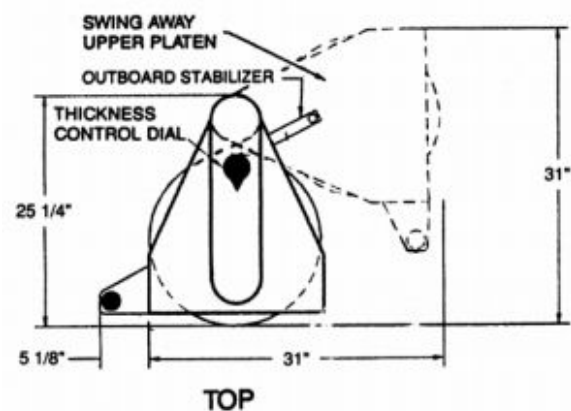


FIG. 1

## Limited Machine Warranty

Proluxe warrants this dough press machine, when operated under normal conditions, to be free from manufacturing defects in material and workmanship for a period of one year on parts and labor from the invoice date.

This warranty will be effective only when Proluxe authorizes the original purchaser to return the product to the factory in Perris, California freight prepaid and only when the

product, upon examination, has proven to be defective.

This warranty does not apply to any machine that has been subjected to misuse, negligence or accident. Proluxe shall not be liable for the injury, loss or damage, direct or consequential, arising out of the use or the inability to use the product. No claim of any kind shall be greater in amount than the sale price of the product or part to which claim is made.

This is the sole warranty given by the company, it is in lieu of any other warranties, expressed or implied, in law or in fact, including the warranties of merchantability and fitness for a particular use, and is accepted such by the purchaser in taking delivery of this product.

## SPECIFICATIONS

Electrical:

240V/50-60Hz/3000W/12.5Amps

Requires 30 AMP outlet

Also available; specify when ordering:

- Voltage: 240/208
- Amps: 12.5/22
- Watts: 3000/4600

Includes: 72" NEMA 6-15P approved cord and plug.

Shipping Weight:

180lbs. (82kg.)

## INTERNATIONAL SYMBOLS

*Symboles internationaux*



Power Off  
*éteindre*



Power On  
*allumer*



Hot Surface  
*surface chaude*



Risk of Electrical Shock  
*Risque de choc électrique*



Protective Earth Terminal  
*Borne de terre de protection*



Caution - Warning  
*chaud - avertissement*

## SAFETY SUMMARY



### Warning

To reduce the risk of electrical shock, do not remove or open cover. No user-serviceable parts inside. Refer servicing to qualified personnel.

### Avertissement

*Pour réduire le risque de choc électrique, ne pas retirer ou couvercle ouvert Aucune pièce réparable par l'utilisateur, reportez-vous à du personnel qualifié.*



### Warning

In case of power cord damage, do not attempt to repair or replace the power cord. Please contact the manufacturer or the local distributor.

### Avertissement

*Pour une protection continue contre l'incendie et de choc électrique, remplacer avec le même type et calibre du fusible. Mis fusible supplémentaire nominale max 3A, 120 Vac.*



### Warning

For continued protection against fire and electric shock, replace with the same type

and rating fuse. Listed Supplemental Fuse rated max 3A, 120Vac.

### Avertissement

*Pour une protection continue contre l'incendie et de choc électrique, remplacer avec le même type et calibre du fusible. Mis fusible supplémentaire nominale max 3A, 120 Vac.*



### Caution Hot

Avoid touching hot surfaces while operating the machine.

### Attention à chaud

*Évitez de toucher les surfaces chaudes lorsque vous utilisez la machine.*




### Caution

When servicing or cleaning the machine, make sure that the power cord is removed from the wall socket.

During normal operation, the base of the machine must be installed or placed above the wall socket.

### Avertissement

*Lors de l'entretien ou du nettoyage de la machine, assurez-vous que le cordon d'alimentation est débranché de la prise murale.*

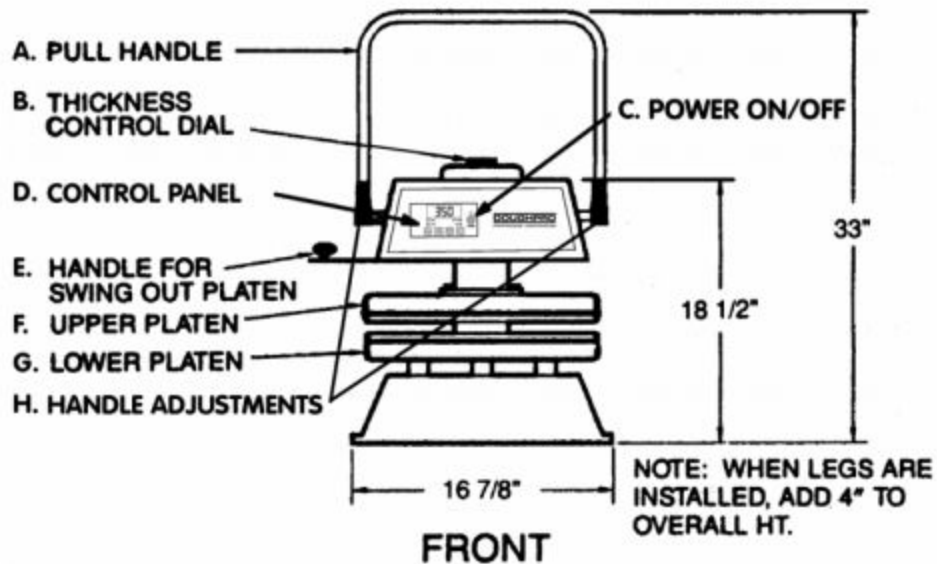

Familiarize yourself with the controls and operating mechanisms before using the Endurance X2.

(A) Pull-down pressing handle for raising and lowering the upper platen. This action forces the closing of the platens.

(B) Thickness control dial.

(C) On/Off button. The green light above the button will illuminate when powered on.

(D) Control Panel (See control board operations)

(E) Handle for swing-out platen.

(F) Upper Platen

(G) Lower Platen

(H) Handle Adjustments (See tightening the pull-down handle.)

Your dough press is equipped with a set of rubber mounting pads.

If you would prefer a set of legs which would raise your machine off the table 4 inches. Please contact sales at [info@proluxe.com](mailto:info@proluxe.com) for a set. Shipping charges may apply.

## OPERATION TEMPERATURE & TIMER CONTROL

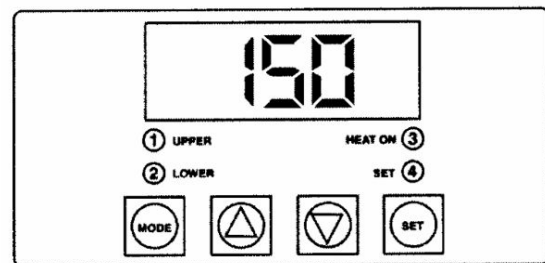


FIG. A

## Solid State Controller

This controller has three (3) control features:

1. Temperature – May be set from 100°-425°F (38°-163°C) Factory default is 200°F.

2. Time – Time may be set from 1 second to 10 minutes.

3. Counter – Cycle counter counts the number of applications from 1 to 9999 (see additional Notes – Counter).

4. “2 Lower” (Fig. A) Refers to models using upper and lower heated surfaces.

## Controller Operation

### 1. Viewing the Modes of Operation:

To view the set points of temperature, timer and counter, press MODE button to view the desired mode of operation.

### 2. Changing Temperature:

Press MODE button until temperature is displayed.

Press and hold SET button while pressing the UP ( ↑ ) and DOWN ( ↓ ) arrow buttons to desired temperature setting.

### Fahrenheit/Celsius Conversion:

The temperature controller can be programmed to display either °F or °C. Press the MODE button until the temperature is displayed . Then push a hold the SET button for 10 seconds.

### 3. Changing Time:

Press MODE button until time is displayed. Press and hold SET button while pressing the UP ( ↑ ) and DOWN ( ↓ ) arrow buttons to desired timer setting.

### 4. Resetting the Counter:

Press MODE button until the counter is displayed.

To reset the counter (# of cycles), simultaneously push UP ( ↑ ) or DOWN ( ↓ ) arrow buttons (approx. 5 seconds).

## DOUGH PRESSING OPERATIONS

### Setting Crust Thickness Control:

The thickness is determined by dough weight and temperature setting on each platen. Setting crust thickness is as simple as the twist of a dial The thickness adjustment dial can be located on the top of the machine.

### Pressing Dough:

For best results, your dough should be proofed before pressing, but it will also press directly out of your refrigerator. Flour is not required to press a crust and **should not** be dusted on any part of the machine.

1. Check to see if you have the correct type of electrical current or serious damage could occur.

2. Press the power button, the green light above will illuminate when powered on.

3. Set your desired temperature on the control panel by using FIG. A and the instructions above. We recommend a temperature of 150°F. Testing with your own dough may desire a different setting.

Note: Heat is provided in the upper platen is only for purposes of enabling the dough to flow more rapidly in the pressing cycle. The heat IS NOT intended for baking.

4. Set the thickness control which is located on top of the machine. You can adjust this control to your needs and requirements.

Note: Diameter and thickness is determined through experimenting with your own dough and is a product of dough weight, temperature, pressing time, and thickness setting.

5. Swing open the lower platen and apply a quick spray of a good water based food release on the lower platen.

6. Place your pre-portioned ball of dough in the approximate center of the lower platen. Add another light spray to the top of the dough ball.

7. Close the platen and pull the handle down to begin pressing.

8. Hold the handle down and the timer will actuate and, when the time cycle is completed. Pull the handle back to starting position and remove your product.

9. Remove the finished product by rotating the lower platen until you have proper space to remove your dough.

10. Remove the crust, place on a pan or peel, add toppings and bake.

## ADDITIONAL NOTES

### Tightening the Pull-down Handle

The pull-down pressing handle requires adjustment periodically to prevent it from free falling. Whenever the handle becomes loose it can easily be tightened.

1. Using a 3/16" hex shaped Allen wrench, insert in key slot located on the right beneath the upper shroud.
2. Tighten until the press action of the handle becomes firm.

## RECOMMENDED SEASONING & CLEANING PROCEDURES

Before use you must properly season your platens to prevent your dough from sticking.


### Tools Required:

- Food release
- Soapy water solution
- Washcloth
- Paper towels

**DO NOT** use steel wool or harsh abrasives, it can cause costly damage.

1. Before cleaning make sure the unit is turned off.
2. Spray lower platen with approved food release/oil spray.
3. Wipe oil across lower platen with paper towel.
4. Wipe oil across upper platen.

5. Mix a warm dish soap and water solution.
6. Soak washcloth and wring to remove excess water.
7. Wipe lower and upper platen with damp cloth.

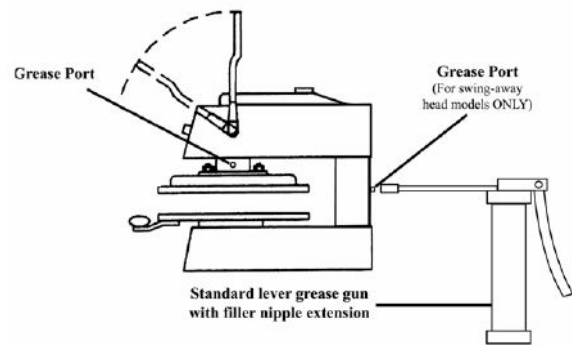

## PREVENTATIVE MAINTENANCE

Proluxe machines are relatively maintenance free. For a long lifespan, the following preventative maintenance should be followed:

### Daily Care:

1. Platens: Turn your machine off and allow to cool down before attempting to clean. These platens should only be cleaned with mild soap and warm water then wiped off with a clean, soft cloth or soft sponge.

2. Exterior surfaces: Wipe daily with mild soap and warm water will do the job quite nicely.

DO NOT use ice or cold water to cool the unit down. This can cause platens to warp.

### Piston Maintenance:

In order to ensure pop and trouble free operation of the press piston, it is important that the machine be lubricated once every three months, under normal operation. High volume users may require more frequent lubrication.

Please follow these instructions:

1. Locate the grease port on the machine. Machines with pull down arms have a single grease port located below the upper head on the right side of the vertical post.
2. Place grease gun head against grease port and apply enough pressure to allow gun head to engage the grease port.
3. Squeeze handle of grease gun. This will force the grease into the piston.

The lubricant use must be USDA-H-I authorized for food machinery. This lubricant can be ordered through Proluxe, part # 110-002.

### Service Problems:

Contact our factory at (800) 624-6717 (U.S. only) or approved service agency. When contacting the factory for information, parts or service instructions, please provide the serial number of the machine be provided. This number can be found on the serial plate located on the rear of the machine.



 
## Endurance X2 Troubleshoot Guide - Model #: DP2000

Problem	Cause	Action	Ref #
Power button on digital controller face is depressed but doesn't turn on.	1. Power cord is not plugged in.	1. Plug the power cord into wall receptacle and power button.	68
	2. Circuit breaker is tripped off in the site's breaker box.	2. Reset circuit breaker that the grill is plugged into. Depress Power Button to turn on.	-----
	3. Transformer has taken an electrical surge and is damaged.	3. Replace Transformer after you check secondary side of transformer. If working properly, you should receive 12vdc.	91
	4. Check voltage on the secondary side of the Transformer. If you read 12VDC then you are receiving voltage to the controller.	4. Replace controller. Controller should be on once the power button is depressed.	85
	5. Possible blown fuse.	5. Replace fuse.	105
Digital controller's LED's are scrambled or randomly erratic. If when turning on, the display will first go to segment check	1. Possibly a component on the Digital controller is damaged.	1. Replace digital controller.	-----
	2. Control needs to reset.	2. While unit is on unplug unit, wait for 1 min. Then plug machine on again and depress the power button.	85
Digital controller on startup goes through LED segment check (8888) then to version # and then loops back to the above reboot.	The relay driver on the digital control may be blown.	Replace digital controller.	85
Digital display shows PROB. No heat on upper platen.	Sensor lost it's continuity as shown on a multi-meter.	Disconnect prob that is open (no continuity as shown on a multi-meter. Must replace sensor (RTD). Do not cut and splice new sensor. Install new 2000 ohm RTD sensor to under side of heat platen and reconnect to the controller.	41

When depressing the tactile button on digital controller, nothing happens.	The tactile buttons under the overlay may be not close enough to activate. Same goes if the buttons are already pressed by overlay without depressing button.	Carefully (no too much at one time to avoid fracturing the traces on the controller) tighten the nuts on the back of the controller until button activate. Same goes in reverse if buttons are held down by the overlay.	
Digital display shows relay and particular zone is overheating.	1. The relay on the switched side is not opening to regulate temperature.	1. Replace the relay.	92
Beeper not functioning or intermittent beeper sound.	2. Beeper on digital control board failed.	2. Replace digital controller board	85
If setpoint is reached but slightly off in temperature.	Offset may need to be calibrated and adjusted.	Call (800) 624-6717 ext. 129 for instructions.	
Heater platen overheating	If the relay (depending on the year of the model) on the coil side are receiving 12vdc indicates the controller is functioning properly. On the switching side of the relay, is there 120 vac going to the heater in question. If there is no voltage on the to the switching side of the relay to the heaters, the relay is not working properly.	Replace relay If the controller's heat-on LED is not lit indicating the controller is working properly.	92
Dough not having same thickness across the press dough.	Adjust upper platen for level press	Underneath the housing there is 4 stacked hex bolts sitting over the upper platen attached to the arm. The top bolts are called locking bolts. The 4 larger hex bolts below are adjustment bolts. Break free the 4 locking bolts. With an open end wrench adjust the bolts (1/8 turn at a time). After testing, tighten the locking bolts making sure not to move the larger adjustment bolts	11 And 12

Model #: DP2000

Date 06/05/18





## Endurance X2 Part List - Model #: DP2000

ITEM #	DESCRIPTION	DP2000B 240 ~ AC	DP2000LB 240 ~ AC	DP2000E 240 ~ AC	DP2000LE 240 ~ AC	DP2000TB 240 ~ AC	DP2000TLB 240 ~ AC	DP2000TE 240 ~ AC	QTY
1	HOUSING MACHINED	110178154 2201	110178154 2201	110178154 2201	110178154 2201	110178154 2201	110178154 2201	110178154 2201	1
2	STRAP, TENSION ASSEMBLY	11041663	11041663	11041663	11041663	11041663	11041663	11041663	1
3	CABLE STRAIN RELIEF	3231	3231	3231	3231	3231	3231	3231	1
4	SCREW, SOCKET FLAT HEAD, 1/4-20 X 3/4	SF142034	SF142034	SF142034	SF142034	SF142034	SF142034	SF142034	1
5	HANDLE SOCKET	11016650	11016650	11016650	11016650	11016650	11016650	11016650	2
6	WASHER, WAVE .505 I.D. X .750 O.D. X .045	5806282	5806282	5806282	5806282	5806282	5806282	5806282	1
7	CLIP "E" RETAINING 1/2"	MPSC240	MPSC240	MPSC240	MPSC240	MPSC240	MPSC240	MPSC240	1
8	SCREW, ROUND HEAD 4-40 X 3/4"	SR44034	SR44034	SR44034	SR44034	SR44034	SR44034	SR44034	2
9	SCREW, SET 1/4-20 X 1/4"	SST142014	SST142014	SST142014	SST142014	SST142014	SST142014	SST142014	3
10	GEAR RACK	1109380	1109380	1109380	1109380	1109380	1109380	1109380	1
11	PISTON ASSEMBLY	11018974	11018974	11018974	11018974	11018974	11018974	11018974	1
12	BOLT, LEVEL ADJUSTMENT	1109367	1109367	1109367	1109367	1109367	1109367	1109367	4
13	BOLT, HEX 5/16-18 X 1 3/4	BH5161813 4G5	BH5161813 4G5	BH5161813 4G5	BH5161813 4G5	BH5161813 4G5	BH5161813 4G5	BH5161813 4G5	4
14	KNOB, SWING AWAY	110017	110017	110017	110017	110017	110017	110017	1
15	HANDLE, SWING AWAY	110230045 01	110230045 01	110230045 01	110230045 01	110230045 01	110230045 01	110230045 01	1
16	CAP VINYL (ADJUSTMENT SCREWS)	SC0687	SC0687	SC0687	SC0687	SC0687	SC0687	SC0687	4
17	SCREW, SET 1/4-20 X 3/8"	SST142038	SST142038	SST142038	SST142038	SST142038	SST142038	SST142038	8
18	ASSEMBLY, BASE	110619110 1	110619110 1	110619110 1	110619110 1	110619110 1	110619110 1	110619110 1	1
19	SHIM, GEAR RACK	110144120	110144120	110144120	110144120	110144120	110144120	110144120	1
20	COVER PLATE, BASE	11010954	11010954	11010954	11010954	11010954	11010954	11010954	1
21	DETENT, PLUNGER SPRING 3/8-16	MPSP134	MPSP134	MPSP134	MPSP134	MPSP134	MPSP134	MPSP134	1
22	RUBBER LEG (ADJUSTABLE)	N/A	110288204	N/A	110288204	N/A	110288204	N/A	1
24	POWER CORD	110969175	110969175	110573175	110573175	110969175	110969175	110573175	1
25	ORING #2-238 N-70, PISTON	238N70	238N70	238N70	238N70	238N70	238N70	238N70	1
26	WASHER, STEEL .311 O.D. X .150 I.D. X .20 THK	311150019	311150019	311150019	311150019	311150019	311150019	311150019	4
27	MARKER STRIP TERMINAL BLOCK ARM, #2 SINGLE	MS6992	MS6992	MS6992	MS6992	MS6992	MS6992	MS6992	1
28	SCREW, SET 8-32 X 1	SST8321	SST8321	SST8321	SST8321	SST8321	SST8321	SST8321	1
29	HANDLE, PRESSURE APPLY	1109390	1109390	1109390	1109390	1109390	1109390	1109390	1
30	ARM MACHINED	DP1062101	DP1062101	DP1062101	DP1062101	DP1062101	DP1062101	DP1062101	1
31	SCREW, PHILLIP PAN HEAD 8-32 X 1/4	SP83214	SP83214	SP83214	SP83214	SP83214	SP83214	SP83214	4
32	GEAR BAR	1109361	1109361	1109361	1109361	1109361	1109361	1109361	1

33	COLLAR, GEAR BAR	11013183	11013183	11013183	11013183	11013183	11013183	11013183	2
34	CLAMP, CABLE 1/2	CC12	CC12	CC12	CC12	CC12	CC12	CC12	2
35	SCREW, PHILLIPS PAN HEAD 8-32 X 3/8	SP83238	SP83238	SP83238	SP83238	SP83238	SP83238	SP83238	6
ITEM #	DESCRIPTION	DP2000B 240 ~ AC	DP2000LB 240 ~ AC	DP2000E 240 ~ AC	DP2000LE 240 ~ AC	DP2000TB 240 ~ AC	DP2000TLB 240 ~ AC	DP2000TE 240 ~ AC	QTY
36	SCREW, PAN HEAD 8-32 X 1	SP8321	SP8321	SP8321	SP8321	SP8321	SP8321	SP8321	1
37	TRANSFORMER	11096975	11096975	11096975	11096975	11096975	11096975	11096975	1
38	WASHER, SAE #8	WSAE8	WSAE8	WSAE8	WSAE8	WSAE8	WSAE8	WSAE8	10
39	SCREW, BUTTON HEAD 1/4-20 X 3/4	SB142034	SB142034	SB142034	SB142034	SB142034	SB142034	SB142034	3
40	HEX BOLT, 1/4-20 X 1/2	BH142012	BH142012	BH142012	BH142012	BH142012	BH142012	BH142012	3
41	TERMINAL BLOCK (ARM #2 SINGLE)	11098414	11098414	11098414	11098414	11098414	11098414	11098414	1
42	SCREW, PHILLIPS PAN HEAD 8-32 X 1/2	SP83212	SP83212	SP83212	SP83212	SP83212	SP83212	SP83212	4
43	SOLID STATE RELAY	MPR90217	MPR90217	MPR90217	MPR90217	MPR90217	MPR90217	MPR90217	2
44	MICRO SWITCH	V15G31C25 K	V15G31C25 K	V15G31C25 K	V15G31C25 K	V15G31C25 K	V15G31C25 K	V15G31C25 5K	1
45	KNOB THICK/THIN	1109309	1109309	1109309	1109309	1109309	1109309	1109309	1
46	WIRE HARNESS	110178154 50	110178154 50	110178154 50	110178154 50	110178154 50	110178154 50	110178154 50	1
47	SCREW, SOCKET HEAD 3/8-16 X 3/4	SSH381634	SSH381634	SSH381634	SSH381634	SSH381634	SSH381634	SSH381634	2
48	OVERLAY, DIGITAL CONTROL PANEL	ODP1100	ODP1100	ODP1100	ODP1100	ODP1100	ODP1100	ODP1100	1
49	CONTROL, FACIA PLATE ASSEMBLY	11086027	11086027	11086027	11086027	11086027	11086027	11086027	1
50	DIGITAL CONTROL	110969052 20	110969052 20	110969052 20	110969052 20	110969052 20	110969052 20	110969052 20	1
51	SPACER, NYLON 1/4	110969111	110969111	110969111	110969111	110969111	110969111	110969111	4
52	NUT, HEX 6-32	NH632	NH632	NH632	NH632	NH632	NH632	NH632	8
53	WASHER, #6 INTERNAL TOOTH LOCK	WLIT6	WLIT6	WLIT6	WLIT6	WLIT6	WLIT6	WLIT6	8
54	POWER DISTRIBUTION CABLE	110178154 67	110178154 67	110178154 67	110178154 67	110178154 67	110178154 67	110178154 67	1
55	WASHER, #8 INTERNAL TOOTH LOCK	WLIT8	WLIT8	WLIT8	WLIT8	WLIT8	WLIT8	WLIT8	4
56	NUT, HEX 8-32	NH832	NH832	NH832	NH832	NH832	NH832	NH832	4
57	TERMINAL BLOCK BASE, #5 DOUBLE	6015	6015	6015	6015	6015	6015	6015	1
59	SCREW, SET 3/8-16 x 1/2"	SST381612	SST381612	SST381612	SST381612	SST381612	SST381612	SST381612	3
60	ORING, POST/COLLAR	MPSS062	MPSS062	MPSS062	MPSS062	MPSS062	MPSS062	MPSS062	1
61	SOCKET CAP SCREW, 1/4-20 X 1-1/4	SSH142011 4	SSH142011 4	SSH142011 4	SSH142011 4	SSH142011 4	SSH142011 4	SSH142011 4	1
62	COLLAR POST ARM	110413230 1	110413230 1	110413230 1	110413230 1	110413230 1	110413230 1	110413230 1	1

63	BRACKET, MICRO SWITCH	1101021213	1101021213	1101021213	1101021213	1101021213	1101021213	1101021213	1
64	FITTING, ZERK 1/4-28	B792	B792	B792	B792	B792	B792	B792	1
ITEM #	DESCRIPTION	DP2000B240 ~ AC	DP2000LB240 ~ AC	DP2000E240 ~ AC	DP2000LE240 ~ AC	DP2000TB240 ~ AC	DP2000TLB240 ~ AC	DP2000TE240 ~ AC	QTY
65	THRUST PLATE	110230058	110230058	110230058	110230058	110230058	110230058	110230058	1
66	COLLAR CLAMP (ADJUSTMENT SCREW)	110230031	110230031	110230031	110230031	110230031	110230031	110230031	1
67	SCREW, SOCKET HEAD CAP, 1/4-20 x 3/4	SSH142034	SSH142034	SSH142034	SSH142034	SSH142034	SSH142034	SSH142034	3
68	BUSHING, FLANGE	212NN01420000	212NN01420000	212NN01420000	212NN01420000	212NN01420000	212NN01420000	212NN01420000	1
69	FITTING, ZERK 1/8	B610	B610	B610	B610	B610	B610	B610	1
70	SET SCREW SOCKET 1/4-20 X 1"	SST14201	SST14201	SST14201	SST14201	SST14201	SST14201	SST14201	2
71	MARKER STRIP #5	MS6015	MS6015	MS6015	MS6015	MS6015	MS6015	MS6015	1
72	SCREW, SET 1/4-20 X 3/4 CONE POINT	SST142034CP	SST142034CP	SST142034CP	SST142034CP	SST142034CP	SST142034CP	SST142034CP	1
73	FUSE HOLDER 1 AMP	MPPF708	MPPF708	MPPF708	MPPF708	MPPF708	MPPF708	MPPF708	1
74	FUSE, 1 AMP, 250V, 250W, LOW BLOW	MPPF701R	MPPF701R	MPPF701R	MPPF701R	MPPF701R	MPPF701R	MPPF701R	1
75	SCREW PHILLIPS PAN 2-56 x 1/4	SP25614	SP25614	SP25614	SP25614	SP25614	SP25614	SP25614	1
76	FEET, RUBBER	RF209	RF209	RF209	RF209	RF209	RF209	RF209	5
77	ACTUATOR, MICRO SWITCH	110200019	110200019	110200019	110200019	110200019	110200019	110200019	1
78	WASHER, SPLIT LOCK, 1/4"	WL14	WL14	WL14	WL14	WL14	WL14	WL14	1
79	NUT, HEX 1/4-20	NH1420	NH1420	NH1420	NH1420	NH1420	NH1420	NH1420	3
80	BUSHING, TENSION STRAP (BRONZE)	11018966	11018966	11018966	11018966	11018966	11018966	11018966	1
81	LEG, LEFT	N/A	11020003601	N/A	11020003601	N/A	11020003601	N/A	1
82	NUT, HEX 4-40	NH440	NH440	NH440	NH440	NH440	NH440	NH440	2
83	SCREW, PAN HEAD 6-32 X 1/4" NICKEL PLATED	SP63214	SP63214	SP63214	SP63214	SP63214	SP63214	SP63214	2
84	BRACKET, HOUSING ASSEMBLY	110144130	110144130	110144130	110144130	110144130	110144130	110144130	1
85	SCREW, SOCKET HD 1/4-20 X 3 1/4"	SSH1420314	SSH1420314	SSH1420314	SSH1420314	SSH1420314	SSH1420314	SSH1420314	1
86	BOLT HEX SLOTTED 8-32 X 1/4	BH83214	BH83214	BH83214	BH83214	BH83214	BH83214	BH83214	6
87	NUT, HEX JAM 5/16-18	N/A	NHJ51618	N/A	NHJ51618	N/A	NHJ51618	N/A	2
88	SCREW, SET 1/4-20 X 1/2"	SST142012	SST142012	SST142012	SST142012	SST142012	SST142012	SST142012	1
89	MANUAL, DP2000	MDP2000	MDP2000	MDP2000	MDP2000	MDP2000	MDP2000	MDP2000	1
90	BUSHING, ALIGNMENT	110415602	110415602	110415602	110415602	110415602	110415602	110415602	1
91	ADJUSTABLE SCREW	110230042	110230042	110230042	110230042	110230042	110230042	110230042	1
92	TERMINAL, FORK #10 10-12GA	TF101012	TF101012	TF101012	TF101012	TF101012	TF101012	TF101012	1
94	WIRE, TGGT, 14 GA. (HEATER)	110069	110069	110069	110069	110069	110069	110069	10.5 FT.
95	TFE, SHRINK TUBING 7AWG	110131	110131	110131	110131	110131	110131	110131	.66 FT.

ITEM #	DESCRIPTION	DP2000B 240 ~ AC	DP2000LB 240 ~ AC	DP2000E 240 ~ AC	DP2000LE 240 ~ AC	DP2000TB 240 ~ AC	DP2000TLB 240 ~ AC	DP2000TE 240 ~ AC	QTY
96	TERMINAL, RING #6 14-16 GA HIGH TEMP	1601HT	1601HT	1601HT	1601HT	1601HT	1601HT	1601HT	2
97	TERMINAL, RING #8 14-16 GA	1604	1604	1604	1604	1604	1604	1604	4
98	TERMINAL, QD 3/16 X 18-22 GA	2280	2280	2280	2280	2280	2280	2280	2
99	SCREW, BUTTON HD 1/4-20 X 1/2", PLATING	N/A	SB142012	N/A	SB142012	N/A	SB142012	N/A	4
100	TERMINAL, FEMALE MOLEX #BB-2141	MPSQ100	MPSQ100	MPSQ100	MPSQ100	MPSQ100	MPSQ100	MPSQ100	1
101	WIRE, TFE 14GA. GREEN	WTFE14G	WTFE14G	WTFE14G	WTFE14G	WTFE14G	WTFE14G	WTFE14G	4.5 8 FT.
102	RTD, SENSOR ASSEMBLY	110949110	110949110	110949110	110949110	110949110	110949110	110949110	2
103	SCREW, SET 3/8-16 X 1/2"	SST381612	SST381612	SST381612	SST381612	SST381612	SST381612	SST381612	5
104	SLEEVEING, PVC WIRE	OPVC1050	OPVC1050	OPVC1050	OPVC1050	OPVC1050	OPVC1050	OPVC1050	1.3 3 FT.
105	WASHER, SAE 5/16	WSAE516	WSAE516	WSAE516	WSAE516	WSAE516	WSAE516	WSAE516	8
106	TFE, NON SHRINK TUBING	110133	110133	110133	110133	110133	110133	110133	.50 FT.
107	TERMINAL, #6 RING x 18-22 GA	2202	2202	2202	2202	2202	2202	2202	2
108	DP INSULATION	110117125 1	110117125 1	110117125 1	110117125 1	110117125 1	110117125 1	110117125 1	2
109	HEAT SHROUD	1109336	1109336	1109336	1109336	1109336	1109336	1109336	2
110	ASSEMBLY, CAM RAMP	1109310	1109310	1109310	1109310	1109310	1109310	1109310	1
112	GEAR, PINION	1109360	1109360	1109360	1109360	1109360	1109360	1109360	1
113	PLAIN STEEL WOODRUFF KEY, 3/16 X 3/4	KW931634	KW931634	KW931634	KW931634	KW931634	KW931634	KW931634	4
114	SCREW, BUTTON HEAD 1/4-20 X 5/8	SB142058	SB142058	SB142058	SB142058	SB142058	SB142058	SB142058	1
115	BOLT, SHOULDER 3/8 X 2"	11023003	11023003	11023003	11023003	11023003	11023003	11023003	1
116	WASHER, SAE #6	WSAE6	WSAE6	WSAE6	WSAE6	WSAE6	WSAE6	WSAE6	2
117	SCREW, SOC. HD. 5/16-18 X 2-1/4	SSH516182 14	SSH516182 14	SSH516182 14	SSH516182 14	SSH516182 14	SSH516182 14	SSH516182 14	4
A1	KITTED, UPPER PLATEN WITH WIRING ONLY	110984311 00	110984311 00	110076208 PK	110076208 PK	110102110 1	110102110 1	110076208 K	1
A2	KITTED, UPPER PLATEN COMPLETE ASSEMBLY	110984312 00	110984312 00	110076208 PAK	110076208 PAK	110102110 1K	110102110 1K	110076208 AK	1
A3	KITTED, LOWER PLATEN WITH WIRING ONLY	11028832P	11028832P	110077208 PK	110077208 PK	11028832	11028832	110077208 K	1
A4	KITTED, LOWER PLATEN COMPLETE ASSEMBLY	110288321 00P	110288321 00P	110077208 PAK	110077208 PAK	110288321 00	110288321 00	110077208 AK	1
A5	KITTED, PINION GEAR ASSEMBLY	1109360K	1109360K	1109360K	1109360K	1109360K	1109360K	1109360K	1



# PROLUXE™

DP2000 WIRE DIAGRAM



## Warranty & Return Policy

Proluxe warrants all products manufactured by it against defects in workmanship or materials from the date of purchase for a period of 1 year on parts and labor. This warranty applies to only equipment purchased and used in the United States.

Warranty period shall begin when equipment ships. Warranty travel will only be covered for 60 miles.

ALL WARRANTY SERVICE CALLS MUST BE APPROVED BY PROLUXE. IF THIS PROCEDURE IS NOT FOLLOWED, WARRANTY SERVICE WILL NOT BE COVERED. WARRANTY SERVICE WILL BE PAID ON STRAIGHT TIME, OVERTIME WILL NOT BE COVERED.

### EXCLUSIONS

Special Order Equipment and Accessories

Cannot be canceled and are not returnable unless defective within the terms of this warranty.

In no event shall Proluxe be liable for consequential damages arising out of the failure of any of its products if operated improperly or caused by normal wear or damaged by operator abuse.

Limited Lifetime Warranty on Heating Elements

If replacement is needed, Proluxe will send the new part at no charge but labor will not

be covered unless the unit is still under the 1 year manufacturer warranty.

### RETURNED MERCHANDISE POLICY

Should it become necessary to return any of the company's products, the following instructions must be adhered to: First, contact our customer service department for approval and a return authorization number. Please have the serial number of your item available at that time. All merchandise must be shipped freight prepaid by customer or service agency. Subject to the inspection of the product by the company, a restocking charge of 20% of the Net purchased price paid to Proluxe will be assessed. Merchandise may not be returned for credit without prior written approval of Proluxe.

Collect shipments will not be accepted. No returns after 60 days of original shipment date on machines. Purchased parts may not be returned after 30 days. If upon inspection by Proluxe or its authorized agent it is determined the equipment has not been used in an appropriate manner, has been modified, or has not been properly maintained, or has been subject to misuse, misapplication, neglect, abuse, accident, unauthorized modification, damage during transit, delivery, fire, flood, act or war, riot or act of God, then this warranty shall be deemed null and void.

### TERMS & CONDITIONS

1. Price List prices are suggested retail prices and are shown in U.S. Dollars.

2. Terms of Payment: 1% 10 days, NET 30 days.

3. New Accounts: Satisfactory credit information must be provided before open account status can be extended.

Unless agreed otherwise, all shipments will be made C.O.D., Cash in advance.

4. Pricing: Prices, specifications, model numbers, capacities and accessories are subject to change without notice.

5. Freight/Routing: Method of shipment will be determined by Proluxe unless otherwise advised by purchaser.

6. Damaged Claims: All merchandise shipped at purchaser's risk. Inspection must be made by purchaser at time goods are received. If goods are damaged, the PURCHASER shall

request that the agent of the transportation company make a written notation on the proper shipping documents immediately and then file a claim for damages.

*Note: Goods damaged in shipping are non-returnable.*

7. Returns: Machines may not be returned after 60 days. Purchased parts may not be returned after 30 days. A restocking fee of 20% will be assessed on non-warranty returns.

8. Taxes: Prices indicated herein DO NOT include State, Federal, Local or foreign taxes or duties, nor do they include fees, permits, insurance or other levies, all of which are the responsibility of the purchaser.

9. All orders are subject to acceptance by Proluxe.

10. Possession of this price list shall not be considered an offer to sell.