



QUICK START GUIDE

HEAVY-DUTY DICERS



Please read and comply with the instructions listed on this document. To get the best service life and performance from your machine, clean it thoroughly before and after use by following the instructions listed below. Minimize the use of alkaline cleaners, as they may dull the finish and cause pitting.

MODELS

181DM12, 181DM12SC, 181DM12WM - 1/2"

181DM14, 181DM14SC, 181DM14WM - 1/4"

181DM38, 181DM38SC, 181DM38WM - 3/8"

SAFETY INSTRUCTIONS

CAUTION: Be careful when handling, operating, and cleaning the machine, as the blades are **very sharp**. Always keep your hands away from the blades.

PREPARATION

These dicers can be mounted to a countertop, workstation, or wall.

1. Wall-Mount Instructions:

- Place the unit where you'd like it to be mounted.
- Find the closest stud and move the machine so that the mounting holes on one side of the unit are over the stud.
It's important that the unit be mounted to a stud to prevent it from falling during use.
- Mark the 4 hole locations and remove the machine.
- Drill 5/32" holes through these marks and then, with washers under their heads, drive the mounting screws through the holes in the unit and into the holes in the wall.

2. Countertop/Workstation Instructions:

- Choose a sturdy countertop or workstation for mounting.
- Place the unit where you'd like it to be mounted.
- Mark the 4 hole locations and remove the machine.
- Drill 5/32" holes through these marks and then, with washers under their heads, drive the mounting screws through the holes in the unit and into the holes in the surface.

OPERATION

- Put an onion on the blade and holder assembly.
- After making sure your hands and fingers are clear of the cutting area**, pull the handle in one quick motion.
 - This may occasionally need to be repeated for onions that are exceptionally large.

- Do not try to cut onions that are bigger than the opening in the blade holder.
- When finished, be sure to clean the machine using the instructions below.

NOTE: To cut 1/4" and 1/2", use the 1/4" push block.
To cut 3/8", use the 3/8" push block.

CLEANING & MAINTENANCE

- Release the push block by removing the thumb screws.
- Release the blade and holder assembly by removing the wing nuts.
- Carefully remove the blade and holder assembly, as well as the push block.
- Wash the push block, blade, and holder assembly.

The blade and holder assembly can be further disassembled for more thorough cleaning by:

- Removing the thumb screws and blade holder plate.
- Lightly tapping the blades and spacers to remove them from the holder.

To reassemble the blade and holder assembly:

- Put the blade holder on a flat surface with the spacer pockets facing up.
- Insert blade spacers with their slots facing the inner opening of the blade holder.
- Insert blades with cutting edge facing down and slots facing up.
- Insert blades with cutting edge and slots facing down.
- Put the blade holder plate into place and secure it with the thumb screws.

NOTE: DO NOT use cooking oil.

REPLACEMENT PARTS

ITEM NUMBER	DESCRIPTION
#181PBLD14	1/4" Blades (22)
#181PBLD38	3/8" Blades (16)
#181PBLD12	1/2" Blades (10)
#181PPB38	3/8" Pusher Block
#181PPB1412	1/4", 1/2" Pusher Block
#181BRKTDD	Dicer Wall Bracket
#181BUMPER	Bumper
#181SSWNUT	Wingnut
#181TSCREW	Thumb Screw
#181FT1	Feet (4)

