


HOW TO USE YOUR SIPHON HOSE WITH DETERGENT



Use the included siphon hose to utilize detergent with your pressure washer



Attach siphon hose to the hose barbs on the pump, which is located near the water outlet

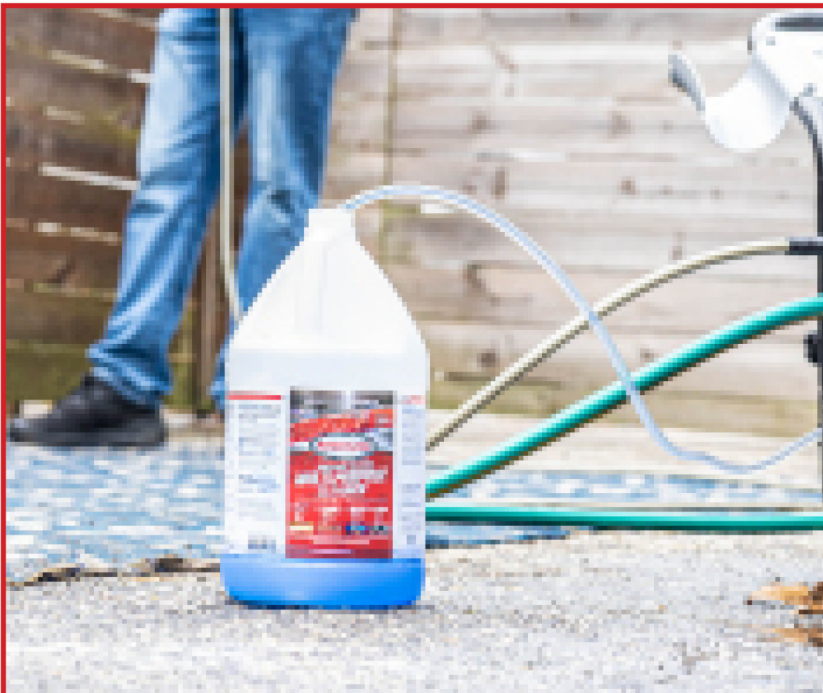

Place siphon hose directly into pressure washer safe detergent or bucket



Start your job! Be sure to use the black soap nozzle

PRO TIP: ONCE YOUR JOB IS COMPLETE, FLUSH OUT THE SOAP SYSTEM TO PREVENT DAMAGE DUE TO CHEMICAL RESIDUE