




## Hydraulic Bottle Jacks

**JHJ-2** (stock no. 453301)

**JHJ-3** (stock no. 453303)

**JHJ-5** (stock no. 453305)

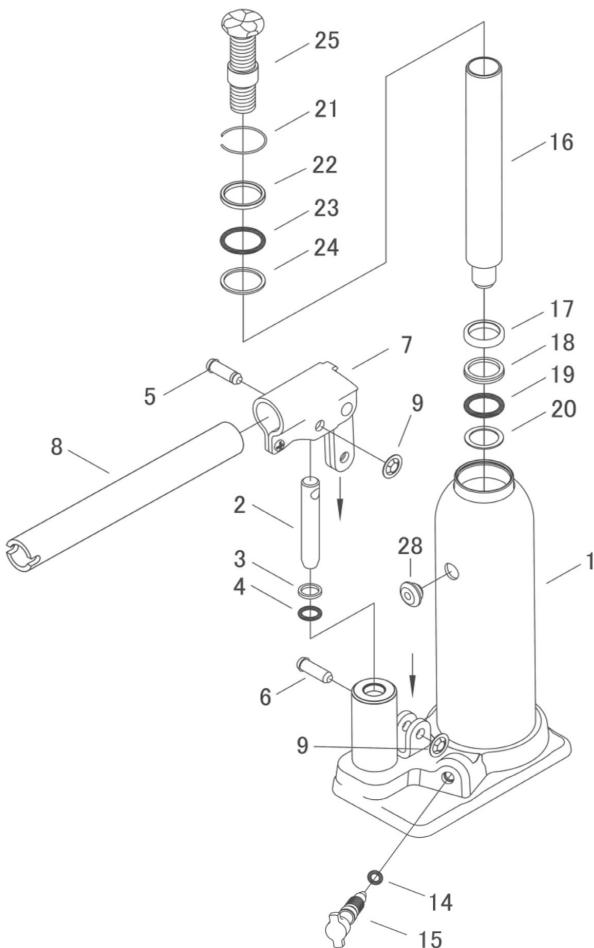

	<b>JHJ-2</b>	<b>JHJ-3</b>	<b>JHJ-5</b>
Rated capacity	2 ton	3 ton	5 ton
Minimum height (in.)	7-1/8	7-1/2	7-7/8
Piston height (in.)	4-1/2	4-1/2	4-5/8
Head screw (h/in.)	2	2-3/8	2-3/4
Maximum height (in.)	13-5/8	14-3/8	15-1/2
Base size (LxW/in.)	4-1/2 x 2-1/2	4-9/16 x 2-13/16	5-5/8 x 3-1/4
Weight (lbs)	5	6	9

**Part No. M-453301**  
Revision J1 04/2019

**JET**  
a Division of JPW Industries, Inc.  
427 New Sanford Rd.  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
www.jettools.com

**WARNING:** This product can expose you to chemicals including styrene which is known to the State of California to cause cancer. For more information go to <http://www.p65warnings.ca.gov>.

## JHJ-2

Index No.	Part No.	Description
	JHJ001-RK	Repair Kit
2	JHJ001-02	Pump Plunger
3	JHJ001-03	Pump Backup Ring*
4	JHJ001-04	Pump Packing*
5	JHJ001-05	Pump Plunger Pin
6	JHJ001-06	Pump Stay Pin
7	JHJ001-07	Handle Socket Assembly
8	JHJ001-08	Handle 2pc.
9	JHJ001-09	Pin Stopper Ring
14	JHJ001-14	Release Packing* (all sizes)
15	JHJ001-15	Release Assembly 1-7/8" (old)
	JHJ001-15A	Release Stem 2-1/4" (new)
16	JHJ001-16	Ram
17	JHJ001-17	Ram Packing Seat
18	JHJ001-18	Ram Backup Ring*
19	JHJ001-19	Ram Packing*
20	JHJ001-20	Ram Packing Stopper
21	JHJ001-21	Snap Ring
22	JHJ001-22	Stuffing Ring
23	JHJ001-23	Cylinder Packing*
24	JHJ001-24	Stopper Ring
25	JHJ001-25	Adjusting Screw Assembly
28	JHJ001-28	Oil Plug* (all sizes)

## JHJ-3

	JHJ003-RK	Repair Kit
2	JHJ001-02	Pump Plunger
3	JHJ001-03	Pump Backup Ring*
4	JHJ001-04	Pump Packing*
5	JHJ001-05	Pump Plunger Pin
6	JHJ001-06	Pump Stay Pin
7	JHJ001-07	Handle Socket
8	JHJ003-08	Handle 2pc.
9	JHJ001-09	Pin Stopper Ring
14	JHJ001-14	Release Packing*
15	JHJ001-15	Release Assembly Old
	JHJ001-15A	Release Stem New
16	JHJ003-16	Ram
17	JHJ003-17	Ram Packing Seat
18	JHJ003-18	Ram Backup Ring*
19	JHJ003-19	Ram Packing*
20	JHJ003-20	Ram Packing Stopper
21	JHJ003-21	Snap Ring
22	JHJ003-22	Stuffing Ring
23	JHJ003-23	Cylinder Packing*
24	JHJ003-24	Stopper Ring
25	JHJ003-25	Adjusting Screw Assembly
28	JHJ001-28	Oil Plug*

## JHJ-5

	JHJ005-RK	Repair Kit
2	JHJ001-02	Pump Plunger
3	JHJ001-03	Pump Backup Ring*
4	JHJ001-04	Pump Packing*
5	JHJ001-05	Pump Plunger Pin
6	JHJ001-06	Pump Stay Pin
7	JHJ001-07	Handle Socket Assembly
8	JHJ005-08	Handle 3pc.
9	JHJ001-09	Pin Stopper Ring
14	JHJ001-14	Release Packing*
15	JHJ001-15	Release Assembly Old
	JHJ001-15A	Release Stem New
16	JHJ005-16	Ram
17	JHJ005-17	Ram Packing Seat
18	JHJ005-18	Ram Backup Ring*
19	JHJ005-19	Ram Packing*
20	JHJ005-20	Ram Packing Stopper
21	JHJ005-21	Snap Ring
22	JHJ005-22	Stuffing Ring
23	JHJ005-23	Cylinder Packing*
24	JHJ005-24	Stopper Ring
25	JHJ005-25	Adjusting Screw Assembly
28	JHJ001-28	Oil Plug*

\* denotes part included in repair kit