



Hydraulic Bottle Jacks


JHJ-17-1/2 (stock no. 453317)

JHJ-17-1/2L (stock no. 453318K)

JHJ-22-1/2 (stock no. 453322)

JHJ-22-1/2LP (stock no. 453323K)

JHJ-35 (stock no. 453335K)

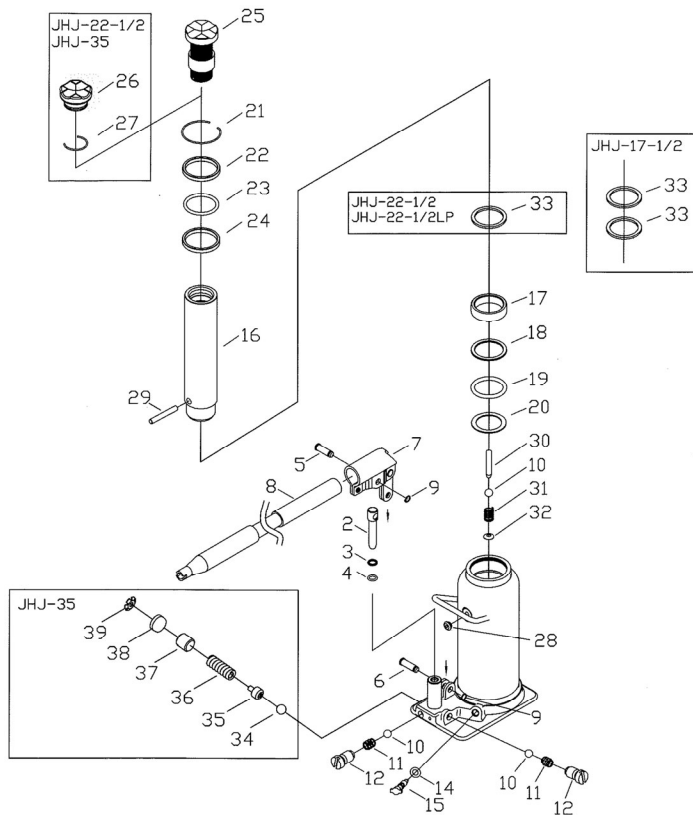

	JHJ-17-1/2	JHJ-17-1/2L	JHJ-22-1/2	JHJ-22-1/2LP	JHJ-35
Rated capacity (ton)	17-1/2	17-1/2	22-1/2	22-1/2	35
Min. height (in.)	10-3/8	6-3/4	10-5/8	7-1/8	11
Piston height (in.)	6-1/2	3-1/2	6-1/4	3-3/8	6-1/4
Head screw (h/in.)	3-1/8	2-3/4	--	1-1/2	--
Max height (in.)	20	13	16-7/8	12	17-1/4
Base size (LxW/in.)	7-1/8 x 4-5/8	7-1/8 x 4-5/8	7-1/8 x 5-1/2	7-1/4 x 5-1/16	8-3/8 x 5-1/2
Weight (lbs)	24	19	28	23	48

* denotes part included in repair kit

JHJ-17-1/2 and JHJ-17-1/2L

Index No.	Part No.	Description
1	JHJ017-RK	Repair Kit*
2	JHJ022-02	Pump Plunger
3	JHJ022-03	Pump Backup Ring
4	JHJ022-04	Pump Packing*
5	JHJ017-05	Pump Plunger Pin*
6	JHJ017-05	Pump Stay Pin
7	JHJ022-07	Handle Socket Assembly

Part No. M-453322

Revision J1 04/2019

JET

a Division of JPW Industries, Inc.
427 New Sanford Rd.
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

WARNING: This product can expose you to chemicals including styrene which is known to the State of California to cause cancer. For more information go to <http://www.p65warnings.ca.gov>.

8	JHJ017-08	Handle 3pc.
	JHJ017-08LP	Handle 1pc. (for low profile)
9	JHJ017-09	Pin Stopper Ring
10	SB-1/4	Valve Ball
11	JBJS-3	Spring
12	JHJ017-12	Valve Plug
14	JHJ001-14	Release Packing*
15	JHJ001-15	Release Assembly Old
	JHJ001-15A	Release Stem New
16	JHJ017-16	Ram
	JHJ017-16LP	Ram (for low profile)
17	JHJ017-17	Ram Packing Seat
18	JHJ017-18	Ram Backup Ring*
19	JHJ017-19	Ram Packing*
20	JHJ017-20	Ram Packing Stopper
21	JHJ017-21	Snap Ring
22	JHJ017-22	Stuffing Ring
	JHJ017-22LP	Stuffing Ring (for low profile)
23	JHJ017-23	Cylinder Packing*
24	JHJ017-24	Stopper Ring
25	JHJ017-25	Adjusting Screw Assembly
	JHJ017-25LP	Adjusting Screw Assembly (for low profile)
28	JHJ001-28	Oil Plug*
29	JHJ017-29	Horizontal Pin
30	JHJ017-30	Vertical Pin
31	JHJ017-31	Ram Spring
32	JHJ017-32	Ram Spring Stopper Ring
33	JHJ017-33	Ring

JHJ-22-1/2 and JHJ-22-1/2LP

	JHJ022-RK	Repair Kit*
2	JHJ022-02	Pump Plunger
3	JHJ022-03	Pump Backup Ring
4	JHJ022-04	Pump Packing*
5	JHJ022-05	Pump Plunger Pin*
6	JHJ022-06	Pump Stay Pin
7	JHJ022-07	Handle Socket Assembly
8	JHJ022-08	Handle 3pc
	JHJ022-08LP	Handle 1pc (for low profile)
9	JHJ022-09	Pin Stopper Ring
10	SB-1/4	Valve Ball
11	JBJS-3	Spring
12	JHJ022-12	Valve Plug
14	JHJ001-14	Release Packing*
15	JHJ001-15	Release Assembly Old
	JHJ001-15A	Release Stem New
16	JHJ022-16	Ram
	JHJ022-16LP	Ram (for low profile)
17	JHJ022-17	Ram Packing Seat
18	JHJ022-18	Ram Backup Ring*
19	JHJ022-19	Ram Packing*
20	JHJ022-20	Ram Packing Stopper
21	JHJ022-21	Snap Ring
22	JHJ022-22	Stuffing Ring
	JHJ022-22LP	Stuffing Ring (for low profile)
23	JHJ022-23	Cylinder Packing*
24	JHJ022-24	Stopper Ring
25	JHJ022-25LP	Adjusting Screw Assembly (for low profile)
26	JHJ035-26	Supporting Plate
27	JHJ035-27	Snap Ring
28	JHJ001-28	Oil Plug*
29	JHJ022-29	Horizontal Pin
30	JHJ022-30	Vertical Pin
31	JHJ022-31	Ram Spring
32	JHJ022-32	Ram Spring Stopper Ring
33	JHJ022-33	Ring

JHJ-35

	JHJ035-RK	Repair Kit*
2	JHJ022-02	Pump Plunger
3	JHJ035-03	Pump Backup Ring*
4	JHJ022-04	Pump Packing*
5	JHJ035-05	Pump Plunger Pin
6	JHJ022-06	Pump Stay Pin
7	JHJ035-07	Handle Socket
8	JHJ035-08	Handle 1pc
9	JHJ022-09	Pin Stopper Ring
10	SB-1/4	Valve Ball
11	JBJS-3	Spring
12	JHJ035-12	Valve Plug
14	JHJ001-14	Release Packing*
15	JHJ001-15	Release Assembly Old
	JHJ001-15A	Release Stem New
16	JHJ035-16	Ram
17	JHJ035-17	Ram Packing Seat
18	JHJ035-18	Ram Backup Ring*
19	JHJ035-19	Ram Packing*
20	JHJ035-20	Ram Packing Stopper
21	JHJ035-21	Snap Ring
22	JHJ035-22	Stuffing Ring
23	JHJ035-23	Cylinder Packing*
24	JHJ035-24	Stopper Ring
26	JHJ035-26	Supporting Plate
27	JHJ035-27	Snap Ring
28	JHJ035-28	Oil Plug*(Ref JHJ001-28)
29	JHJ035-29	Horizontal Pin
30	JHJ035-30	Vertical Pin
31	JHJ035-31	Ram Spring
32	JHJ035-32	Ram Spring Stopper Ring
34	SB-5/32	Safety Valve Ball
35	JHJ035-35	Safety Valve Receiver
36	JHJ035-36	Safety Valve Spring
37	JHJ035-37	Safety Valve Adjust Screw
38	JHJ035-38	Safety Valve Packing
39	JHJ035-39	Push Nut