 
 
 
 
 

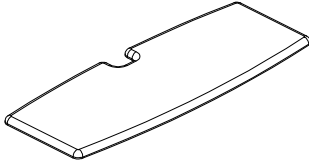 
 
 
 


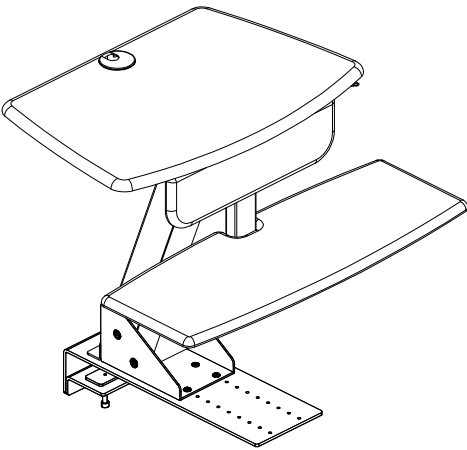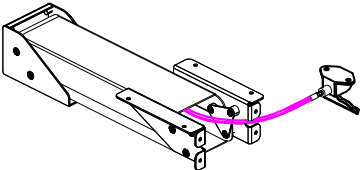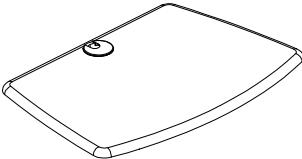

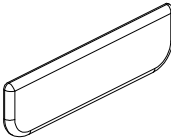




STS800
STS800W


1-5

 Kantek




A				B				C				G	 X1							
X1				X1				X1				H	 X1							
D				E				F				I	 X1							
X1				X1				X1												
J	K	L	M	N	O	P														
 X1			 X2			 X8			 X2			 X14			 X2			 X1		

 STEP. 1

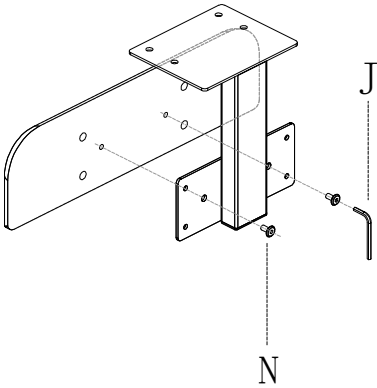


STEP. 2

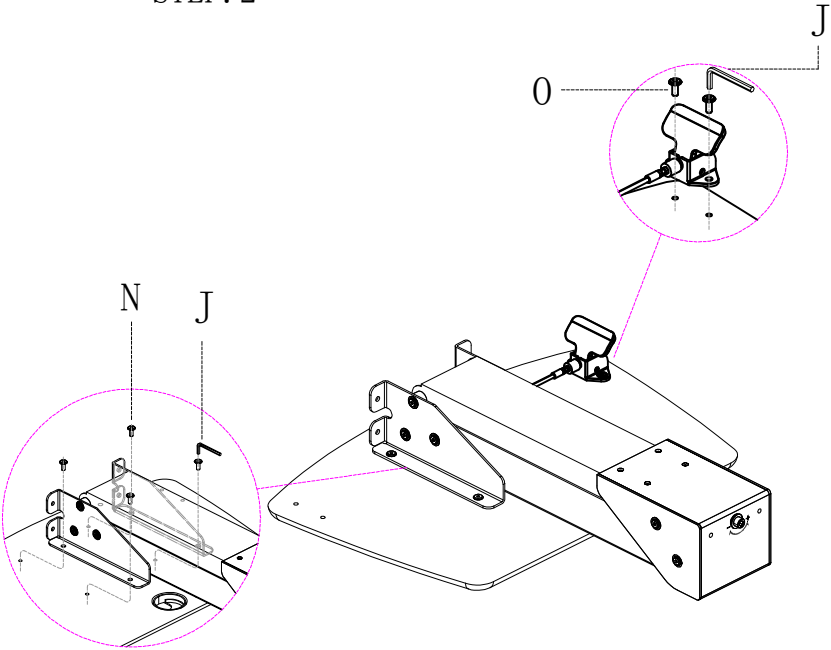 


Option A

 For desk thickness less than 1.57"

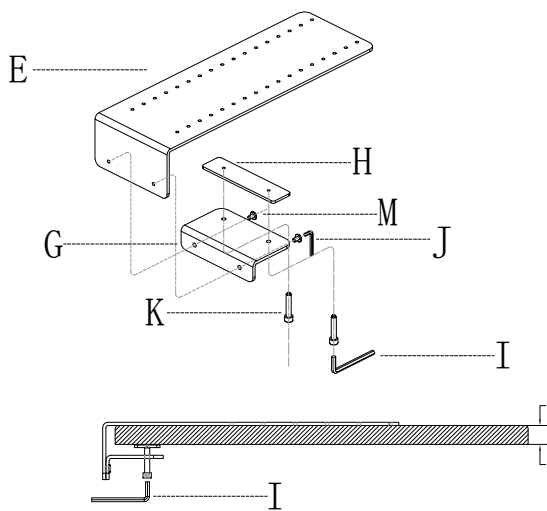


Option B

 
For desk thickness 1.57"-2.95"




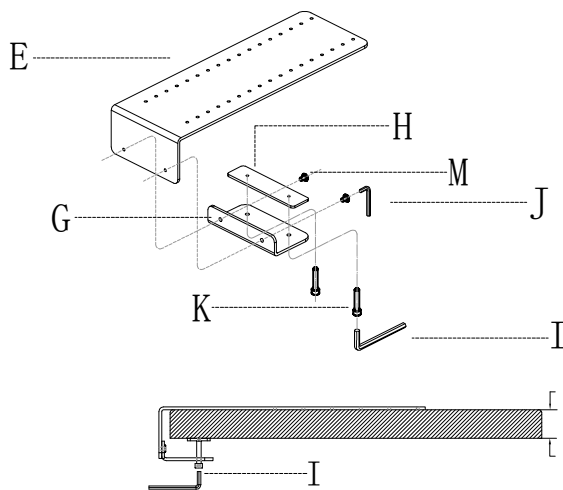


STEP. 4

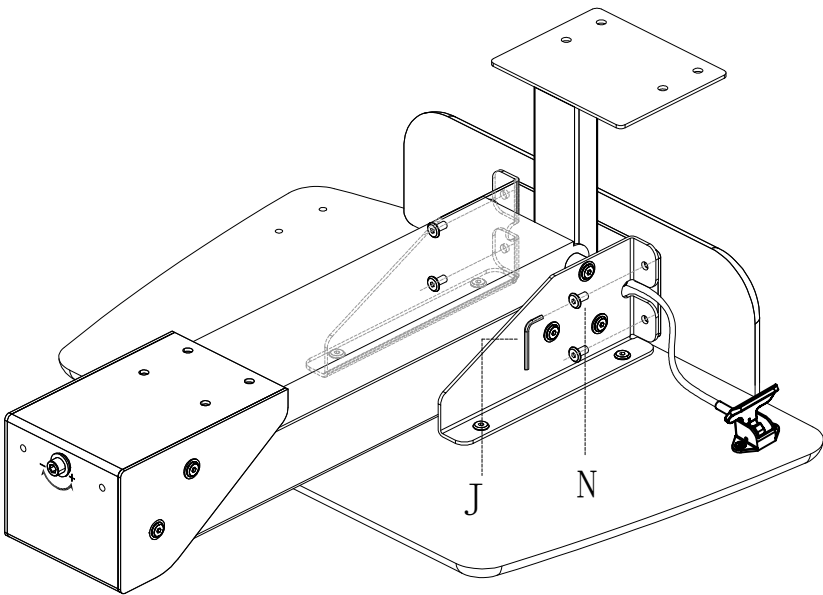 


STEP. 5

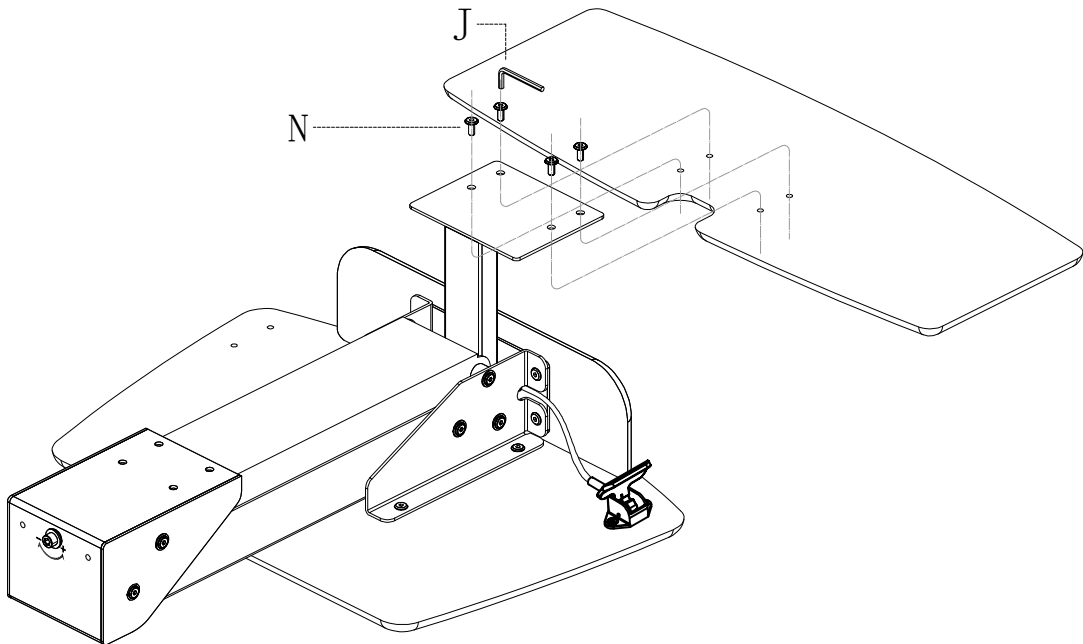 


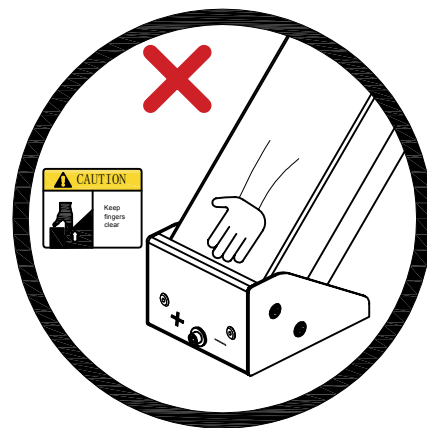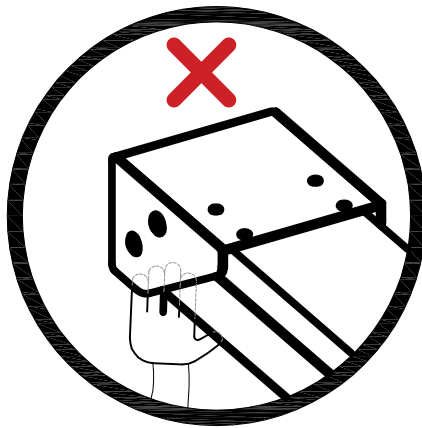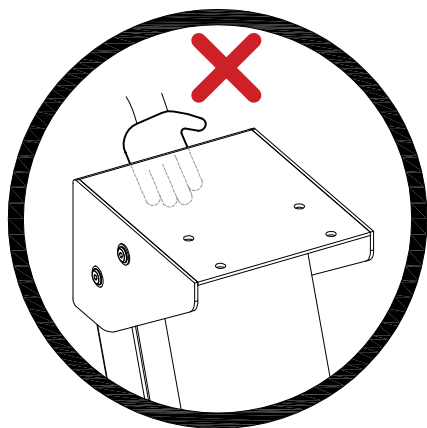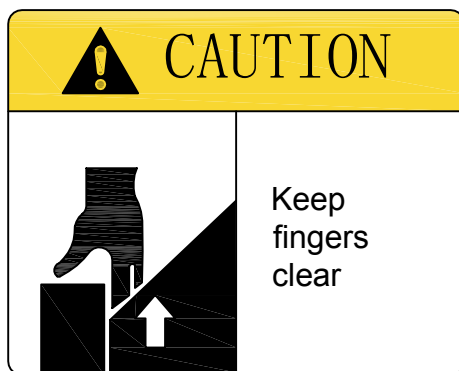    

 
NOTE: HOLD THE ARM DOWN WITH ONE HAND, WHILE PRESSING THE “RELEASE LEVER”, TO PREVENT THE ARM FROM RISING TOO QUICKLY.

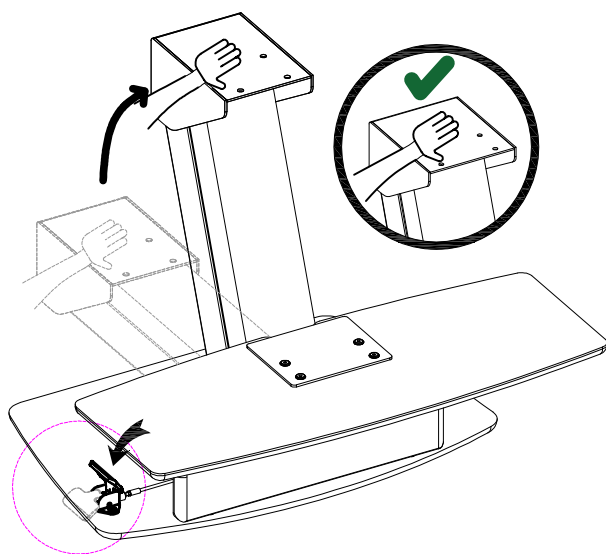

 Gently press lever to release arm, and raise slowly.

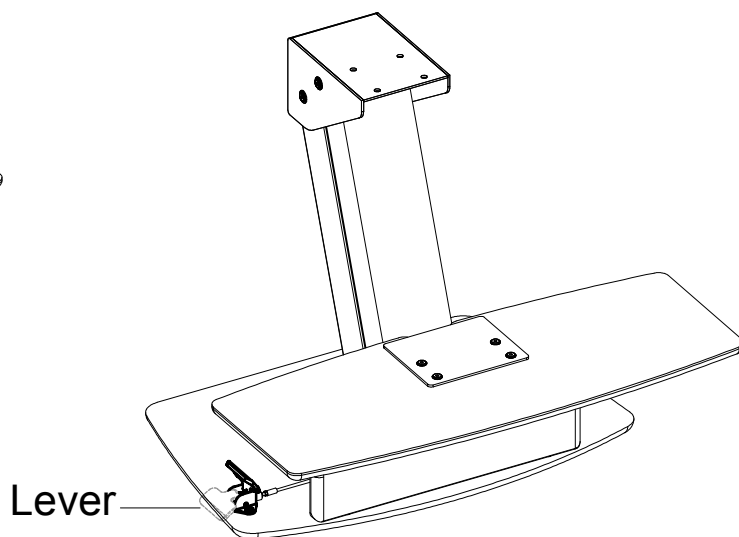

 Positioning installation of the arm mechanism

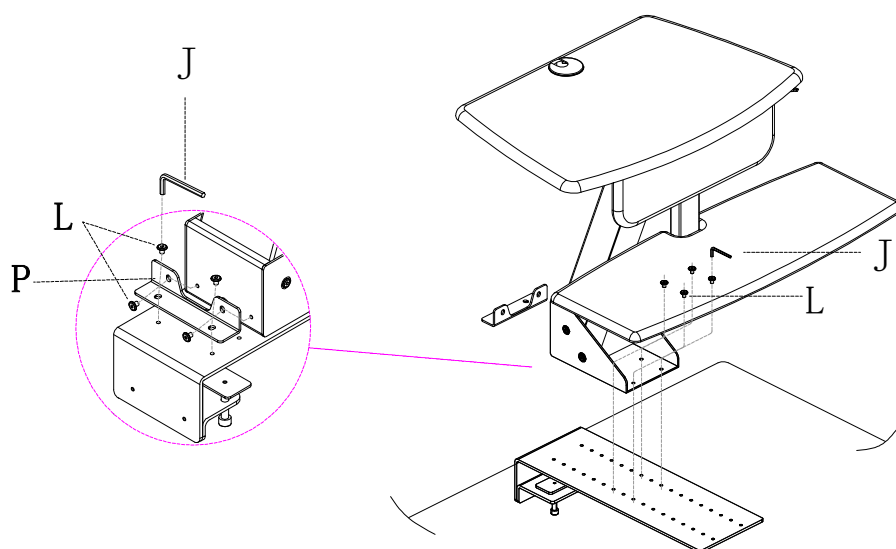

To determine position of the mechanism refer to the enclosed template

For desk depth 24"

 
For desk depth 30"

STEP. 8


"+" Increase tension to accomodate additional weight

"-" Decrease tension for less weight

STEP. 8-1

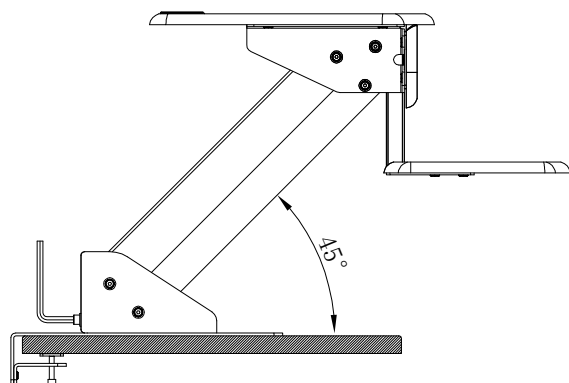



STEP. 8-2

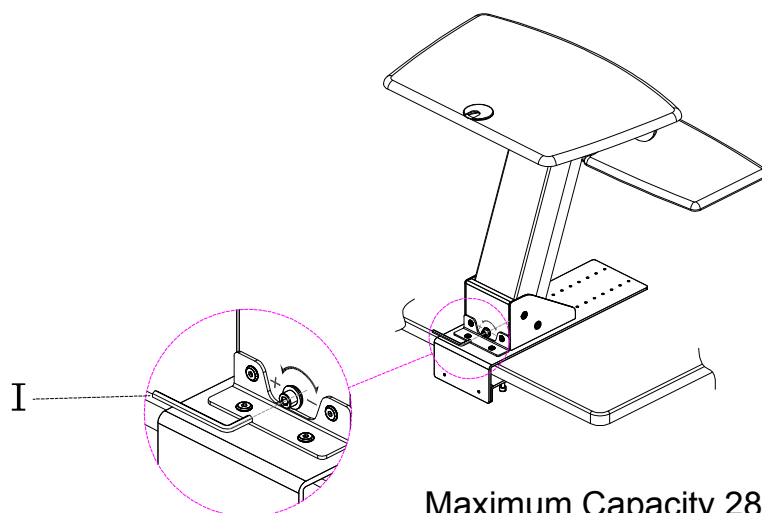 


Maximum Capacity 28lbs

STEP. 9

  
While pressing lever, raise and lower to desired height.
Release lever to lock arm in position.

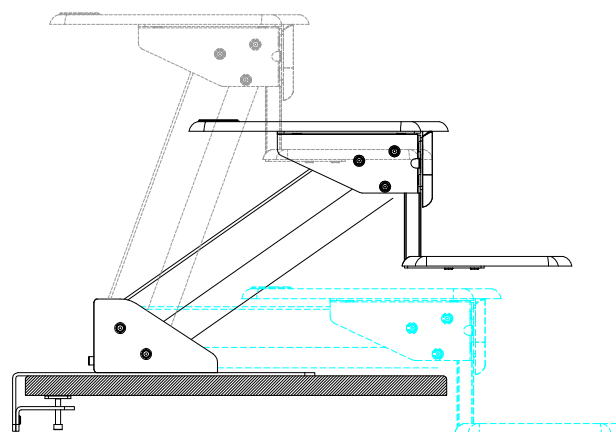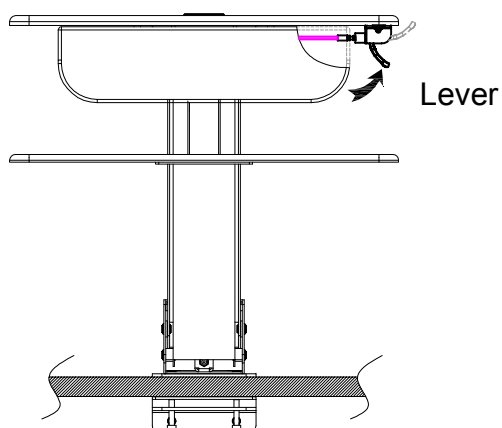

 
Positioning installation of the arm mechanism

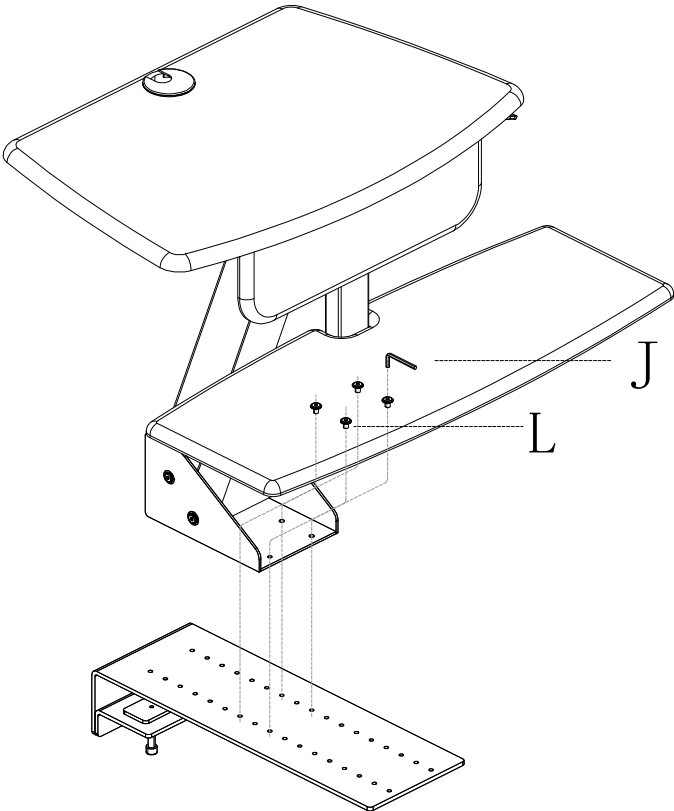

 - 1.Measure the depth of the desk or mounting surface.
- 2.Select position of the arm base using the template below.

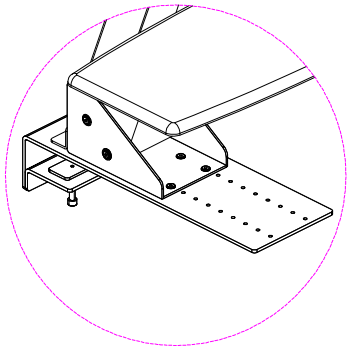

For desk depth 24"

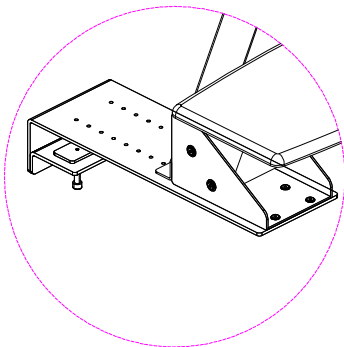 

For desk depth 30"

○		○
○		○
○		○
○		○
○		○
○		○
○		○
○		○
○	23.5 INCH	○
○	24.5 INCH	○
○	25.5 INCH	○
○	26.5 INCH	○
○	27.5 INCH	○
○	28.5 INCH	○
○	29.5 INCH	○
○	30.5 INCH	○
○	31.5 INCH	○