

Lavex Bathroom Dispenser

Light/Buzzer Key

66ALTOPVERSAGRY
66ALPATVERSAGRY
66ALSDISPVERSAGRY

SITUATION	DEVICE	RED LIGHT	BUZZER
Device Initiation - Long press of sync button for over 3 seconds	All	Solid throughout setup process	1 second
Device Initiation Cancellation - Short press of sync button during device initiation	All	None	None
Manual Sync - Short press of sync button after device has been connected to platform and WiFi	All	Flashing	0.15 seconds on - 0.15 seconds off - 0.15 seconds on
Device failed to connect to WiFi	All	1 second on - 1.5 seconds off - 1 second on	1 second on - 1.5 seconds off - 1 second on
Device connected to WiFi but failed to connect to server	All	1 second on - 1.5 seconds off - 1 second on	1 second on - 1.5 seconds off - 1 second on - melody
Low Battery - Short press on sync button when device has a low battery (under low voltage alarm)	All	20 times - 0.05 seconds on - 0.1 seconds off	None
No Bag Detected	Soap	Repeated - 0.1 seconds on - 2 seconds off	None