

Program LRS CS7 Coaster Pagers with the T-7471 or T-7470 Transmitter

Have all pagers on the charger to start. Only program those that need it. Keep the pagers you wish to reprogram at the top of the stack so they are easy to get to. If possible, have all the pagers on other charging stacks so you have 1 charger that is empty and an easy place to put finished pagers.

When a pager is done programming, it responds with a single flash, and the pager number is displayed on the screen. Put it back on the charger so it won't receive a program it should not have when you do the next one.

Programming Steps

1. Press the **Setup** button on the transmitter
2. Type in code 3 1 3 3 7
3. Press F2
4. Press #1 for program
5. Choose option 1 for program pager
6. Select 1 for guest
7. Select 1 for coaster
8. Select 1 for non-alpha
9. F1 for Vibe On
10. Type in pager # you want the pager to be. (if the pager is 1, just type in 1 - no additional zeros)
11. Press enter
12. Take the pager off the charger
13. Allow initial wake-up to take place
14. When it stops, press the enter key 1 time

The pager should flash 1 time to show it accepted the programming and the number will reflect the pager number you wanted it to be. Go through the prompts to finish or program another pager.

When a pager is done programming, it responds with a single flash, and the pager number is displayed on the screen. Put it back on the charger so it will not get a program it should not have when you do the next one.

Helpful tip - If you always select **Yes** when the transmitter asks if the pager accepted programming ("Did the pager beep or vibrate?"), then you will always have the ability to try it again, move on to the next pager if it did not accept programming, or exit if needing to exit the menu.

If lost in the menu, have all the pagers on the charger and press any key needed to get back to where you want to be, or pull the power from the back, wait 5 seconds and plug it back in.