

Use & Care Guide

RESIN / PLASTIC / WOOD OUTDOOR FURNITURE



LANCASTER™
TABLE & SEATING



ASSEMBLY/ARRIVAL

1. It is the responsibility of the recipient to inspect the shipment for damage prior to signing the bill of lading. Damages must be reported to your authorized retailer within 5 days of receipt.
2. Assembly, if applicable, should be conducted by a qualified adult using the applicable instructions.



ONGOING MAINTENANCE

1. Inspect products for damage before use.
2. Follow cleaning instructions for applicable material.
3. If cushion is removable, be sure that it is fully reassembled and securely attached before use.
4. Clean up bird droppings, mold, mildew, pollen, dirt, and dust as quickly as possible.
5. Avoid prolonged exposure to extreme weather conditions.



STORAGE

1. If applicable, follow product's instructions for maximum stacking quantity.
2. For cushions, store in a cool, dry place when not in use.
3. Make sure any outdoor furniture is covered during inclement weather.
4. When storing outdoor furniture long term: cover or move to an enclosed area.



CLEANING INSTRUCTIONS

PLASTIC / RESIN

1. Clean with mild soap or detergent and a clean, dry cloth. Recommended Cleaners: Noble Lemon Lance (147LMNLANRQT) and Noble AllSurf (147ALLSURF1G).
2. Make sure product is fully dry after cleaning and before use.

SLING CHAISE FABRIC

1. Dirt and dust can be removed using a vacuum. Get stains out with mild soap/detergent and warm water with a cloth or soft brush. Recommended Detergent: Noble Detergent (147DTRGT22HG).

WOOD MATERIALS

1. Do not use abrasive cleaners or products. Clean with a mild soap and damp cloth and dry with a dry cloth. Recommended: Noble Sunbright (999SUNBRIGHT) and for deep cleaning, Noble LusterPlus (148LUSTER+).
2. If you are using a new soap or cleaner, test first on an area that may not be shown.
3. Make sure wood is fully dry after cleaning and before use to prevent warping or damage to the finish. As these are the result of misuse, they may not be covered under warranty.



CAUTION

1. Outdoor furniture is intended to be located outdoors on a stable and level surface. Do not use if the product is not level.
2. Do not use if parts are broken or missing.
3. Always follow cleaning and maintenance instructions.
4. Adult supervision is necessary if being used by children.
5. NEVER tilt the chairs or lean on the back two legs of the chairs, as this can damage the product and cause injury to the user.