

# Use & Care Guide

## OUTDOOR CANTILEVER UMBRELLAS & BASES



### ASSEMBLY/ARRIVAL

1. It is the responsibility of the recipient to inspect the shipment for damage prior to signing the bill of lading. Damages must be reported to your authorized retailer within 5 days of receipt.
2. Make sure there are no rips or stains in the fabric.



### LIGHTING INSTRUCTIONS

For Cantilever Umbrellas with Lights:

1. The removable switch that is housed on the side of the cantilever arm is the control for the lights and the battery power source.
2. The switch can be removed to charge. The first button will display the current battery level, the second button is the ON/OFF switch for the lights, and the third button controls the brightness of the lights (there are 3 brightness settings).
3. The switch battery should be charged for 8 hours to achieve maximum charge.



### CLEANING INSTRUCTIONS

#### METAL FRAME

1. Clean using a mild soap/detergent with warm water and a clean cloth. Recommended: Noble Lemon Lance (147LMNLANRQT) and Noble Spiffy Shine (999SPIFSHINE).

#### UMBRELLA FABRIC

1. Wipe down any dirt with a soft brush. Get stains out with mild soap/detergent and warm water with a cloth or soft brush. Recommended Detergent: Noble Detergent (147DTRGT22HG).
2. Clean up bird droppings, mold, mildew, pollen, dirt, and dust as quickly as possible.
3. Do not use abrasive cleaners on umbrella fabric or frame.



### ONGOING MAINTENANCE

1. Cantilever Umbrella & Base: Tighten all bolts and connections monthly.
2. Fillable Umbrella Base: If filled with water, be sure to refill or top off weekly. During extreme heat, check daily.



### STORAGE

1. Store inside or cover when not in use.
2. Clean and fully dry umbrella before storing.
3. Make sure umbrella is fully closed before storing.



### CAUTION

1. Always make sure umbrella is closed when not in use and during medium-high winds and inclement weather.
2. Make sure any knobs on umbrella base or table are tightened against umbrella pole when in use.
3. Please use caution when opening/closing umbrellas.
4. Do not use/open in case of bad weather – such as heavy rain, wind, etc. It is suggested to store inside during these times. Damage caused by improper storage or operation is considered user error and may not be covered under warranty.
5. Do not use if parts are broken or missing.