Undercounter Dish Machine Stand



ASSEMBLY INSTRUCTIONS

MODELS

495STAND24 495STAND24KIT

COMPATIBLE UNITS

495NOWFNH30V 495NOWFU3FDV 495NOWFNL30X

Prior to Assembly and Installation

Inspect for damage. Verify that all correct parts are included immediately upon receiving:

- A (1) Frame
- B (4) Stainless Steel Adjustable Feet
- C (8) Stainless Steel Hex Screws
- D (8) Stainless Steel Flat Washers
- E (4) Spring Washers




NOTE: Always install with a partner and practice proper lifting techniques to prevent injury. Installers will have to lay the dishwasher on its top to install. Make sure this is done slowly, safely, and with control. Avoid dropping or damaging the dishwasher. To prevent scratching, do not place directly on a hard surface.



STEP 1


Place the frame (A) on its top with the bottom facing upwards.

For 495STAND24KIT, align the top of the second frame with the bottom of the first and fasten together using the (4) included hex screws (C) and flat washers (D).

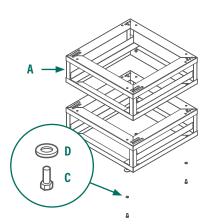

STEP 2

Adjust each foot (B) to the desired height. Ensure the height of the nut results in a level frame.

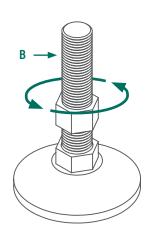




Undercounter Dish Machine Stand




ASSEMBLY INSTRUCTIONS

STEP 3

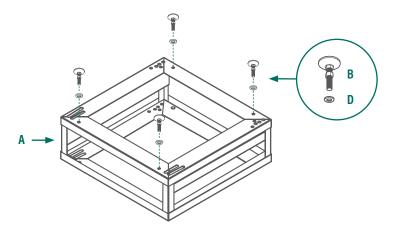

STEP 4

Place the stand on its feet to ensure that it is stable and level.

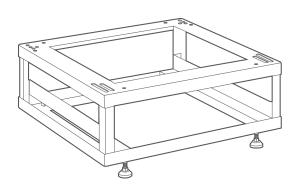

Installation Instructions

- 1. Remove feet of the undercounter dishwasher.
- 2. Align holes of the frame with that of the dishwasher's feet holes.
- 3. Using the stainless steel hex screws (C), spring washers (E), and flat washers (D), fasten the stand securely to the bottom of the dishwasher.
- **4.** With a partner, place the dish machine upright on a level surface.
- 5. Before reconnecting utilities, verify that the machine is level and that the connections are tightened.
- 6. Reconnect and run your machine, inspecting for excess vibration or sources of concern.