



NON-STICK ACCELERATED OVEN BASKETS & SCREENS USE AND CARE INSTRUCTIONS

- Wash oven basket before first use.
- Maximum operating temperature is 500°F.
- Hand wash with mild detergents only. Avoid using chemical cleaners or solvents.
- **DO NOT** scrape the basket surface with a hard-edged implement or use abrasive cleaning materials.
- **DO NOT** use grease on basket surface.
- Oven basket **WILL BE VERY HOT** upon removal from oven. Use a spatula or oven paddle underneath the basket to transport. **DO NOT** pick up basket from the side walls or rim.
- For use in indirect heat applications only. **DO NOT** expose to direct flame or heating coils.
- **DO NOT** fold.
- Replace basket when non-stick finish shows wear.

