



INSTRUCTIONS FOR REMOVING THERMAL MODULES FROM THE PRO CART ULTRA™

These simple instructions can be used when cleaning the modules, changing the positions of the modules on the cart, or retrofitting different modules for the cart as needed. The same instructions apply for hot, cold and passive modules.

TOOL NEEDED: Phillips #3 Screwdriver (manual or electric)

TIP! Place back of cart against a wall or have a helper hold the module in back so it doesn't fall off and get damaged.

1. Begin by locking the brakes on the unit and unlatching the door.
2. From the inside of the cart, use the Phillips screwdriver to undo the 4 large screws located at the corners of the module.
3. Push the thermal module out from the inside. Make sure there's someone to receive it or the unit is against the wall.
4. Reverse instructions to re-install the module.