

Power-Flite®

MULTIWASH 14 PFMW14 PARTS LIST




**WARNING: OPERATOR MUST READ AND UNDERSTAND THIS MANUAL
COMPLETELY BEFORE OPERATING THIS EQUIPMENT.**

Save These Instructions

SCHEMATICS - PARTS LISTS

PFMW14 DRIVE SIDE HOUSING

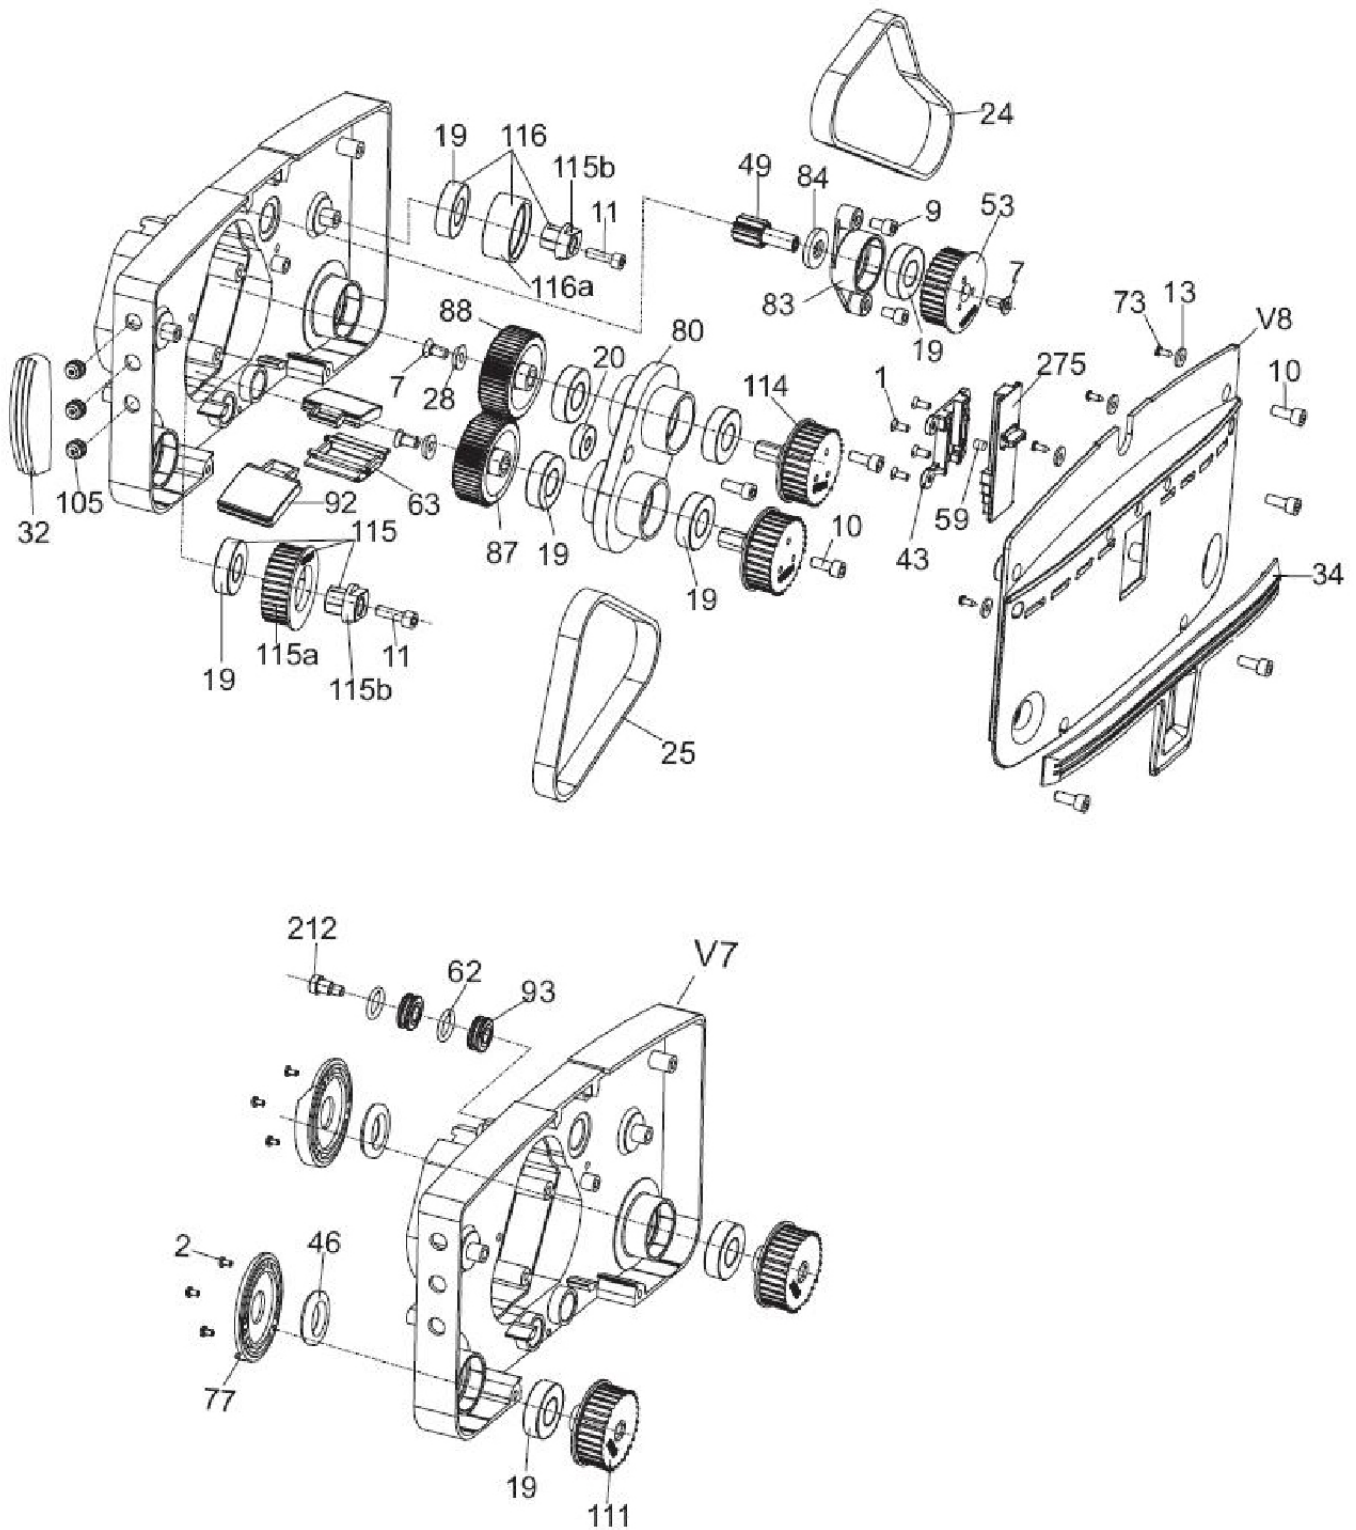

SCHEMATICS - PARTS LISTS

PFMW14 DRIVE SIDE HOUSING

No.	Part No.	Qty	Description
1	90-0258-0000	4	Screw M4 x 10
2	90-0001-0000	6	Screw M3x6
7	90-0143-0000	3	Screw M6 x 14
9	90-0293-0000	2	Screw M6 x 10
10	90-0144-0000	7	Screw M6 x 16
11	90-0005-0000	2	Screw M6 x 20
13	90-0007-0000	4	Washer
19	90-0009-0000	9	Bearing 6003 2RS
20	90-0121-0000	1	Bearing 608 2Z
24	90-0011-0000	1	Belt
25	90-0012-0000	1	Belt
28	90-0152-0000	2	Washer
32	90-0154-0000	1	Bumper
34	90-0156-0000	1	Bumper
42	90-0024-0000	1	Brush Slider
43	90-0025-0000	1	Slider Housing
46	90-0027-0000	2	Seal
49	33869	1	Drum Pinion Assembly (includes 49, 84, 83, 19, 53, and 7)
53	90-0031-0000	1	Drum Sproket
59	90-0035-0000	1	Pin
62	90-0176-0000	2	O-Ring
63	90-0040-0000	1	Shield
73	90-0183-0000	4	Self Tapping Screw
77	90-0020-0000	2	Cap
80	90-0285-0000	1	Gear Housing
83	90-0268-0000	1	Housing Sproket
84	90-0264-0000	1	Seal
87	90-0286-0000	1	Gear-LH
88	90-0287-0000	1	Gear-RH (Use P/N 925530A Complete Gear Set)
92	90-0267-0000	2	Shield
93	90-0294-0000	2	Roller
105	90-0390-0000	3	Bumper Sleeve

SCHEMATICS - PARTS LISTS


PFMW14 DRIVE SIDE HOUSING

No.	Part No.	Qty	Description
111	90-0061-0000	2	Brush Sproket
114	90-0063-0000	2	Gear Sproket
115	90-0065-0000	1	Idler Assembly
115a	90-0169-0000	1	Sproket
115b	90-0161-0000	2	Hub
116	90-0197-0000	1	Idler Assembly
116a	90-0166-0000	1	Sleeve
212	90-0392-0000	1	Stub Axle
V7	552580171	1	Drive Housing
V8	552580180	1	Cover

SCHEMATICS - PARTS LISTS

PFMW14 IDLE SIDE HOUSING

HOUSING-IDLE SIDE

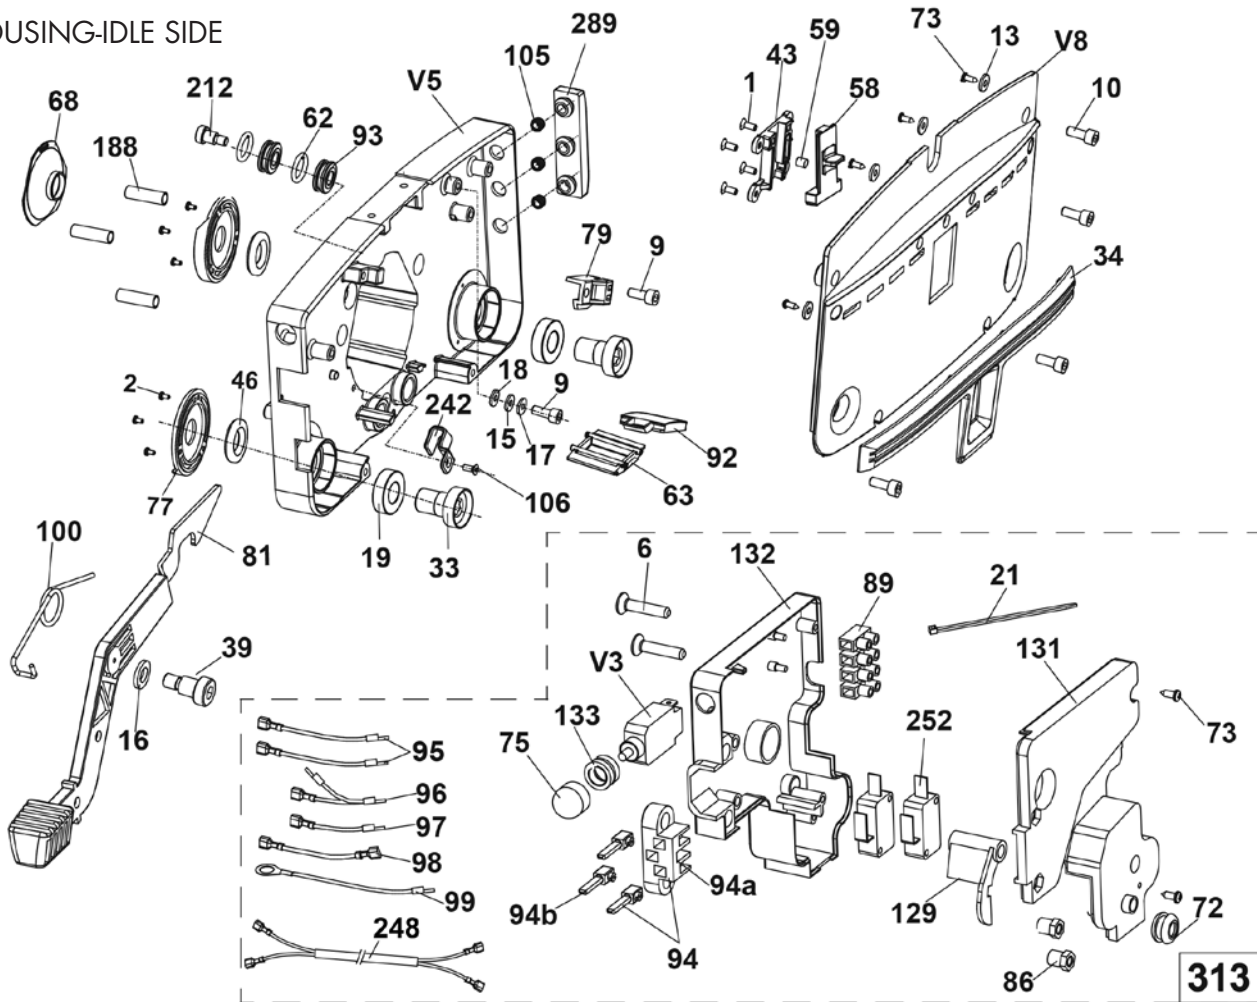

SCHEMATICS - PARTS LISTS

PFMW14 IDLE SIDE HOUSING

No.	Part No.	Qty	Description
1	90-0258-0000	4	Screw M4 x 10
2	90-0001-0000	6	Screw M3x6
6	90-0261-0000	2	Screw M5 x 25
9	90-0293-0000	1	Screw M6 x 10
10	90-0144-0000	6	Screw M6 x 16
13	90-0007-0000	4	Washer
15	90-0147-0000	1	Washer
16	90-0395-0000	1	Washer
17	90-0298-0000	1	Spring Washer
18	90-0148-0000	1	Toothed Washer
19	90-0009-0000	2	Bearing 6003 2RS
21	90-0149-0000	3	Wire Tie
32	90-0154-0000	1	Bumper
33	90-0155-0000	2	Bushing
34	90-0156-0000	1	Bumper
39	90-0123-0000	1	Stub Axle
43	90-0025-0000	1	Slider Housing
46	90-0027-0000	2	Seal
58	90-0033-0000	1	Transport Slider
59	90-0035-0000	1	Pin
62	90-0176-0000	2	O-Ring
63	90-0040-0000	1	Shield
68	90-0179-0000	1	Fan Cover
72	90-0045-0000	2	Gromet
73	90-0183-0000	6	Self Tapping Screw
75	90-0048-0000	1	Cap
77	90-0020-0000	2	Cap
79	90-0188-0000	1	Stopper
81	90-0259-0000	1	Pedal Arm
86	90-0297-0000	2	Nut
89	90-0269-0000	1	Connector
92	90-0267-0000	1	Shield
93	90-0294-0000	2	Roller
94	90-0290-0000	1	Socket Assembly
94a	90-0291-0000	1	Socket
94b	90-0292-0000	3	Terminal
95	90-0278-0000	2	Cable
96	90-0279-0000	1	Cable
97	90-0280-0000	1	Cable
98	90-0281-0000	1	Cable

SCHEMATICS - PARTS LISTS

PFMW14 IDLE SIDE HOUSING

No.	Part No.	Qty	Description
99	90-0282-0000	1	Cable
100	90-0260-0000	1	Pedal Spring
105	90-0390-0000	3	Bumper Sleeve
106	90-0396-0000	1	Screw M4 x 8
129	90-0265-0000	1	Switch Lever
131	90-0262-0000	1	Top Insulation
132	90-0263-0000	1	Bottom Insulation
133	90-0295-0000	1	Nut
188	90-0397-0000	3	Tie Rod Sleeve
212	90-0392-0000	1	Stub Axle
242	33864	1	Wire Clamp
248	33865	1	Cable Assembly
252	33866	2	Switch 21A
313	90-0536-0000	1	Electrical Box Assembly
V3	90-0056-0000	1	Circuit Breaker 10A
V5	552580172	1	Housing
V8	552580180	1	Cover

PFMW14 LEVER and GUIDE MECHANISM



SCHEMATICS - PARTS LISTS


PFMW14 LEVER and GUIDE MECHANISM

No.	Part No.	Qty	Description
4	90-0046-0000	2	Screw M4 x 12
26	90-0151-0000	5	Clevis Pin
29	90-0153-0000	1	Clevis Pin
41	90-0159-0000	1	Link
45	90-0162-0000	8	Shield
47	90-0163-0000	2	Lever
64	90-0177-0000	4	Lever Button
76	90-0051-0000	6	Circlip
78	90-0186-0000	1	Guide Link
82	90-0284-0000	1	Spring
91	90-0257-0000	1	Bushing
113	90-0196-0000	4	Wheel
118	90-0068-0000	1	Lever Assembly
118a	90-0173-0000	1	Lever
119	90-0069-0000	2	Lever Assembly
119a	90-0174-0000	2	Lever
120	90-0070-0000	1	Lever Assembly
120a	90-0175-0000	1	Lever
128	90-0266-0000	1	Lever Switch

SCHEMATICS - PARTS LISTS

PFMW14 PUMP HOUSING

PUMP HOUSING

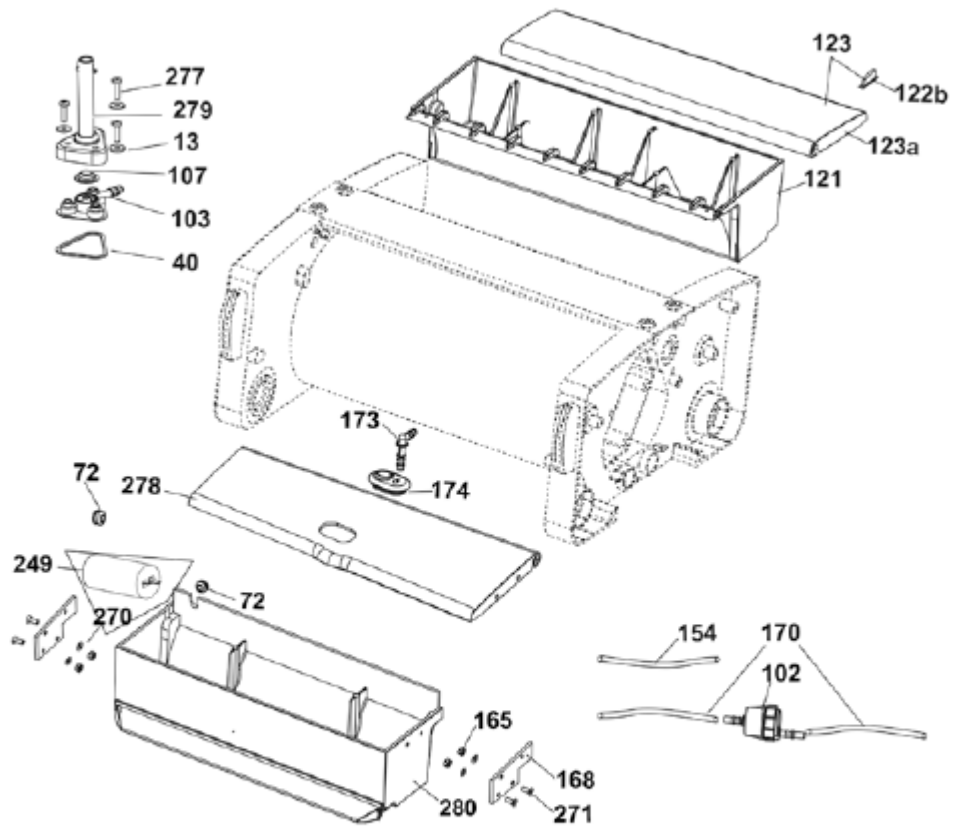

SCHEMATICS - PARTS LISTS

PFMW14 PUMP HOUSING

No.	Part No.	Qty	Description
13	90-0007-0000	3	Washer
40	90-0023-0000	1	Gasket
72	90-0045-0000	1	Gromet
102	90-0113-0000	1	Filter
103	90-0192-0000	1	Valve Body
107	90-0224-0000	1	Seal
121	90-0072-0000	1	Dirty Water Tank
122b	90-0055-0000	2	Lid Pad
123	90-0075-0000	1	Dirty Water Tank Lid Assembly
123a	90-0184-0000	1	Dirty Water Tank Lid
154	90-0104-0000	1	Hose
165	90-0141-0000	4	Nut
168	90-0349-0000	2	Lid Strip
170	90-0403-0000	2	Hose
173	90-0404-0000	1	Hose Connector
174	90-0405-0000	1	Lid Boot
249	33879	1	Capacitor 63.5 mfd
270	33874	4	Washer
271	33875	4	Screw M4 x 15
277	818106	3	Screw M4 x 16
278	90-0074-0000	1	Lid
279	552530028	1	Valve Cap
280	90-0077-0000		Housing Assembly

PFMW14 HANDLE ASSEMBLY



SCHEMATICS - PARTS LISTS

PFMW14 HANDLE ASSEMBLY

No.	Part No.	Qty	Description
3	90-0002-0000	1	Screw M4 x 8
4	90-0046-0000	10	Screw M4 x 12
11	90-0005-0000	2	Screw M6 x 20
12	90-0006-0000	4	Washer
23	90-0010-0000	1	Cable Restraint
35	90-0018-0000	1	Clamp
44	90-0026-0000	1	Pull Handle
48	90-0165-0000	1	Cap
52	90-0168-0000	2	Cable Holder Base
57	90-0032-0000	1	Clamp
60	90-0038-0000	1	Nut
65	90-0041-0000	6	Spring
66	90-0042-0000	6	Washer
71	90-0044-0000	2	Plug
73	90-0183-0000	10	Self Tapping Screw
104	552580183	1	Pull Cable
117	90-0067-0000	1	Top Handle
126	90-0296-0000	2	Knob
135	90-0235-0000	1	Bottom Handle
152	90-0101-0000	1	Gasket
153	90-0103-0000	1	Tank
160	90-0110-0000	1	Base Valve Assembly
160a	90-0202-0000	1	Base Use 90-0110-0000
160b	90-0206-0000	1	Seal Use 90-0110-0000
160c	90-0210-0000	1	Valve Cap Use 90-0110-0000


SCHEMATICS - PARTS LISTS

PFMW14 HANDLE ASSEMBLY

No.	Part No.	Qty	Description
161	90-0111-0000	1	Valve Complete (161a-161d)
161a	90-0203-0000	1	Valve Body
161b	90-0341-0000	1	Seal
161c	90-0229-0000	1	Spring
161d	90-0204-0000	1	Spring Cap
172	90-0412-0000	1	Plate
179	90-0092-0000	1	Nut
189	33881	1	Sleeve
224	90-0402-0000	2	Cable Holder Knob II
225	90-0429-0000	2	Cable Holder Knob I
226	90-0443-0000	1	Tank Holdedre Knob-LH
227	90-0444-0000	1	Tank Holder Knob-RH
228	90-0445-0000	2	Cable and Tank Holder Base
229	33882	2	Guide
230	90-0451-0000	1	Pipe-LH
231	90-0452-0000	1	Pipe-RH
V4	33883	1	Yellow Power Cord 40'

SCHEMATICS - PARTS LISTS

PFMW14 MOTOR, DRUM, and BRIDGE ASSEMBLY

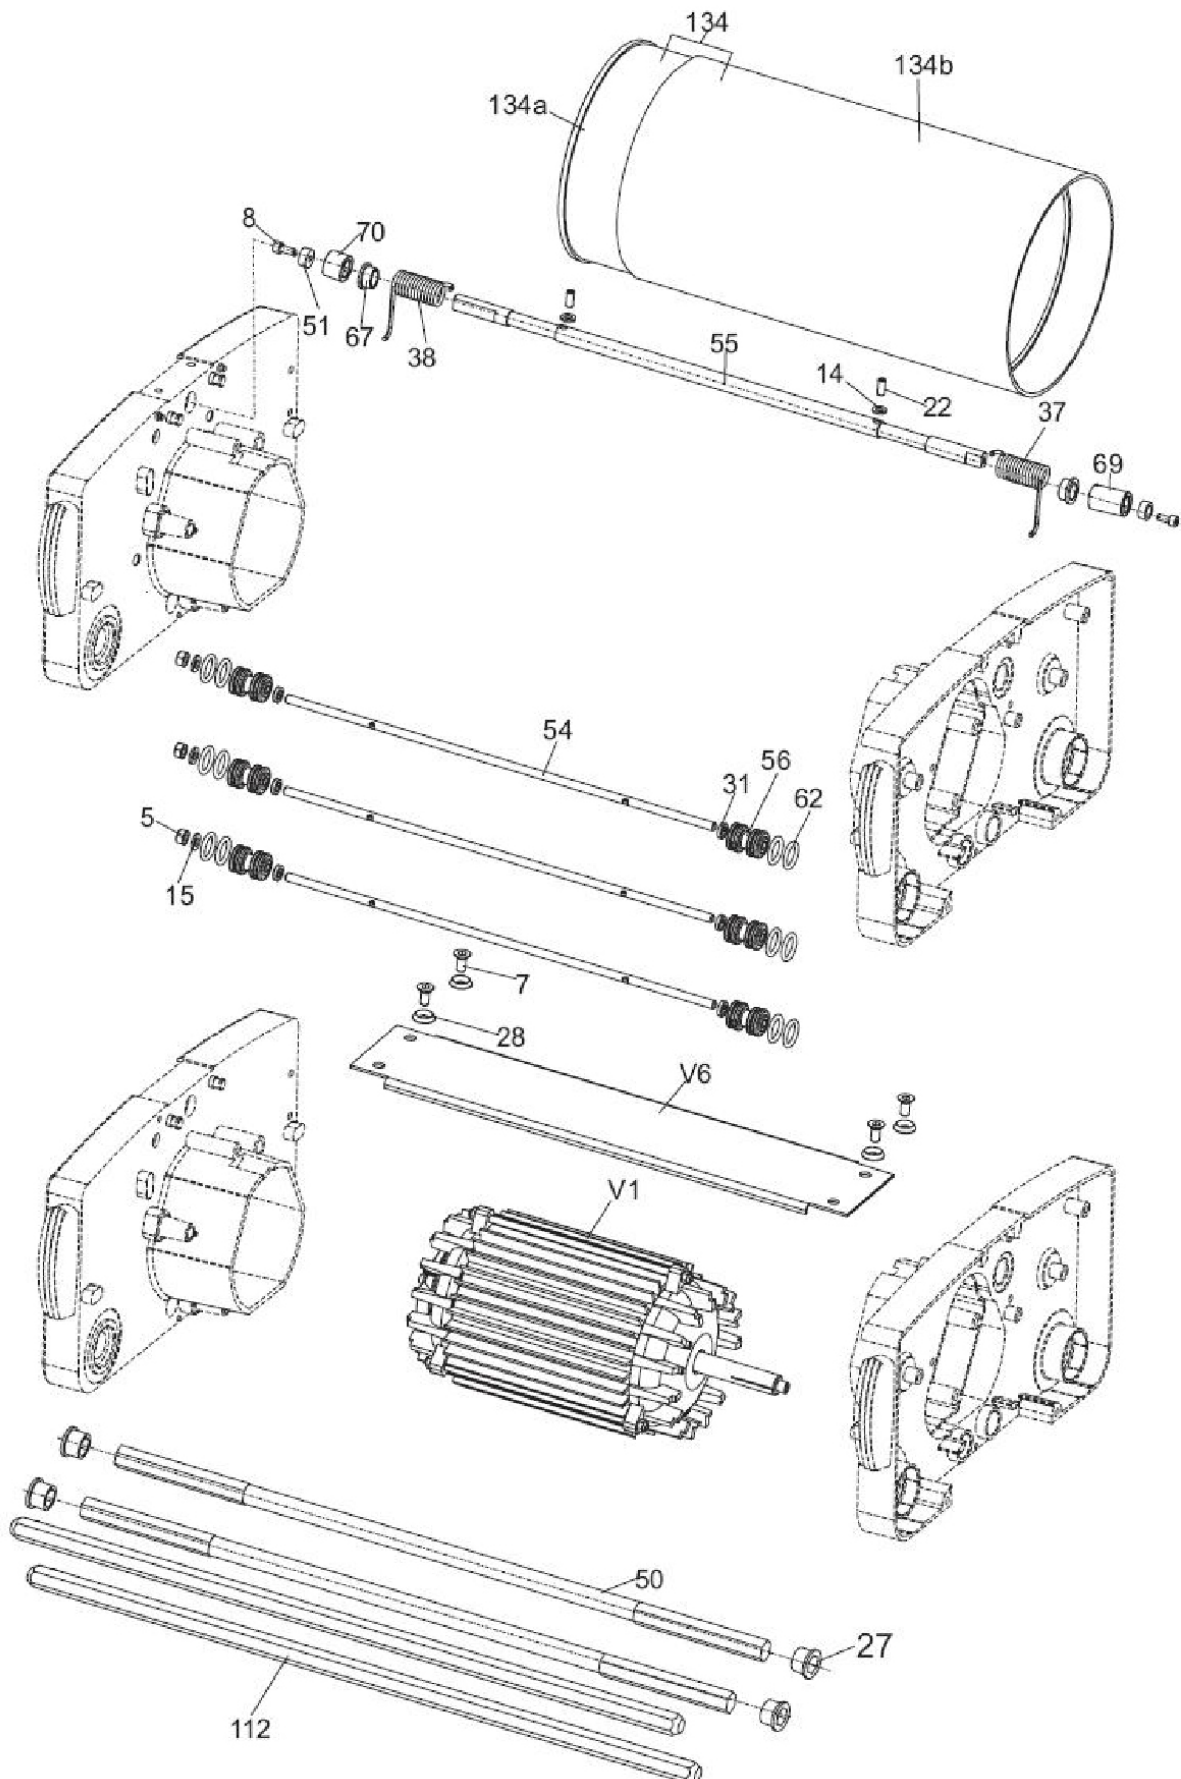


SCHEMATICS - PARTS LISTS

PFMW14 MOTOR, DRUM, and BRIDGE ASSEMBLY

No.	Part No.	Qty	Description
5	90-0142-0000	3	Nut
7	90-0143-0000	4	Screw M6 x 14
8	90-0004-0000	2	Screw M4 x 10
14	90-0146-0000	2	Washer
15	90-0147-0000	3	Washer
22	90-0150-0000	2	Screw 5 x 12
27	90-0015-0000	4	Bushing
28	90-0152-0000	4	Washer
31	90-0017-0000	6	Washer
38	90-0157-0000	1	Spring
50	90-0167-0000	2	Hex Shaft
51	90-0030-0000	2	Washer
54	90-0170-0000	3	Tie Rod
55	90-0171-0000	1	Shaft
56	90-0172-0000	6	Roller
62	90-0176-0000	12	O-Ring
67	90-0178-0000	2	Bushing
69	90-0180-0000	1	Bushing
70	90-0181-0000	1	Bushing
112	90-0062-0000	2	Brush Shaft
134	90-0306-0000	1	Drum Assembly
134a	90-0306-0000	1	Drum
134b	90-0304-0000	1	Drum Sleeve
V1	90-0193-0000	1	Motor (110V/60Hz)
V6	33885	1	Black Bridge Assembly

SCHEMATICS - PARTS LISTS

PFMW14 ACCESSORIES

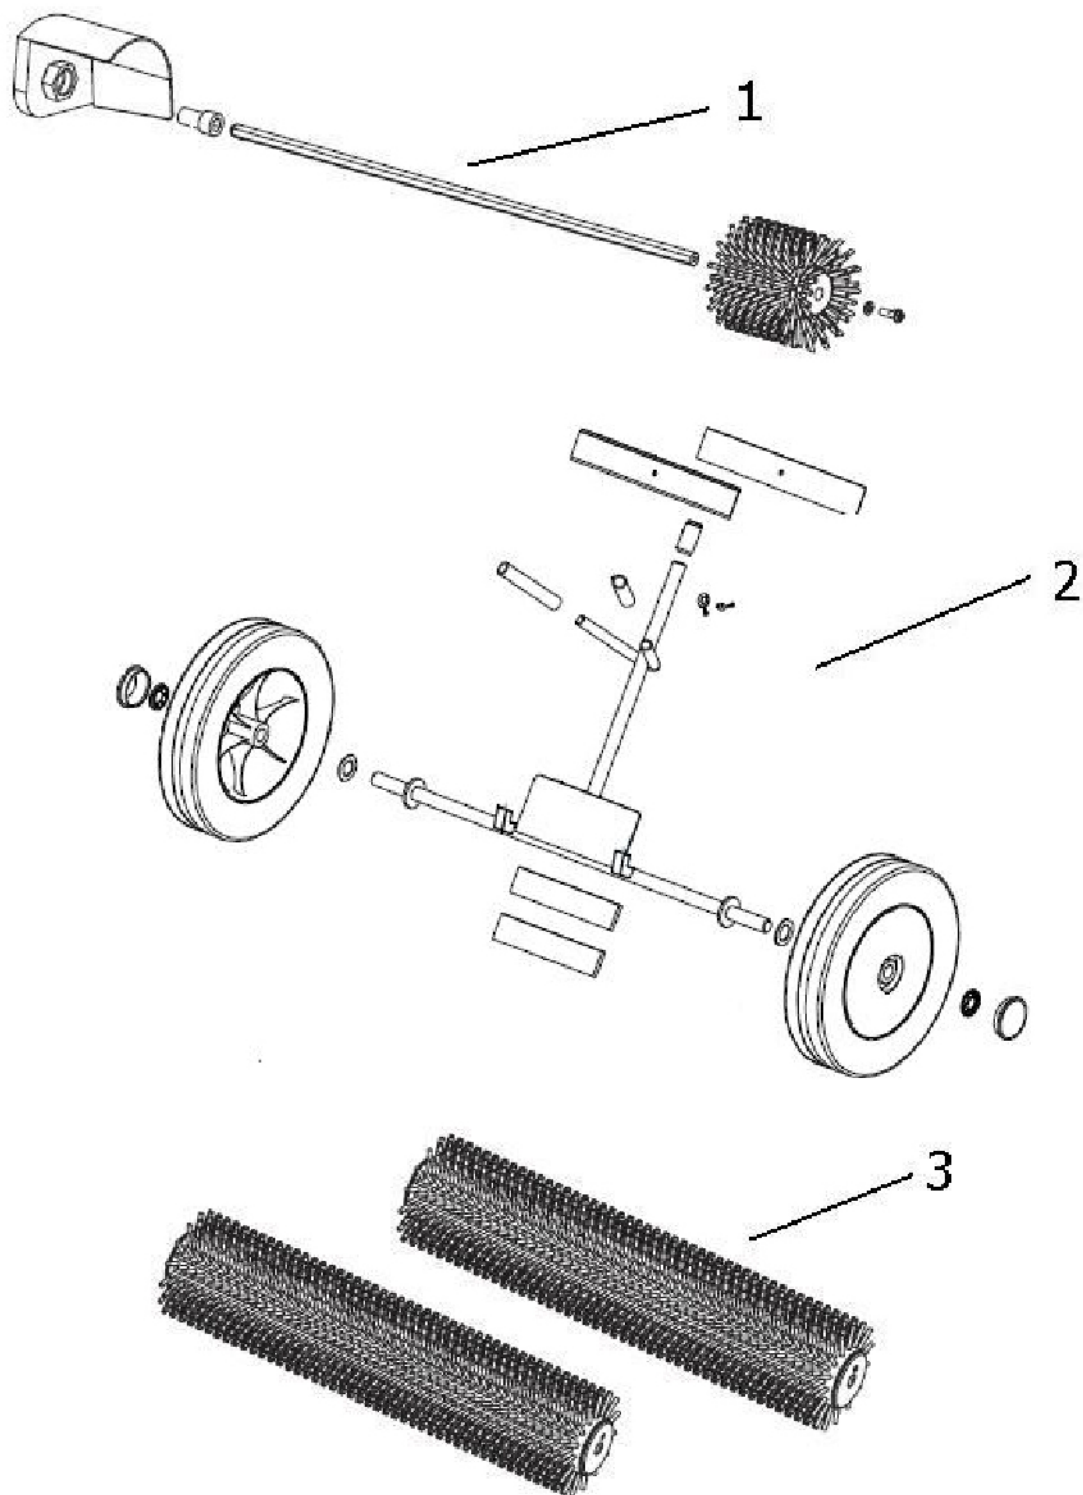

SCHEMATICS - PARTS LISTS

PFMW14 ACCESSORIES

No.	Part No.	Qty	Description
1	PFMWSB	1	Black Side Brush
2	05-3395-0500	1	Transport Cart
3	PFMWSD	1	Black Standard Brush
	PFMWSF	AR	Grey Soft Brush
	PFMWHBD	AR	Blue Hard Brush
	PFMWEB	AR	Blue Escalator Brush

For warranty information go to www.Powr-Flite.com

Powr-Flite®

A Tacony Company

3101 Wichita Court • Fort Worth, TX 76140-1755

1-800-880-2913 • Fax: 1-817-551-0719