



# Portable Griddle Use and Care Instructions

## Before Using Your Griddle for the First Time

- The portable griddle has been coated with a protective, food-grade preservative, which can collect dust and debris.
- Thoroughly wash with hot water and dish detergent prior to using the griddle for the first time to remove the coating and debris.

## “Curing” Your Griddle

- After thoroughly washing the griddle, lightly coat the cooking surface with cooking oil and heat the griddle until the oil begins to smoke.
- Turn off the burners.
- Allow the griddle to cool, then wipe down the cooking surface. It is now cured and conditioned for use.

## Heating Your Griddle

- The griddle must be placed evenly over the correct number of burners.
  - Two burners are required for the following item numbers:
    - 247PG1423
    - 247PG1022FH
  - Four burners are required for the following item numbers:
    - 247PG2323
    - 247PG2222FH
- Make sure to adjust and maintain the flame for each burner equally, to ensure an even heating surface.
- For best results, the griddle should be preheated slowly and evenly prior to cooking.

## Cleaning and Storing Your Griddle

- Allow the griddle to cool completely before submerging it in water. Submerging a very hot griddle in water may cause the cooking surface to warp.
- The griddle can be cleaned using dish detergent with a scouring pad, scraper or stiff brush, or by putting it in the dishwasher. Note: avoid using abrasive cleaners as they may damage the cooking surface.
- Use a towel to dry the griddle immediately after rinsing and apply a light coat of cooking oil before storing to protect the griddle's finish.

*Failure to follow these heating and cleaning instructions will result in a warped griddle.*

**NOTE:** This griddle is not designed for use on electric equipment.