



ASSEMBLY INSTRUCTIONS – EASY CLEAN LINER

BEFORE STARTING: REMOVE THE SPEED GRILL FROM THE EQUIPMENT.

1- WITH THE EQUIPMENT DOOR OPEN, POSITION THE EASY CLEAN LINER IN FRONT OF THE OVEN CAVITY.

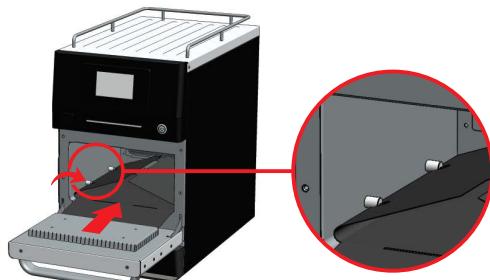

2- FOLD SIZE FLAPS AND FIT THE EASY CLEAN LINER INTO THE EQUIPMENT AND THEN SIDE GUIDES AS SHOWN.

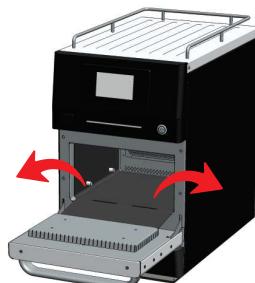

3- FULLY OPEN THE EASY CLEAN LINER FLAPS, ADJUSTING IT UNTIL IT IS PROPERLY SEATED.



4- REINSTALL THE SPEED GRILL IN THE EQUIPMENT TO COMPLETE THE ASSEMBLY.



CLEANING INSTRUCTION

CLEAN WITH A NON-ABRASIVE SPONGE AND NEUTRAL DETERGENT, RINSE UNDER RUNNING WATER, DRY WITH A SOFT CLOTH, AND DO NOT USE A DISHWASHER.