



## COLOUR LED COASTER

QUICK START GUIDE

### HOW TO USE

There is 1 button on the underside of the coaster which controls all functions

**ON**

To turn on  
hold for 3  
seconds



**OFF**

To turn off  
hold for 3  
seconds

Subsequent presses of the button will change the colour.



USB-C Charging cable included.

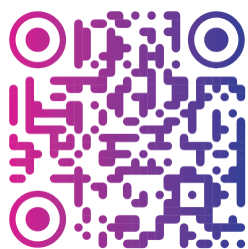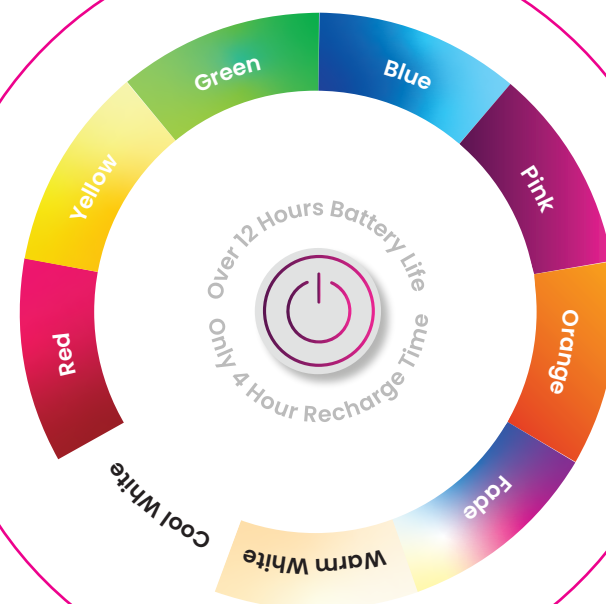

[www.flavourblaster.com](http://www.flavourblaster.com)

### DRINKS CLOCHE



Use with the Flavour Blaster Cloche

### TREASURE CHEST



Use with the Flavour Blaster Treasure Chest