

Acrylic Portable Dance Floor

Cleaning and Maintenance Instructions

- Acrylic white dance floor panels are made of 100% acrylic sheet.
- The regular cleaning of your dance floor panels is important to the overall life of your floor.
- Panels should be cleaned regularly with a dry mop. Any materials that might potentially stain the panel should be removed immediately. To remove dust, it is better to use a dry mop instead of a vacuum.
- Do not use any cleaner with ammonia.
- Prior to the mopping, the floor should be swept clean with a soft push broom.
- Wash acrylic sheet with a solution of mild soap or detergent and lukewarm water. Use a **clean** soft cloth, applying only light pressure.
- Rinse with **clean** water and dry by blotting with a damp cloth or chamois.
- Grease, oil or tar may be removed with a good grade of hexane, aliphatic naphtha, or kerosene. These solvents may be obtained at a paint or hardware store and should be used in accordance with manufacturer's recommendations.
- DO NOT USE: window **cleaning** sprays, kitchen scouring compounds or solvents such as acetone, gasoline, benzene, alcohol, carbon tetrachloride, or lacquer thinner. These can scratch the sheet's surface and/or weaken the sheet causing small surface cracks called "crazing."